


## Quick Start Guide

### Important!


Connect the charging adaptor to the G2 and charge for 4 hours before first use.

Press and hold the power button  on the top of the unit for two seconds to turn it on.

G2 Front view

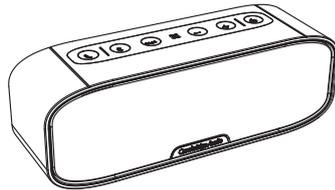

G2 Rear view

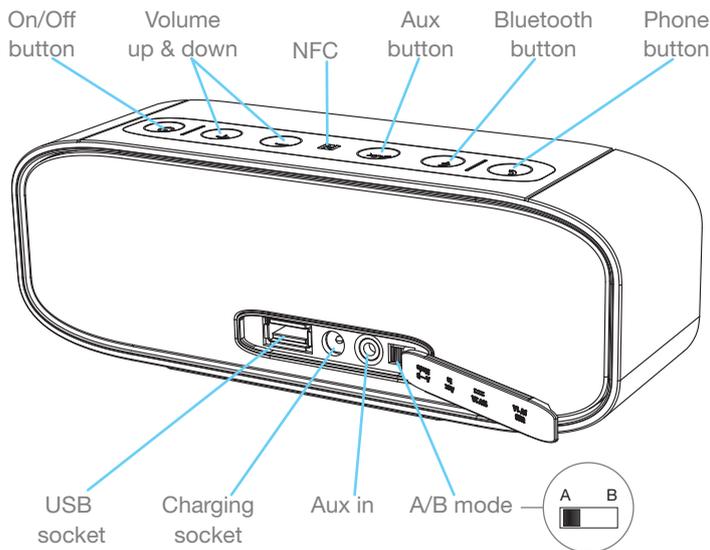

### Bluetooth set-up

Press the BT button  to select the Bluetooth input.

### Pairing your device manually

Press the BT button  to enter Bluetooth pairing mode. The flashing blue LED  indicates pairing mode.

Enable Bluetooth connectivity on your Bluetooth device (eg. phone, tablet etc) and pair with the G2 (you may need to consult your phone or tablet operating instructions).

### If your Bluetooth device is NFC enabled

You may need to ensure Bluetooth is enabled on your device. Touch your NFC device against the logo . G2 will enter automatic pairing mode and 'G2' should appear on your device.

### Pairing a second device

To pair a different device, press the BT button  a second time to enter pairing mode and pair your Bluetooth device as described in the Bluetooth instructions.

### Aux input

Press the **aux** button to select the Aux input. There is an Aux input on the rear of the unit that allows any analogue device to be connected.

### Speakerphone

G2 has a built in microphone and can be used to answer and make phone calls from your connected device. If you have an incoming call the 'phone' button  will flash and you can choose to answer with G2 by pressing the button. If you make a call from a connected device, G2 will automatically switch to speakerphone mode.

### Sync two G2

It is possible to synchronise two G2 speakers together so that both will play back your music simultaneously. Using the mode switch on the rear of G2, select 'A' on one and 'B' on the other and then double press the BT button  on each G2.

### TOP TIPS

#### Auto power down

To save power, your G2 will automatically turn off after 30 minutes if no music is playing. Press the power button to turn the G2 back on.

#### Low battery warning

A flashing red LED  indicates that the battery is too low and the G2 will enter a standby mode where no music can be played. This LED will continue flashing for 10 minutes after which the G2 will turn off.

#### USB Charging

The G2 can be used to charge compatible mobile devices. If the charging adaptor is not connected this will discharge the battery.

### ! Battery Safety

Your G2 contains a high performance battery and charging system that is designed to work in temperatures that do not exceed 50°C (122°F). Leaving this product in an automobile where temperatures may exceed this limit may result in permanent battery damage, fire or explosion. Do not leave your product in any location where temperatures may exceed this limit. Please recharge the battery every two months to maintain the battery in optimal condition.

To talk to us, call +44 (0)203 514 1521 (UK Local)  
or 1-877-357-8204 (USA)

*Cambridge Audio*