

User Guide

AV Receiver
AVENTAGE
RX-A2A



BEFORE USING THE UNIT	9
Read me first	9
How to use this guide	
Glossary	10
Checking the accessories	11
Checking the accessories	
Using the remote control	13
Insert the batteries in the remote control	
Operating range of the remote control	14
FEATURES	15
What you can do with the unit	15
Useful applications	22
AV SETUP GUIDE	22
MusicCast CONTROLLER	23
PART NAMES AND FUNCTIONS	24
Unit body	24
Part names and functions of the front panel	24
Front display	26
Part names and functions of the rear panel	
Remote control	33
Part names and functions of the remote control	33
PREPARATIONS	36
Before starting	
Names and functions of speakers	36
Flow of preparations	38
How to place speakers (speaker systems)	40
Speaker systems recommended to the unit (basic setup)	
Other speaker systems (basic setup)	
Speaker systems using the unit's internal amplifier (advanced setup)	57

Connecting speakers	64
Speaker requirements	64
Cable requirements	65
How to connect speakers	66
Connecting a TV	69
HDMI connection with a TV	69
Connecting playback devices	71
HDMI connection with a video device such as a BD/DVD player	
Connection other than HDMI with a playback device	72
Connecting the radio antennas	73
Connecting the FM antenna	
Connecting the AM antenna	74
Connecting the DAB/FM antenna	76
Preparing for connecting to a network	77
Network connection of the unit	
Connecting a network cable (wired connection)	78
Preparing wireless antennas (wireless connection)	79
Connecting other devices	80
Connecting an external power amplifier	80
Connecting a device compatible with the trigger function	81
Operating the unit from another room (remote connection)	82
Turning on the power of the unit	84
Plugging in the power cable	84
Setting the power to on/standby (Main zone)	85
Selecting the menu language	86
Selecting the menu language	86
Setting MusicCast	87
What is MusicCast	
Using MusicCast CONTROLLER	88
Adding the unit to the MusicCast network	89
Using the MusicCast Surround function	90
Configuring wireless speakers	
Configuring the speaker settings	92
Flow of the speaker configurations	
Assigning speaker configuration	
Optional measurement of YPAO	
Configuring the speaker settings automatically based on the YPAO measurement results	
Error messages from YPAO	101
Warning messages from YPAO	102

ENJOYING SOUND	103
Enjoying sound field effects	103
Selecting your favorite sound mode	103
Enjoying 3-dimentional sound fields	104
Enjoying sound field effects optimized for the type of content	105
Enjoying sound field effects without surround speakers (Virtual CINEMA DSP)	107
Enjoying surround sound with 5 speakers placed in front (Virtual CINEMA FRONT)	108
Enjoying surround sound with headphones (SILENT CINEMA)	109
Enjoying unprocessed playback	110
Enjoying original sound (straight decode)	110
Enjoying multichannel playback without sound field effects (surround decoder)	111
Enjoying higher quality playback (Pure Direct)	112
Enjoying 3-dimensional sound	113
Enjoying Dolby Atmos® and DTS:X™	113
Enjoying favorite sound	114
Enjoying more powerful sound to the audio source (Compressed Music Enhancer)	114
Enhancing the low-frequency range from the subwoofer	115
Enjoying powerful sound at low volume	116
Making easy to hear the dialogue sounds	117
Enjoying bass sound with small speakers (Extra Bass)	118
Enjoying sound better	119
PLAYBACK	120
Basic playback procedure	120
Basic procedure for playing back video and music	
Item names and functions of the playback screen	
Item names and functions of the browse screen	122
Playing back TV audio	124
Playback of TV audio with eARC/ARC	
Playback of TV audio with a digital optical cable	125
Listening to the radio	126
Preparing to listen to the radio	126
Listening to the radio	129
Displaying the Radio Data System information	130
Displaying the DAB information	131
Registering a radio station manually	132
Registering FM radio stations automatically (Auto Preset)	
Clearing preset stations	134

Playing back music with the Bluetooth connection	135
Playback of Bluetooth® device music on the unit	135
Playback of music using Bluetooth® speakers/headphones	136
Playing back music with AirPlay	137
Playback of music with AirPlay	137
Playing back music stored on a USB flash drive	138
Playback of USB flash drive content	138
Playing back music stored on media servers (PCs/NAS)	140
Playback of music media servers (PCs/NAS)	140
Listening to Internet radio	141
Selecting an Internet radio station	
Listening to music streaming services	142
Listening to a music streaming service	
USEFUL FUNCTIONS	143
Sleep timer function	143
Setting the time of the sleep timer	143
SCENE function	144
Selecting the input source and favorite settings with one touch (SCENE)	144
Selecting a registered scene	145
Registering a scene	147
Shortcut function	148
Registering a favorite content as shortcut	
Recalling a registered content as shortcut	149
ENJOYING IN MULTIPLE ROOMS (ZONES)	150
Preparing zones	150
Playback in multiple rooms (multi zone function)	150
Multi-zone configuration examples	151
Connecting zone speakers	152
Operating zones	154
Turning on/off the power of zones	154
Basic procedure in zone	
Other procedure in zone	
Enjoying the same source in multiple rooms (party mode)	157

Configuring the unit's settings by operation of the body from the body f	= :
Basic operation of the Front Display menu	283
Front Display menu items	
Adjusting the brightness of the front display	
Setting the power of each zone to on/standby	
Setting the use of the volume on the front panel	287
Setting the use of the input selector on the front panel	288
Setting the use of the scene key on the front panel	289
Setting the use of the operation sound	290
Setting the use of the remote control	291
Selecting the remote control ID	292
Setting information items to be skipped when operating SELECT/ENTER	293
Restoring the default settings	294
Backing up and restoring all the settings	295
Updating the firmware	297
Setting the use of Retail Demo Mode	298
UPDATE	299
Updating the unit's firmware	299
Firmware updates	299
Updating the unit's firmware via the network	
Updating the unit's firmware using a USB flash drive	
TROUBLESHOOTING	303
When any problem appears	303
If trouble occurs, first check the following:	
,	303
Power, system, or remote control trouble	
	304
Power, system, or remote control trouble Audio trouble Video trouble	
Audio trouble	
Audio trouble Video trouble FM/AM radio trouble	
Audio trouble	304 314 325 329 334
Audio trouble Video trouble FM/AM radio trouble DAB radio trouble	304 314 325 329 334 339
Audio trouble Video trouble FM/AM radio trouble DAB radio trouble USB trouble	304 314 325 329 334 339
Audio trouble Video trouble FM/AM radio trouble DAB radio trouble USB trouble Network trouble	304 314 325 329 339 339 343 354

APPENDIX	
Care and cleaning	357
Care for the front panel	357
Connecting to a network wirelessly	358
Selecting a wireless network connection method	358
Setting up a wireless connection using the WPS button	
Setting up a wireless connection using an iPhone	360
Setting up a wireless connection by selecting from the list of available access points	361
Setting up a wireless connection manually	362
Setting up a wireless connection using the WPS PIN code	363
Using front presence speakers	364
Front presence speaker layout	364
Installing the front presence speakers in Front Height position	365
Installing the front presence speakers in Overhead position	366
Using Dolby Enabled speakers as the front presence speakers	367
Supported devices and file formats	368
Supported Bluetooth® devices	368
Supported USB devices	369
Supported file formats	370
Zone output	371
Multi-zone output	371
Trademarks	372
Trademarks	372
Specifications	374
Specifications	374
Default settings	381
Default settings of the Option menu	
Default settings of the Setup menu	
Default settings of the Front Display menu	

BEFORE USING THE UNIT

Read me first

How to use this guide

Thank you very much for purchasing a Yamaha product.

- This unit is a product for enjoying video and music at home.
- This guide explains preparations and operations for everyday users of the unit.
- To use the unit safely and correctly, be sure to read this guide carefully before using it.

When reading this guide, mind the following items.

- The illustrations of the main unit used in this guide are of the U.S.A. model, unless otherwise specified.
- This guide mainly explains operations using the menu displayed on the TV.
- This guide explains operations using the supplied remote control.
- This guide describes all the "iPod touch", "iPhone" and "iPad" as the "iPhone". "iPhone" refers to "iPod touch", "iPhone" and "iPad", unless otherwise specified.
- · Symbols and signal words in this guide



Indicates precautions for the possibility of minor or moderate injury.

NOTICE:

Indicates precautions for use to avoid the possibility of malfunction/damage to the unit and unit's data loss.

NOTE:

Indicates instructions and supplementary explanations for optimum use.

[Search tag]:

Indicates a keyword used in searches. This serves as a link from "Quick Start Guide" to "User Guide".

NOTE

Read "Safety Brochure" and "Quick Start Guide" first.

Glossary

For a glossary of terms used in this guide, refer to the site below. There are explanations of terms and technologies for this product and also for Yamaha AV products in general.

https://manual.yamaha.com/av/cm/glossary/

Checking the accessories

Checking the accessories

Check that the following accessories are supplied with the product.

☐ AM antenna (Except for U.K., Europe, Russia and Australia models)



☐ FM antenna (Except for U.K., Europe, Russia and Australia models)



- $^{\star}\,$ One of the above is supplied depending on the region of purchase.
- ☐ DAB/FM antenna (U.K., Europe, Russia and Australia models)



 \square Power cable



- * The supplied power cable varies depending on the region of purchase.
- ☐ YPAO microphone



- \square Remote control
- ☐ Batteries (AAA, R03, UM-4) (x2)
- ☐ Quick Start Guide
- ☐ Safety Brochure

BEFORE USING THE UNIT > Checking the accessories

NOTE

Access the Yamaha Downloads site to download the latest Quick Start Guide. http://download.yamaha.com/

Using the remote control

Insert the batteries in the remote control


Insert the batteries the right way round.



Operating range of the remote control

The operating range of the remote control is shown in the following figure.

Point the remote control at the remote control sensor on the unit.

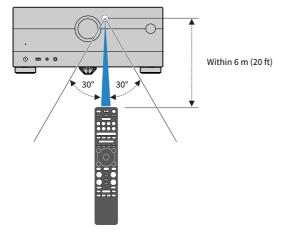

FEATURES

What you can do with the unit

Supporting various speaker system

According to the number of speakers that you are using, you can enjoy your favorite acoustic spaces in various styles.

- 7.1/5.1.2-channel system
- 5.1.2-channel system
- 7.1-channel system
- · 5.1-channel system
- · 3.1.2-channel system
- · 3.1-channel system
- 2.1-channel system
- Virtual CINEMA FRONT
- · Multi zone function
- · Bi-amp connection

Related links

- "Speaker systems recommended to the unit (basic setup)" (p.40)
- "Other speaker systems (basic setup)" (p.42)
- "Speaker systems using the unit's internal amplifier (advanced setup)" (p.57)

Automatically optimizing the speaker settings

YPAO function detects speaker connections, measures the distances from them to your listening positions (measuring positions) by using YPAO microphone measurement, and then automatically optimizes the speaker settings, such as volume balance and acoustic parameters, to suit your room (YPAO: Yamaha Parametric room Acoustic Optimizer).

• "Flow of the speaker configurations" (p.92)

Enjoying sound field effects with much presence

The unit is equipped with a variety of sound programs and surround decoders that allow you to enjoy playback sources with your favorite sound mode (such as sound field effect or stereo playback).

- "Enjoying 3-dimentional sound fields" (p.104)
- "Enjoying sound field effects optimized for the type of content" (p.105)
- "Enjoying sound field effects without surround speakers (Virtual CINEMA DSP)" (p.107)
- "Enjoying surround sound with headphones (SILENT CINEMA)" (p.109)
- "Enjoying original sound (straight decode)" (p.110)
- "Enjoying multichannel playback without sound field effects (surround decoder)" (p.111)
- "Enjoying higher quality playback (Pure Direct)" (p.112)
- "Enjoying bass sound with small speakers (Extra Bass)" (p.118)
- "Enjoying more powerful sound to the audio source (Compressed Music Enhancer)" (p.114)
- "Enjoying Dolby Atmos® and DTS:X™" (p.113)

Wide variety of supported content via network

When the unit is connected to a network, you can enjoy the various kinds of content via network on the unit.

- "Playback of music with AirPlay" (p.137)
- "Playback of music media servers (PCs/NAS)" (p.140)
- "Selecting an Internet radio station" (p.141)
- "Listening to a music streaming service" (p.142)

Playing back content of various devices

A number of HDMI jacks and various input/output jacks on the unit allow you to connect video devices (such as BD/DVD players), audio devices (such as CD players), Bluetooth devices (such as smartphones), game consoles, USB flash drives, and other devices. You can play back content of them or tune in to a radio station.

- "Listening to the radio" (p.129)
- "Playback of Bluetooth® device music on the unit" (p.135)
- "Playback of USB flash drive content" (p.138)

Useful functions

The unit is equipped with the various useful functions. The SCENE function allows you to select the input source and settings registered to the corresponding scene, such as sound program and Compressed Music Enhancer on/off, with just one touch. You can recall the registered content (such as music stored on media servers and Internet radio stations) by selecting the shortcut number. When the unit is connected to an HDMI Control-compatible TV with an HDMI cable, you can control the unit (such as power and volume) with TV remote control operations.

- "Selecting the input source and favorite settings with one touch (SCENE)" (p.144)
- "Registering a favorite content as shortcut" (p.148)
- "Playback of TV audio with eARC/ARC" (p.124)

Supporting wireless speakers

The unit is equipped with the function connected with speakers wirelessly. You can enjoy audio played back on the unit using Bluetooth speakers/headphones. Also, using devices that support the MusicCast Surround function, the surround speakers and subwoofer can be wireless.

- "Playback of music using Bluetooth® speakers/headphones" (p.136)
- "Configuring wireless speakers" (p.90)

Useful applications

AV SETUP GUIDE



AV SETUP GUIDE is an application that assists you with cable connections between AV Receiver and playback devices as well as AV Receiver setup. This app guides you through the various settings such as speaker connections, TV and playback device connections and selecting the speaker system.

For details, search for "AV SETUP GUIDE" on the App Store or Google Play.

MusicCast CONTROLLER



MusicCast CONTROLLER is an application that allows you to link a MusicCast compatible device to other MusicCast compatible devices in other rooms and play them back simultaneously. This applets you use your smartphone or other mobile device instead of the remote control to easily select music to play back as well as configure the unit and MusicCast compatible devices.


For details, search for "MusicCast CONTROLLER" on the App Store or Google Play.

PART NAMES AND FUNCTIONS

Unit body

Part names and functions of the front panel

The part names and functions of the front panel are as follows.

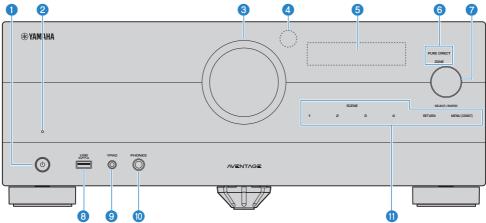

① (power)

Turns on/off (standby) the Main zone (p.85).

Standby indicator

Lights up when the unit is in standby mode under any of the following conditions.

- HDMI Control is enabled (p.203)
- Standby Through is enabled (p.205)
- Network Standby is enabled (p.274)
- Bluetooth Standby is enabled (p.279)

O VOLUME

Adjusts the volume.

4 Remote control sensor

Receives remote control signals (infrared) (p.14).

6 Front display

Displays information and menu (p.26).

NOTE

Under the high or low temperature, the visibility of the character is sometimes deteriorated by the LCD characteristics. It is not a malfunction.

6 Indicator

Lights up under the following condition.

PURE DIRECT

Lights up when PURE DIRECT is working (p.112).

ZONE

Lights up when the zone is turned on (p.154).

SELECT/ENTER

Selects the input source and operates the front display.

USB iack

For connecting a USB flash device (p.138).

9 YPAO jack

For connecting the supplied YPAO microphone (p.92).

PHONES jack

For connecting headphones.

Touch panel

For operation by a touch. The operation sound rings.

SCENE

Switches with one touch between multiple settings set using the SCENE function. Also, turns on the unit when it is in standby mode (p.144).

RETURN

Operates the "Front Display" menu.

MENU (CONNECT)

Operates the "Front Display" menu.

Enters the MusicCast network addition and the wireless LAN setup by holding down for 5 seconds.

Related links

"Care for the front panel" (p.357)

Front display

Part names and functions of the front display

The part names and functions of the front display are as follows.



Operation mode icon

Indicates the current mode of the front display (the input select mode or the info select mode).

2 Input default name

Displays the default name when you have renamed the input source name.

6 Main information

Displays information, such as the current input name, input information item, according to the mode of the front display.

4 Play status icon

Shuffle

Lights up when the shuffle setting is turned on (p.174).

Repeat

Lights up when the repeat setting is turned on (p.175).

Playback/Pause/Stop

Lights up while the unit plays back a song, pauses or stops.

5 Status icon

Wireless LAN

Lights up while the unit is connected to a wireless network (p.358).

Bluetooth

Lights up while the unit is connected to a Bluetooth device (p.135).

Sleep timer

Lights up when the sleep timer is on (p.143).

Firmware update

Lights up when a firmware update is available via the network (p.299).

PART NAMES AND FUNCTIONS > Unit body

Olume

Indicates the current volume.

SELECT/ENTER indicator

Indicates the available SELECT/ENTER status (push or rotate) for the right display area.

6 Additional information

Displays the additional information of the current input such as Reception, DSP Program.

NOTE

- Depending on the content of playback, the unit may not get its playback status correctly. For details on the playback status, refer
 to the MusicCast CONTROLLER app or your playback software.
- If the unit is the slave device of the MusicCast network, the playback status is displayed as follows, depending on the master device.
 - Playback icon is lit up on the front display of the unit when the content of audio playback is selected as the input source of the master device, and the master device pauses.
 - Playback icon is always lit up on the front display of the unit when "HDMI", "AUDIO", "PHONO", "TV" or "TUNER" is selected as the input source of the master device.

Selecting the input information displayed on the front display

The front display in the info select mode displays additional information related to the input source on the front display.



Push SELECT/ENTER on the front panel to switch the front display to the info select mode. And rotate SELECT/ENTER to select between the various items. The additional information is displayed under the item.





Displayed items vary depending on the input source.

Currently input source	Displayed item	
HDMI		
AUDIO	DCD Durana Andia Duranta Canada Character HDM Character Character	
PHONO	DSP Program, Audio Decoder, Output Channel, HDMI Status, System Status	
TV		
	Reception, DSP Program, Audio Decoder, Output Channel, HDMI Status, System Status	
TUNER (FM/AM)	(U.K., Europe and Russia models only) Radio Data System data is also available when the unit is tuned into a Radio Data System broadcasting station. For details, see the following:	
	• "Displaying the Radio Data System information" (p.130)	
TUNER (DAB)	(U.K., Europe, Russia and Australia models only) For details, see the following:	
	• "Displaying the DAB information" (p.131)	
SERVER	Song, Artist, Album, IP Address, Ethernet MAC Address, Wi-Fi MAC Address, DSP Program Audio Decoder, Output Channel, HDMI Status, System Status	
NET RADIO	Station, IP Address, Ethernet MAC Address, Wi-Fi MAC Address, DSP Program, Audio Decoder, Output Channel, HDMI Status, System Status, Song, Album	
Deezer	Track, Artist, Album, IP Address, Ethernet MAC Address, Wi-Fi MAC Address, DSP Program, Audio Decoder, Output Channel, HDMI Status, System Status	

Currently input source	Displayed item	
music streaming services (with playback information)	Song, Artist, Album, IP Address, Ethernet MAC Address, Wi-Fi MAC Address, DSP Program, Audio Decoder, Output Channel, HDMI Status, System Status	
AirPlay		
music streaming services (without playback information) Alexa MusicCast Link	DSP Program, Audio Decoder, Output Channel, HDMI Status, System Status, IP Addre Ethernet MAC Address, Wi-Fi MAC Address	
Bluetooth	Song, Artist, Album, DSP Program, Audio Decoder, Output Channel, HDMI Status, Syst Status	
USB		

NOTE

- You can set "Information Skip" in the "Front Display" menu to skip information items on the front display.
- When you have not operated SELECT/ENTER for a few seconds, the front display turns to the input select mode automatically.

Related links

"Setting information items to be skipped when operating SELECT/ENTER" (p.293)

Output Channel

Information about speaker terminals that are currently outputting sound is displayed. No output is indicated by an underscore.



■ HDMI Status

Information about the HDMI input jacks (connection) and the HDMI out jack (connection) is displayed. No connection is indicated by an underscore.



■ System Status


The following system information is displayed. An underscore is indicated when it is disabled.

- ECO: the eco mode is enabled.
- PARTY: the party mode is enabled.
- MASTER: the unit is the master device of the MusicCast network.



Part names and functions of the rear panel

The part names and functions of the rear panel are as follows.

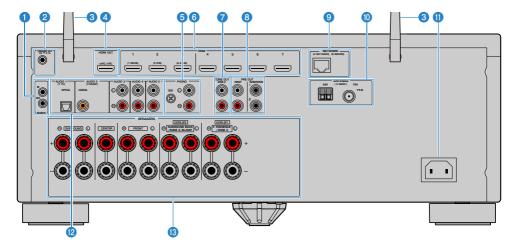

(U.S.A. model)

• The area around the video/audio output jacks is marked in white on the actual product to prevent improper connections.

REMOTE IN/OUT jacks

For connecting to an infrared signal receiver/emitter that allows you to operate the unit and other devices from another room (p.82).

2 TRIGGER OUT iack

For connecting to a device that supports the trigger function (p.81).

Wireless antennas

For a wireless (Wi-Fi) connection to a network (p.77) and a Bluetooth connection (p.135).

4 HDMI OUT jack

For connecting to HDMI-compatible TV and outputting video/audio signals (p.69). When using eARC/ARC, TV audio signals are also input.

O PHONO jacks

For connecting to a turntable (p.72).

6 HDMI 1-7 jacks

For connecting to HDMI-compatible playback devices and inputting video/audio signals (p.71).

ZONE OUT jacks

For connecting to the external amplifier used in another room (Zone2) and for outputting audio (p.153).

PART NAMES AND FUNCTIONS > Unit body

8 PRE OUT jacks

For connecting to a subwoofer with built-in amplifier (p.68) or an external power amplifier (p.80).

NETWORK jack

For a wired connection to a network (p.78).

O ANTENNA jacks

For connecting to the radio antennas (p.73).

AC IN jack

For connecting the supplied power cable (p.84).

AUDIO 1-5 jacks

For connecting to audio playback devices and inputting audio signals (p.72).


SPEAKERS terminals

For connecting to speakers (p.36).

Remote control

Part names and functions of the remote control

The part names and functions of the supplied remote control are as follows.

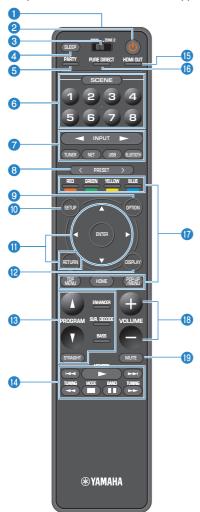

Remote control signal transmitter

Transmits remote control signals (infrared).

② (power) key

Turns on/off the zone selected by zone switch (p.154).

3 Zone switch

Changes the zone that is controlled by the remote control (p.155).

SLEEP key

Sets the time of the sleep timer (p.143).

6 PARTY kev

Turns on/off the party mode (p.157).

SCENE keys

Switches with one touch between multiple settings set using the SCENE function. Also, turn on the unit when it is in standby mode (p.144).

Input selection keys

Selects an input source for playback.

NOTE

Presses NET repeatedly to select a desired network source.

Controls playback of the HDMI Control-compatible playback device. And performs playback operations for the USB flash drive or music media server (PCs/NAS).

NOTE

The playback devices must support HDMI Control. Some HDMI Control-compatible devices cannot be used.

O PRESET keys

Selects a preset radio station (p.129).

Recalls Bluetooth, USB, or network content that is registered as a shortcut (p.149).

OPTION kev

Displays the Option menu operated on the TV (p.159).

SETUP key

Displays the Setup menu operated on the TV (p.179).

ENTER/Cursor, RETURN keys

Operates the menu on the TV.

DISPLAY kev

Turns on/off the browse screen, playback screen, etc.

Sound mode keys

Selects a sound program or a surround decoder (p.103).

Playback operation keys

Controls playback of the USB flash drive, music media server (PCs/NAS) or radio.

(B) HDMI OUT key

Turns on/off the HDMI output (p.120).

(B) PURE DIRECT key

Enables/disables the Pure Direct (p.112).

WOLUME keys

Adjusts the volume.

MUTE key


Mutes the audio output.

PREPARATIONS

Before starting

Names and functions of speakers

The names and functions of speakers connected to the unit are as follows.

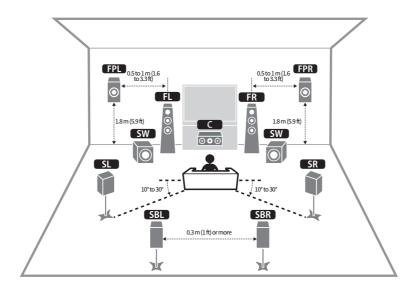

Speaker type	Abbr.	Function
Front	FL / FR	Produces front channel sounds (stereo sounds).
Center	C	Produces center channel sounds (such as movie dialogue and vocals).
Surround	SL / SR	Produces surround channel sounds.
Surround back	SBL / SBR	Produces surround back channel sounds.
Front presence	FPL / FPR	Produces CINEMA DSP 3D effect sounds or heights channel sounds of Dolby Atmos and DTS:X content.
Subwoofer	SW	Produces LFE (low-frequency effect) channel sounds and reinforces the bass parts of other channels.

NOTE

- Use this diagram as a reference for the ideal speaker layout for the unit. However, your speaker layout does not need to match the
 diagram exactly. The automatic speaker setting (YPAO) can be used to automatically optimize the speaker settings (such as
 distances) to suit the actual speaker layout.
- The unit provides three layout patterns for front presence speakers. You can choose a layout pattern that suits your listening environment. You can enjoy Dolby Atmos, DTS:X or CINEMA DSP 3D with any layout pattern.

PREPARATIONS > Before starting

- "Flow of preparations (with surround speakers connected by speaker cables)" (p.38)
- "Flow of preparations (with surround speakers wirelessly connected)" (p.39)
- "Front presence speaker layout" (p.364)

Flow of preparations

Flow of preparations (with surround speakers connected by speaker cables)

 
Basic flow of preparations for using the unit is as follows.

- 1 Place speakers.
- **2** Connect speakers.
- 3 Connect a TV.
- 4 Connect playback devices.
- 5 Connect the radio antennas.
- 6 Prepare for connecting to a network.
- 7 Set MusicCast network.
- 8 Assign speaker configuration.
- 9 Configure the speaker settings.

[&]quot;How to place speakers (speaker systems)" (p.40)

Flow of preparations (with surround speakers wirelessly connected)

Basic flow of preparations for using the unit with surround speakers wirelessly connected is as follows.



- **2** Connect speakers.
- 3 Connect a TV.
- 4 Connect playback devices.
- 5 Connect the radio antennas.
- 6 Prepare for connecting to a network.
- 7 Set MusicCast network.
- 8 Connect wireless speakers.
- 9 Assign speaker configuration.
- 10 Configure the speaker settings.

Related links

"How to place speakers (speaker systems)" (p.40)

How to place speakers (speaker systems)


Speaker systems recommended to the unit (basic setup)


This speaker system brings out the full performance of the unit.

You can enjoy a highly-natural 3-dimensional sound field with any content. We recommend this speaker system for Dolby Atmos or DTS:X content.

[Search tag]#Q01 Speaker systems

■ 7.1/5.1.2-channel system

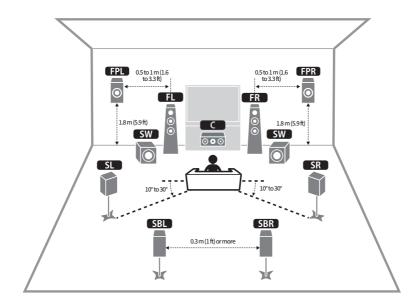

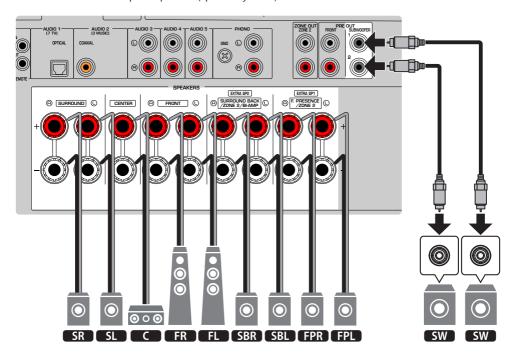

- The surround back speakers and front presence speakers do not produce sounds simultaneously. The unit automatically changes the speakers to be used, depending on the input signal and CINEMA DSP 3D.
- When installing the front presence speakers on the ceiling above the listening position, or when using Dolby Enabled speakers as the front presence speakers, the front presence speaker layout settings must be changed.
- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the same sounds.
- When using only one subwoofer, you can place it either in the left or right side.


- "Speaker requirements" (p.64)
- "Setting the layout of the front presence speakers" (p.193)

Other speaker systems (basic setup)


5.1.2-channel system


To have a full effect of Dolby Atmos or DTS:X content, we recommend this speaker system. The front presence speakers produce a natural 3-dimensional surround field including overhead. [Search tag]#Q01 Speaker systems

For layout with front presence speakers in Front Height position

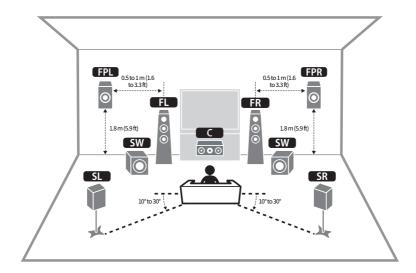

For layout with front presence speakers in Overhead position

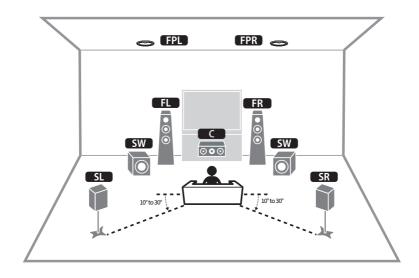

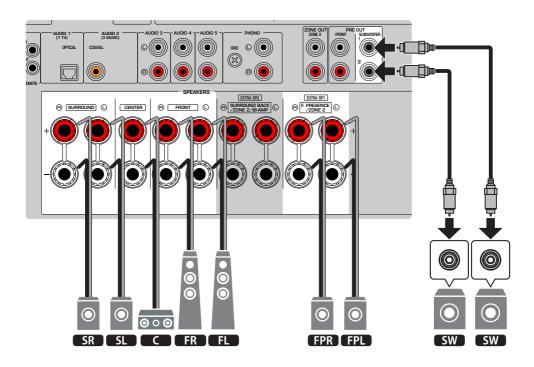

PREPARATIONS > How to place speakers (speaker systems)


NOTE


- When installing the front presence speakers on the ceiling above the listening position, or when using Dolby Enabled speakers as the front presence speakers, the front presence speaker layout settings must be changed.
- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the same sounds.
- When using only one subwoofer, you can place it either in the left or right side.

- "Speaker requirements" (p.64)
- "Setting the layout of the front presence speakers" (p.193)

7.1-channel system

This speaker system allows you to enjoy extended surround sound using the surround back speakers. [Search tag] # Q01 Speaker systems

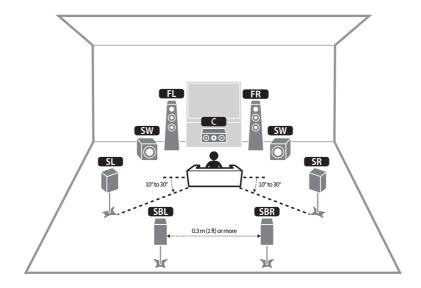

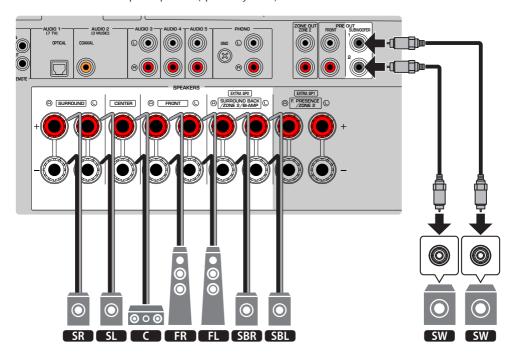


- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the
- When using only one subwoofer, you can place it either in the left or right side.


Related links

"Speaker requirements" (p.64)

5.1-channel system

This is a basic speaker layout recommended for enjoying surround sound. [Search tag] # Q01 Speaker systems

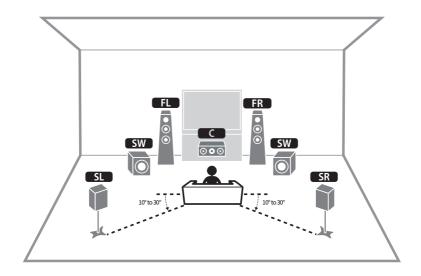

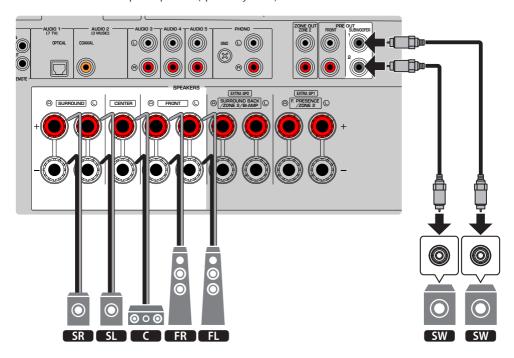

- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the
- When using only one subwoofer, you can place it either in the left or right side.


Related links


"Speaker requirements" (p.64)

3.1.2-channel system

We recommend this speaker layout when you cannot place speakers in the back of the room. You can also enjoy Dolby Atmos or DTS:X content with this speaker system.

[Search tag]#Q01 Speaker systems

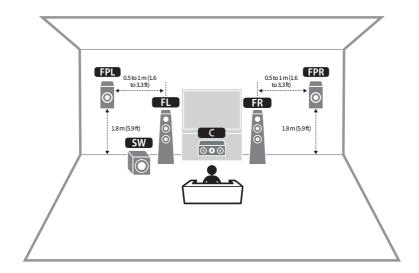

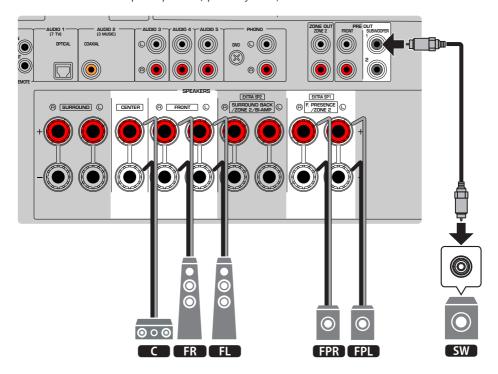


- When installing the front presence speakers to the ceiling above the listening position or using the Dolby Enabled speakers as the front presence speakers, configure your front presence speaker layout.
- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the same sounds.
- When using only one subwoofer, you can place it either in the left or right side.


- "Speaker requirements" (p.64)
- "Setting the layout of the front presence speakers" (p.193)

3.1-channel system

This is a speaker layout recommended for enjoying stereo sound with a center speaker. Center channel sound such as movie dialogue and vocals can be clearly obtained.

[Search tag]#Q01 Speaker systems

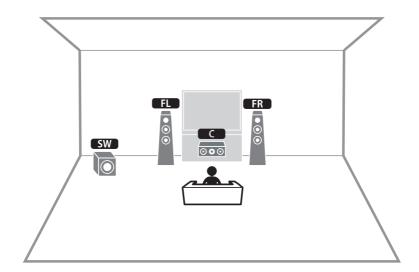

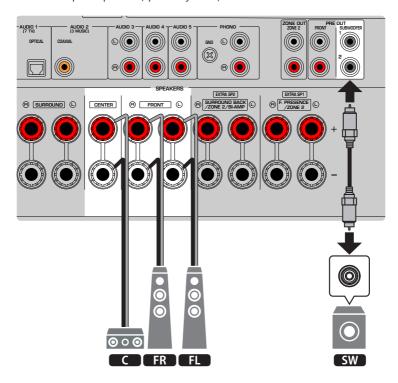

- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the same sounds
- When using only one subwoofer, you can place it either in the left or right side.


Related links


"Speaker requirements" (p.64)

2.1-channel system

This is a speaker layout recommended for enjoying stereo sound.

[Search tag]#Q01 Speaker systems

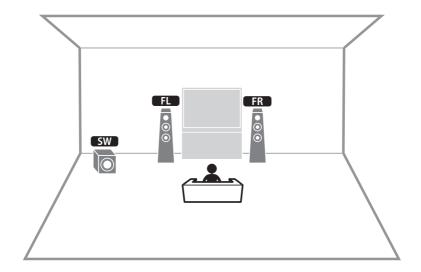

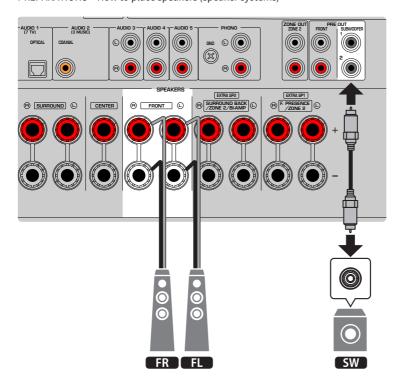


- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the same sounds.
- When using only one subwoofer, you can place it either in the left or right side.


Related links

"Speaker requirements" (p.64)

Virtual CINEMA FRONT

This speaker layout is recommended if you cannot place speakers in the back of the room. [Search tag] # Q01 Speaker systems

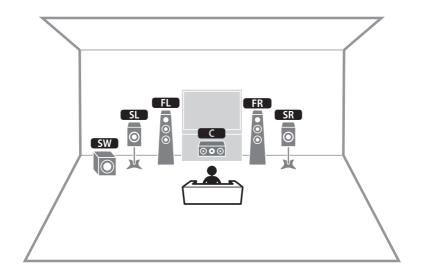

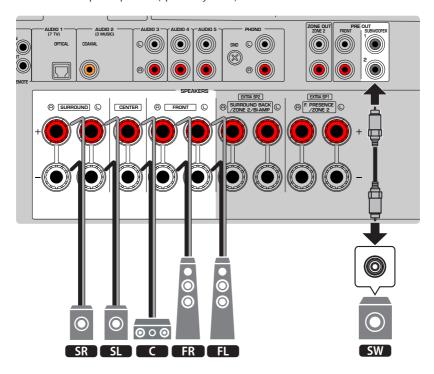

- To use Virtual CINEMA FRONT, the speaker configuration settings must be changed.
- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the same sounds.
- When using only one subwoofer, you can place it either in the left or right side.

- "Setting your speaker system" (p.190)
- "Setting the use of Virtual CINEMA FRONT" (p.197)
- "Speaker requirements" (p.64)

Speaker systems using the unit's internal amplifier (advanced setup)

List of speaker systems using the unit's internal amplifier

In addition to the basic speaker systems, the unit also allows you to apply the following speaker configurations.

To enjoy following systems, configure the necessary speaker settings in "Power Amp Assign" in the "Setup" menu.

[Search tag]#Q01 Speaker systems


Main zone					
Output channel (max)	Bi-amp	Surround back/Presence	Multi- zone	Power Amp Assign	Page
7		Surround back	+1 room	7.1 +1Zone	p.58
7		Front presence	+1 room	5.1.2 +1Zone	p.60
5	0			BI-AMP	p.62


- "Speaker requirements" (p.64)
- "Setting your speaker system" (p.190)
- "Multi-zone configuration examples" (p.151)

7.1 +1Zone

The Zone function allows you to play back an input source in the room where the unit is installed and in another room.

[Search tag]#Q01 Speaker systems

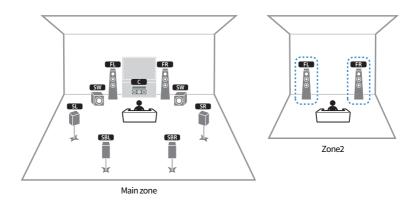

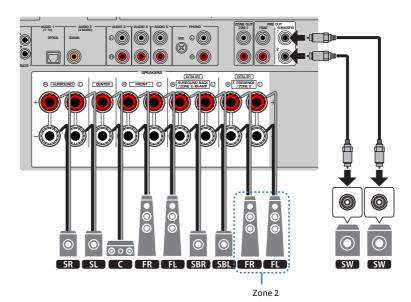

PREPARATIONS > How to place speakers (speaker systems)

NOTE


- To use the Zone speaker system, the speaker configuration settings must be changed.
- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the same sounds
- When using only one subwoofer, you can place it either in the left or right side.
- When Zone2 output is enabled, the surround back speakers in the Main zone do not output sound.


- "Speaker requirements" (p.64)
- "Setting your speaker system" (p.190)
- "Playback in multiple rooms (multi zone function)" (p.150)

5.1.2 +1Zone


The Zone function allows you to play back an input source in the room where the unit is installed and in another room.

[Search tag]#Q01 Speaker systems

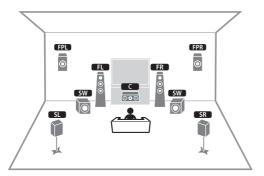

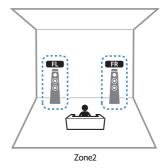

Main zone

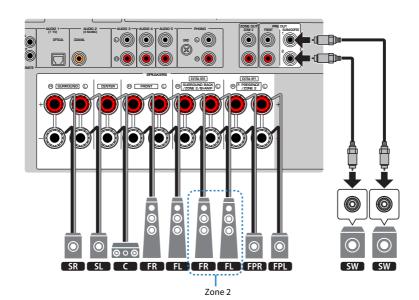

PREPARATIONS > How to place speakers (speaker systems)

NOTE

- To use the Zone speaker system, the speaker configuration settings must be changed.
- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the same sounds
- When using only one subwoofer, you can place it either in the left or right side.
- When Zone2 output is enabled, the front presence speakers in the Main zone do not output sound.


- "Speaker requirements" (p.64)
- "Setting your speaker system" (p.190)
- "Playback in multiple rooms (multi zone function)" (p.150)


BI-AMP

You can connect the front speakers that support bi-amp connections.

To enable the bi-amp function, configure the necessary speaker settings.

[Search tag]#Q01 Speaker systems

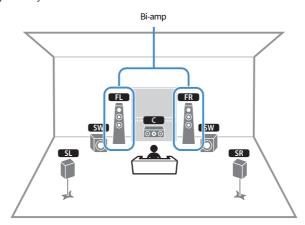

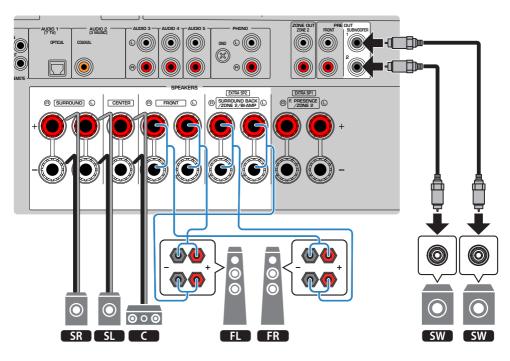

NOTICE

• Before making bi-amp connections, remove any brackets or cables that connect a woofer with a tweeter. If you are not making bi-amp connections, make sure that the brackets or cables are connected before connecting the speaker cables. Refer to the instruction manual of the speakers for details.

NOTE

- The following speakers cannot be connected simultaneously.
 - · Surround back speakers
 - · Bi-amp speakers
- You can also connect up to 2 subwoofers (with built-in amplifier) to the unit. Two subwoofers connected to the unit output the same sounds.
- When using only one subwoofer, you can place it either in the left or right side.

- "Setting your speaker system" (p.190)
- "Speaker requirements" (p.64)

Connecting speakers

Speaker requirements

Speakers and subwoofers to be connected to the unit must meet the following requirements:

- · Use following speakers.
 - the front speakers: with an impedance of at least 4-ohm
 - · other speakers: with an impedance of at least 6-ohm
- Use a subwoofer with built-in amplifier.

[Search tag]#Q01 Speaker systems

NOTE

- Prepare the number of speakers according to your speaker system.
- Be sure to connect the front left and right speakers.
- When using surround back speakers, be sure to connect the surround back left and right speakers. Using only one surround back speaker was discontinued.
- Under its default settings, the unit is configured for 8-ohm speakers. When connecting 6-ohm speakers, set the unit's speaker
 impedance to "6 Ω MIN".
- When connecting the front speakers with an impedance of 4-ohm, set the unit's speaker impedance to "6 Ω MIN".

- "Setting the speaker impedance" (p.201)
- · "Cable requirements" (p.65)

Cable requirements

Use the following types of commercially-available cables to connect speakers to the unit:

• Speaker cables (for connecting the speakers)



• Audio pin cable (for connecting a subwoofer)



Related links

"Connecting the speaker" (p.66)

 
How to connect speakers

Connecting the speaker

Connect a speaker cable between the negative (-) terminal of the unit and the negative (-) terminal of the speaker, and between the positive (+) terminal of the unit and the positive (+) unit of the speaker.

Remove the unit's power cable from an AC wall outlet before connecting the speaker.

+ (red)



- (black)

NOTICE

- Prepare speaker cables in a place away from the unit, to avoid accidentally dropping wire strands into the unit's interior which
 could result in a short circuit or malfunction of the unit.
- Improper connecting of the speaker cables may cause a short circuit and also damage the unit or the speakers.
 - Do not let the bare wires of the speaker cable touch one another.



• Do not let the bare wires of the speaker cable come into contact with the unit's metal parts (rear panel and screws).



 
1 Remove approximately 10 mm (3/8") of insulation from the ends of the speaker cable, and twist the bare wires of the cable firmly together.



- 2 Loosen the speaker terminal.
- 3 Insert the bare wires of the cable into the gap on the side of the terminal.
- 4 Tighten the terminal.

This completes the connection.

- If "Check SP Wires" appears on the front display when the unit is turned on, turn off the unit, and then confirm that the speaker cables are not short circuited.
- (U.S.A., Canada, China, Taiwan, Brazil, Central and South America and General models only)
 When using a banana plug, tighten the speaker terminal and insert a banana plug into the end of the terminal.



Related links

"Connecting the subwoofer" (p.68)

Connecting the subwoofer

Use an audio pin cable to connect the subwoofer.

Unplug the power cables of the unit and subwoofer from the AC wall outlets before connecting the subwoofer.



Related links

"HDMI connection with a TV" (p.69)

Connecting a TV

HDMI connection with a TV

Connect a TV to the unit with an HDMI cable. When the TV audio is played back on the unit, use eARC/ARC function or use a digital optical cable to input TV audio to the unit.


[Search tag]#Q02 Connect TV

NOTE

- Use a 19-pin HDMI cable with the HDMI logo. We recommend using a cable as short as possible to prevent signal quality
 degradation
- Use a Premium High Speed HDMI Cable or Premium High Speed HDMI Cable with Ethernet to enjoy 3D or 4K Ultra HD videos.
- When using eARC/ARC, connect a TV with an HDMI cable that supports eARC/ARC (such as a High Speed HDMI Cable with Ethernet).
- · You may need setting on the TV. Refer to the instruction manual for the TV.

■ Using eARC/ARC function

If your TV supports eARC/ARC, the TV audio is played back on the unit with only one HDMI cable. When using ARC, set the HDMI Control function to "On".

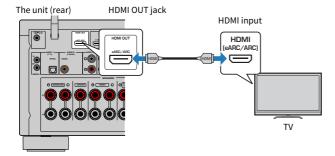


NOTE

- "ARC" is an abbreviation of Audio Return Channel. "ARC" allows that the TV audio is played back on AV products (such as AV receiver, sound bar), by connecting the HDMI input jack that supports ARC of your TV to the HDMI OUT jack that supports ARC of your AV products with only an HDMI cable, without a digital optical cable.
- "eARC" is an abbreviation of enhanced Audio Return Channel. "eARC", enhanced the function of ARC, supports uncompressed 5.1channel and 7.1-channel audio formats, and object-based surround (such as Dolby Atmos and DTS:X) via compatible TV with the
 HDMI cable.

- "Playback of TV audio with eARC/ARC" (p.124)
- "HDMI connection with a video device such as a BD/DVD player" (p.71)

■ Connecting a digital optical cable

If your TV does not support eARC/ARC, connect your TV to the unit with a digital optical cable.

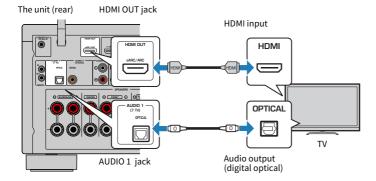

NOTE


According to the audio output jacks of your TV, you can connect your TV to the unit with an audio cable (digital coaxial or stereo pin cable) other than a digital optical cable. In this case, set "TV Audio Input" in the "Setup" menu.

- "Playback of TV audio with a digital optical cable" (p.125)
- "HDMI connection with a video device such as a BD/DVD player" (p.71)
- "Setting the audio input jack used for TV audio" (p.249)

Connecting playback devices

HDMI connection with a video device such as a BD/DVD player

Connect a video device to the unit with an HDMI cable.

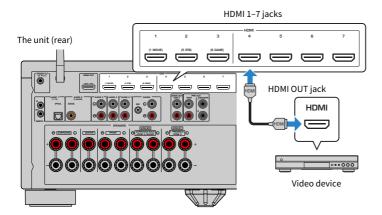

Related links

"AUDIO connection with an audio device such as a CD player" (p.72)


Connection other than HDMI with a playback device

AUDIO connection with an audio device such as a CD player

Connect audio devices such as CD players to the unit.

Depending on the audio output jacks available on your audio device, choose one of the following connections.

Audio output jacks on audio device	Audio input jacks on the unit
Digital coaxial	AUDIO 2 (COAXIAL)
Digital optical	AUDIO 1 (OPTICAL)
Analog stereo (RCA)	AUDIO 3-5 (AUDIO [RCA])
Turntable (PHONO)	PHONO

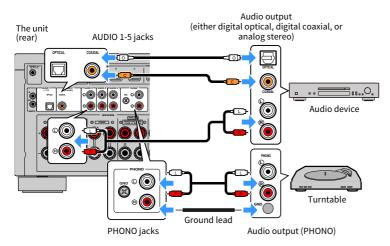

NOTE

- The PHONO jack of the unit is compatible with an MM cartridge. To connect a turntable with a low-output MC cartridge, use a boosting transformer.
- Connecting the turntable to the GND terminal of the unit may reduce noise in the signal. (This GND terminal is not a safety ground.)

- "Part names and functions of the rear panel" (p.31)
- "Connecting the FM antenna" (p.73)
- "Connecting the DAB/FM antenna" (p.76)

Connecting the radio antennas


Connecting the FM antenna

Model For

U.S.A., Canada, Asia, Korea, China, Taiwan, Brazil, General, and Central and South America

Connect the supplied FM antenna to the unit.

Fix the end of the FM antenna to a wall.

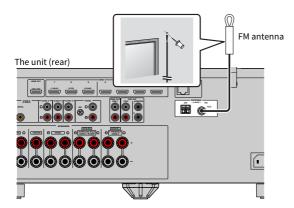

Related links

"Connecting the AM antenna" (p.74)


Connecting the AM antenna

Model For


U.S.A., Canada, Asia, Korea, China, Taiwan, Brazil, General, and Central and South America

Connect the supplied AM antenna to the unit.

Place the AM antenna on a flat surface.

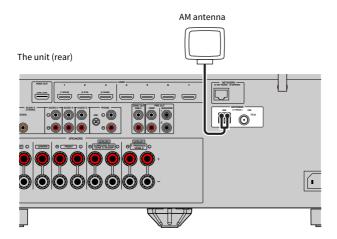

Assembling and connecting the AM antenna

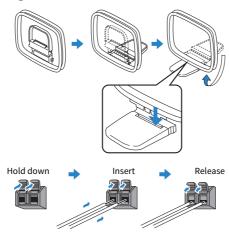

NOTE

- Unwind only the length of cable needed from the AM antenna unit.
- The wires of the AM antenna have no polarity.

PREPARATIONS > Connecting the radio antennas

Related links

"Network connection of the unit" (p.77)


Connecting the DAB/FM antenna

Model For

U.K., Europe, Russia and Australia

Connect the supplied DAB/FM antenna to the unit.

Fix the antenna ends to a wall.

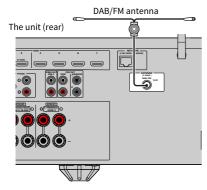

NOTE

- The antenna should be stretched out horizontally.
- If you cannot obtain good reception on the radio, adjust the height, direction or placement of the DAB/FM antenna.

Related links

"Network connection of the unit" (p.77)

Preparing for connecting to a network

Network connection of the unit

The unit supports wired and wireless connections.

Select a connection method according to your network environment.

You can enjoy Internet radio or music files stored on media servers, such as PCs and Network Attached Storage (NAS), on the unit.

NOTICE


• Do not connect this product to public Wi-Fi and/or Internet directly. Only connect this product to the Internet through a router with strong password-protections. Consult your router manufacturer for information on security best practices.

- "Connecting a network cable (wired connection)" (p.78)
- · "Preparing wireless antennas (wireless connection)" (p.79)

Connecting a network cable (wired connection)

Connect the unit to your router with a commercially-available STP network cable (CAT-5 or higher straight cable).

When using a router that supports DHCP, you do not need to configure any network settings for the unit.

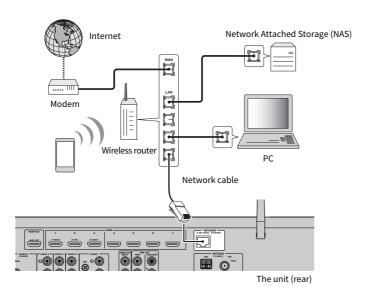


NOTE

You need to configure the network settings if your router does not support DHCP or if you want to configure the network parameters manually.

- "Setting the network parameters manually" (p.272)
- "Checking the network information of the unit" (p.269)
- "Connecting an external power amplifier" (p.80)

Preparing wireless antennas (wireless connection)

Stand the wireless antennas upright for connecting to the wireless network or a Bluetooth device wirelessly.

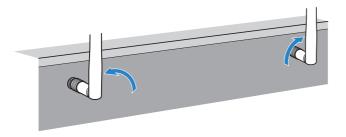

NOTICE

• Do not apply excessive force on the wireless antenna. Doing so may damage the antenna.

- "Adding the unit to the MusicCast network" (p.89)
- "Selecting a wireless network connection method" (p.358)
- "Connecting an external power amplifier" (p.80)

Connecting other devices

Connecting an external power amplifier


When connecting an external power amplifier (pre-main amplifier) to enhance speaker output, connect the input jacks of the power amplifier to the PRE OUT jacks of the unit.

The same channel signals are output from the PRE OUT jacks as from their corresponding SPEAKERS terminals.

NOTICE

To prevent the generation of loud noises or abnormal sounds, make sure the followings before making connections.

- Unplug the power cable of the unit and turn off the external power amplifier before connecting them.
- When using the PRE OUT jacks, do not connect speakers to the corresponding SPEAKERS terminals.
- When using a pre-main amplifier that does not have the volume control bypass, turn up the volume of the pre-main amplifier enough and fix it. In this case, do not connect other devices (except the unit) to the pre-main amplifier.

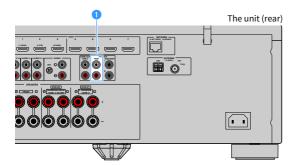

FRONT jacks


Outputs front left and right channel sounds.

Related links

"Connecting a device compatible with the trigger function" (p.81)

Connecting a device compatible with the trigger function

The trigger function can control an external device in conjunction with operating the unit (such as powering on/off and input selection). If you have a Yamaha subwoofer that supports a system connection or a device with a trigger input jack, you can use the trigger function by connecting the external device to the TRIGGER OUT jack with a monaural mini-jack cable.

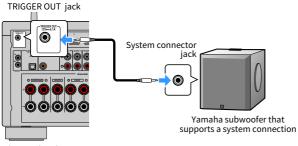


The unit (rear)


- "Operating the unit from another room (remote connection)" (p.82)
- "Specifying the zone with which the TRIGGER OUT jack functions are synchronized" (p.254)

Operating the unit from another room (remote connection)

You can operate the unit or external devices from another room (a zone) using the remote control supplied with each device if you connect an infrared signal receiver/emitter to the unit's REMOTE IN/OUT jacks.

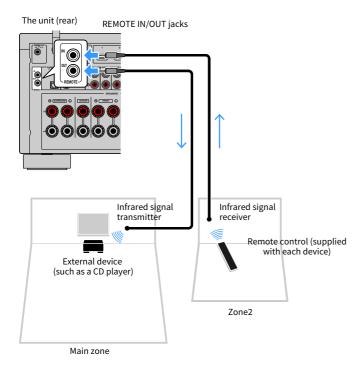

An infrared signal transmitter is not required if you are using Yamaha products that support remote connections, as the unit does. You can transmit remote control signals by connecting the REMOTE IN/OUT jacks with monaural mini-jack cables and an infrared signal receiver.

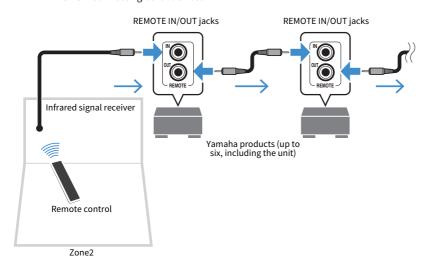


Related links

"Plugging in the power cable" (p.84)

Turning on the power of the unit

Plugging in the power cable

After all the connections are complete, plug in the power cable.

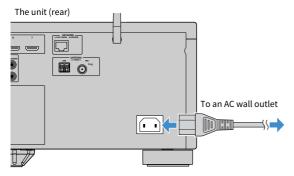

Related links

"Setting the power to on/standby (Main zone)" (p.85)

Setting the power to on/standby (Main zone)

Switch the power of Main zone between on and standby.

NOTE

Main zone is the room where the unit is installed.

- 1 Set the zone switch to "MAIN".
- 2 Press (1).

Each time you press the key, you can switch the power of Main zone between on and standby.

NOTE

When you turn on the unit for the first time, the message regarding the network setup appears on the TV. If you use an iPhone, you can set up a wireless connection by following the on-screen instructions. Here, press RETURN on the remote control to proceed to the next procedure.

- "Part names and functions of the remote control" (p.33)
- "Selecting the menu language" (p.86)

Selecting the menu language

Selecting the menu language

To set the desired menu language, switch the input of the TV to display video from the unit and press SETUP. And then, select "Language" in the "SETUP" menu.

- "Setting the menu language" (p.282)
- "Basic operation of the Setup menu" (p.179)
- "What is MusicCast" (p.87)

Setting MusicCast

What is MusicCast

MusicCast is a wireless musical solution from Yamaha, allowing you to share music among all of your rooms with a variety of devices. You can enjoy music from your smartphone, PC, NAS drive, Internet radio station and music streaming service anywhere in your house with one easy-to-use dedicated application "MusicCast CONTROLLER".

For more details and a lineup of MusicCast compatible products, visit the Yamaha website.

Related links

"Using MusicCast CONTROLLER" (p.88)

Using MusicCast CONTROLLER

To use the network features on the MusicCast compatible device, you need the dedicated application "MusicCast CONTROLLER" for the operation. Search for the free application "MusicCast CONTROLLER" on the App Store or Google Play and install it to your device.

 
Related links

"Adding the unit to the MusicCast network" (p.89)

Adding the unit to the MusicCast network

Perform the following procedure to add the unit to the MusicCast network. You can also configure the unit's wireless network settings at once.

- 1 Launch the "MusicCast CONTROLLER" application on your mobile device and tap "Setup".
- **2** Operate the "MusicCast CONTROLLER" application following the on-screen instructions.



NOTE

- If you configure the unit's wireless network settings with this method, the SSID and security key for your wireless LAN router (access point) will be needed.
- If you add the second or later MusicCast compatible device, tap "Settings" and then "Add New Device" in the "MusicCast CONTROLLER" application.
- When you add the unit to the MusicCast network, the wireless LAN indicator sometimes lights up on the front display even if a wired connection is used.



- "Setting the power interlock from the unit to MusicCast compatible devices" (p.276)
- "Configuring wireless speakers" (p.90)
- "Flow of the speaker configurations" (p.92)

Using the MusicCast Surround function


Configuring wireless speakers

Using devices that support the MusicCast Surround function, you can enjoy a 5.1.2-channel or 5.1-channel system with wireless surround speakers and subwoofer.

NOTE


Refer to the instruction manual of the devices that support the MusicCast Surround function for details on settings and operations.

■ Devices supporting MusicCast Surround

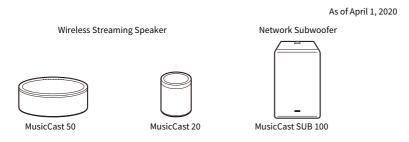

■ Sample speaker layout

The following is a 5.1.2-channel system using two MusicCast 20 speakers as the surround speakers and one MusicCast SUB 100 as the subwoofer.

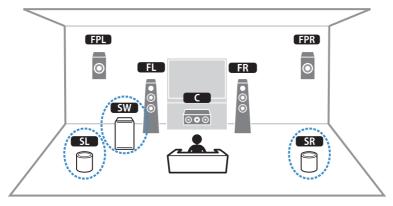

PREPARATIONS > Using the MusicCast Surround function

NOTE

- In a 5.1.2-channel or 5.1-channel system, the surround speakers and subwoofer can be wireless. With other systems, only the subwoofer can be wireless.
- · With wireless surround speakers
 - Sound will not be output from the speaker terminals (SURROUND) on the unit.
 - · Surround back speakers cannot be used.
- · With a wireless subwoofer
 - · One subwoofer can be wireless.
 - Sound will not be output from the pre-out jacks (SUBWOOFER 1 and 2) on the unit. Therefore, another subwoofer cannot be used by connecting it with an audio cable.
- The following audio cannot be output from the wireless surround speakers and subwoofer.
 - DSD audio
 - · DVD-Audio and Super Audio CD (SACD) from HDMI input
 - 1 The unit and the devices supporting MusicCast Surround must be registered with the same location on the MusicCast CONTROLLER app.
 - 2 Follow the app's on-screen instructions to complete setup of the MusicCast Surround function.

For detailed setup instructions, refer to the following.

https://download.yamaha.com/files/tcm:39-1212383

Related links

"Flow of the speaker configurations" (p.92)

 
Configuring the speaker settings

Flow of the speaker configurations

Before using the unit, adjust the speaker settings such as volume balance and acoustic parameters. With the supplied YPAO microphone, the unit detects speaker connections and measures the distances from them to your listening position(s) that is measuring position(s). And then, the unit automatically optimizes the speaker settings such as volume balance and acoustic parameters. (YPAO: Yamaha Parametric room Acoustic Optimizer)

NOTE


- · During the measuring process, test tones are output at high volume. You cannot adjust the volume.
- · During the measuring process, stay in a back corner of the room and note the following for accurate measurement.
 - · Keep the room as quiet as possible.
 - Do not block sound between the speakers and the YPAO microphone.
- · Do not connect headphones.
 - 1 Select the unit's speaker impedance settings as necessary.
 - 2 Configure the corresponding speaker settings.
 - 3 Set the volume of the subwoofer to half. If the crossover frequency is adjustable, set it to maximum.




4 Place the YPAO microphone at your listening position (same height as your ears).

We recommend the use of a tripod as a microphone stand and adjust your listening position (same height as your ears). You can use the tripod screws to stabilize the microphone.

5 Connect the YPAO microphone to the YPAO jack.

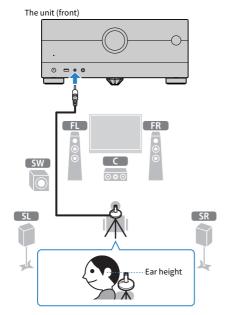

The following screen appears on the TV.

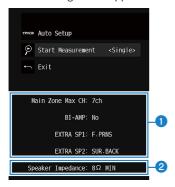


- Setting of "Power Amp Assign" in the "Setup" menu
- 2 Setting of "Speaker Impedance" in the "Setup" menu

6 According to the guidance displayed on the screen, start the measurement.

If you want to enable an item under "Measuring option", select the item.

The following screen appears on the TV when the measurement finishes.

After confirming the measurement results, press ENTER.

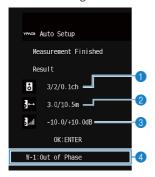

- 1 The number of speakers (front side/rear side/subwoofer)
- 2 Speaker distance (nearest/farthest)
- **3** Adjustment range of speaker output level
- Warning message (if available)

7 Select "Save" to apply the measurement results to the speaker settings.

8 Disconnect the YPAO microphone from the unit.

This completes optimization of the speaker settings.

NOTICE

• The YPAO microphone is sensitive to heat, so should not be placed anywhere it could be exposed to direct sunlight or high temperatures (such as on top of AV equipment).

NOTE

- "YPAO Volume" in the "Option" menu is automatically enabled after the YPAO measurement. Then, the high- and low-frequency levels are automatically adjusted according to the volume so that you can enjoy natural sounds even at low volume.
- An error message may appear during the measurement.
- To cancel the operation, disconnect the YPAO microphone before starting the measurement.
- YPAO multi measurement option cannot be enabled with wireless speakers.

- "Setting the speaker impedance" (p.201)
- "Assigning speaker configuration" (p.95)
- "Error messages from YPAO" (p.101)
- "Warning messages from YPAO" (p.102)
- "Configuring the speaker settings automatically based on the YPAO measurement results" (p.97)
- "Adjusting the high- and low-frequency levels automatically according to the volume" (p.162)

Assigning speaker configuration

If you use any of the following speaker configurations, configure the corresponding speaker settings manually.


- When using the surround back speakers
- When using bi-amp connections or zone connections
- When using the surround speakers placed in front (Virtual CINEMA FRONT)
- When using the front presence speakers for Dolby Atmos or DTS:X playback

- "Setting your speaker system" (p.190)
- "Setting the use of Virtual CINEMA FRONT" (p.197)
- "Front presence speaker layout" (p.364)

Optional measurement of YPAO

YPAO measuring at multiple listening positions (multi measure)

Select "Multi Measure" option if you will have several listening positions or if you want others to enjoy surround sound. You can take measurements at up to 8 different positions in the room. The speaker settings will be optimized to suit the area defined by those positions.

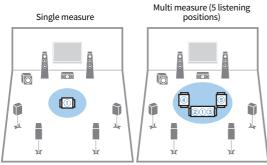

Multi measure (1 listening position + front/back/left/right)

Multi measure (2 listening positions + front/back)

NOTE

- First place the YPAO microphone at the listening position you will be seated most frequently.
- YPAO multi measurement option cannot be enabled with wireless speakers.

Related links

"Configuring the speaker settings automatically based on the YPAO multi measurement results" (p.97)

 
Configuring the speaker settings automatically based on the YPAO measurement results

Configuring the speaker settings automatically based on the YPAO multi measurement results

Perform the following procedure to take a measurement when the "Multi Measure" option is selected. It takes about 15 minutes to measure 8 listening positions.

NOTE


- · During the measuring process, test tones are output at high volume. You cannot adjust the volume.
- During the measuring process, stay in a back corner of the room and note the following for accurate measurement.
 - Keep the room as quiet as possible.
 - Do not block sound between the speakers and the YPAO microphone.
- · Do not connect headphones.
- YPAO multi measurement option cannot be enabled with wireless speakers.
 - 1 Select the unit's speaker impedance settings as necessary.
 - 2 Configure the corresponding speaker settings.
 - 3 Set the volume of the subwoofer to half. If the crossover frequency is adjustable, set it to maximum.




4 Place the YPAO microphone at your listening position (same height as your ears).

We recommend the use of a tripod as a microphone stand and adjust your listening position (same height as your ears). You can use the tripod screws to stabilize the microphone.

5 Connect the YPAO microphone to the YPAO jack.

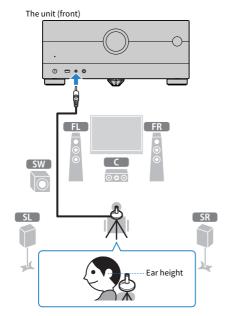

6 Select "Multiple" for measuring option on the entry screen.

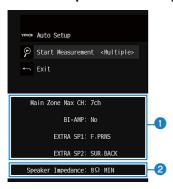

- Setting of "Power Amp Assign" in the "Setup" menu
- 2 Setting of "Speaker Impedance" in the "Setup" menu

7 According to the guidance displayed on the screen, start the measurement.

The following screen appears on the TV when the measurement at the first position finishes.



8 Move the YPAO microphone to the next listening position and select "OK".

Repeat it until measurements at all listening positions (up to 8) have been taken.

9 When the measurements at the positions you want to measure are completed, select "Skip".

When you have taken measurements at 8 listening positions, the following screen appears automatically.

After confirming the measurement results, press ENTER.



10 Select "Save" to save the measurement result.

The adjusted speaker settings are applied.



11 Disconnect the YPAO microphone from the unit.

Thicompletes optimization of the speaker settings.

NOTICE

• The YPAO microphone is sensitive to heat, so should not be placed anywhere where it could be exposed to direct sunlight or high temperatures (such as on top of AV equipment).

Error messages from YPAO

If any error message is displayed, resolve the problem by following on-screen instructions and perform YPAO again.

[Search tag]#Q03 YPAO Error

Error message	Remedy
E-1:No Front SP	Exit YPAO, turn off the unit, and then check the speaker connections.
E-2:No Sur. SP	
E-3:No F.PRNS SP	
E-4:No Sur. Back SP	
E-5:Noisy	Keep the room quiet and retry YPAO. If you select "PROCEED", YPAO takes the measurement again and ignores any noise detected.
E-6:Check Sur.	Surround speakers need to be connected in order to use surround back speakers. Exit YPAO, turn off the unit, and then reconnect the speakers.
E-7:No MIC	Connect the YPAO microphone to the YPAO jack firmly and retry YPAO.
E-8:No Signal	Connect the YPAO microphone to the YPAO jack firmly and retry YPAO. If this error occurs repeatedly, contact the nearest authorized Yamaha dealer or service center.
E-9:User Cancel	Retry or exit YPAO as necessary.
E-10:Internal Err.	Exit YPAO, and turn off and on the unit. If this error occurs repeatedly, contact the nearest authorized Yamaha dealer or service center.

NOTE

- To exit the YPAO measurement for resolving the problem, press ENTER, and select "EXIT".
- For the E-5 and E-9 messages only, you can proceed with the YPAO measurement. Press ENTER, and select "PROCEED".
- To retry the YPAO measurement from beginning, press ENTER, and select "RETRY".

Warning messages from YPAO

If a warning message is displayed, resolve the problem by following table and perform YPAO again.

You can still apply the measurement results, however, we recommend you resolve the problem and perform YPAO again in order to use the unit with the optimal speaker settings.

[Search tag]#Q03 YPAO Warning

Warning message	Remedy
	Check the cable connections (+/-) of the corresponding speaker.
	If the speaker is connected incorrectly:
	Reconnect the speaker cable.
W-1:Out of Phase	If the speaker is connected correctly:
	Depending on the type of speakers or room environment, this message may appear even if the speakers are connected correctly. In this case, you can ignore the message. (This message is displayed to suggest confirmation to you, and it doesn't influence the playback of the unit.)
W-2:Over Distance	Place the corresponding speaker within 24 m (80 ft) of the listening position.
	Correct the cable connection or position of the corresponding speaker.
W-3:Level Error	We recommend using the same speakers or speakers with specifications that are as similar as possible.
	Confirm the appropriate volume to the subwoofer with a problem.

NOTE


Correct the cable connection or position of the speaker after turning off the unit.

ENJOYING SOUND

Enjoying sound field effects

Selecting your favorite sound mode

The unit is equipped with a variety of sound programs and surround decoders. You can enjoy playback sources with your favorite sound mode such as sound field effect or stereo playback.

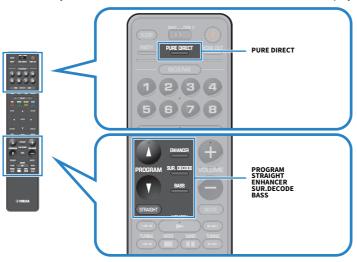

NOTE

The sound mode can be applied separately to each input source.

- "Enjoying sound field effects optimized for the type of content" (p.105)
- "Enjoying multichannel playback without sound field effects (surround decoder)" (p.111)

Enjoying 3-dimentional sound fields

The unit is equipped with a variety of sound programs that utilize Yamaha's original DSP technology (CINEMA DSP 3D). It allows you to easily create sound fields like actual movie theaters or concert halls in your room and enjoy natural 3-dimensional sound fields.

NOTE

- You can adjust the effect level of the sound program (enhance or reduce the sound field effect) in "DSP Level" in the "Setup" menu.
- The sound mode can be applied separately to each input source.
- If a multichannel source (6.1 channels or more) is input when no surround back speakers are connected, the unit creates Virtual Surround Back Speaker (VSBS) using the surround speakers to add a sense of depth to the rear sound field.

- "Adjusting the sound field effect level" (p.212)
- "Setting Virtual Surround Back Speaker (VSBS)" (p.230)

Enjoying sound field effects optimized for the type of content

The unit is equipped with a variety of sound programs. You can enjoy playback sources with your favorite sound mode. You can select a sound program by pressing PROGRAM.

- We recommend a sound program in the "MOVIE" category displayed on the front display to enjoy video content.
- We recommend a sound program in the "MUSIC" category displayed on the front display to enjoy music content.

MUSIC

Hall in Munich	This program simulates a Munich concert hall with approximately 2,500 seats that uses stylish wood for the interior finishing. Fine, beautiful reverberations spread richly, creating a calming atmosphere. The listener's virtual seat is at the center left of the arena.
Hall in Vienna	This program simulates a 1700-seat, middle-sized concert hall with a shoebox shape that is traditional in Vienna. Pillars and ornate carvings create extremely complex reverberations from all around the audience, producing a very full, rich sound.
Chamber	This program creates a relatively wide space with a high ceiling, like an audience hall in a palace. It offers pleasant reverberations that are suitable for courtly music and chamber music.
Cellar Club	This program simulates an intimate concert venue with a low ceiling and homey atmosphere. A realistic, live sound field delivers powerful sounds that make you feel as if you are sitting in the front row in front of a small stage.
The Roxy Theatre	This program creates the sound field of a 460-seat rock music concert venue in Los Angeles. The listener's virtual seat is at the center left of the hall.
The Bottom Line	This program creates the sound field at stage front in The Bottom Line, a famous New York jazz club once. The floor can seat 300 people to the left and right in a sound field offering real and vibrant sound.

MOVIE

This program allows listeners to enjoy the rich vividness of sport broadcasts and light entertainment programs. In sports broadcasts, the commentators' voices are positioned clearly at the center, while the atmosphere inside the stadium is realistically conveyed by the peripheral delivery of the sounds of the fans in a suitable space.
This program is suitable for action games, such as car racing and fighting games. The reality of, and emphasis on, various effects makes the player feel like they are right in the middle of the action, allowing for greater concentration. Use this program in combination with Compressed Music Enhancer for a more dynamic and strong sound field.
This program is suitable for role-playing and adventure games. This program adds depth to the sound field for natural and realistic reproduction of background music, special effects, and dialogue from a wide variety of scenes. Use this program in combination with Compressed Music Enhancer for a clearer and more spatial sound field.
This program allows you to enjoy videos of pop, rock, and jazz concerts, as if you were there yourself. Immerse yourself in the hot concert atmosphere thanks to the vividness of the singers and solos on stage, a presence sound field that emphasizes the beat of rhythm instruments, and a surround sound field that reproduces the space of a big live hall.

	(this program does not utilize CINEMA DSP). Use this program to output sound from all speakers. When you play back multichannel sources, the unit mixes down the source to 2 channels, and then outputs the sound from all
2ch Stereo	Use this program to mix down multichannel sources to 2 channels. When multichannel signals are input, they are down mixed to 2 channels and output from the front speakers
STEREO	
Mono Movie	This program reproduces monaural video sources, such as classic movies, in an atmosphere of a good old movie theater. The program creates a pleasant space with depth, by adding breadth and the appropriate reverberation to the original audio.
Drama	This program features stable reverberations that match a wide range of movie genres, from serious dramas to musicals and comedies. The reverberations are modest, but suitably stereophonic. The sound effects and background music are reproduced with a gentle echo that does not impinge on the articulation of the dialogue. You'll never get tired listening for long periods.
Adventure	This program is ideal for reproducing the sound design of action and adventure movies precisely. The sound field restrains reverberations, but puts emphasis on reproducing a sensation of expansiveness on both sides, powerful space expanded widely to the left and right. The restrained depth creates a clear and powerful space, while also maintaining the articulation of the sounds and the separation of the channels.
Sci-Fi	This program clearly reproduces the finely elaborated sound design of the latest Sci-Fi and SFX movies. You can enjoy a variety of cinematographically created virtual spaces reproduced with clear separation between dialogue, sound effects, and background music.
Spectacle	This program delivers the scale and grandeur of spectacular movie productions. It delivers an expansive sound space to match the cinemascope wide-screen, and boasts a broad dynamic range, providing everything from small delicate sounds to powerful loud booms.
Standard	This program creates a sound field that emphasizes the surround feeling without disturbing the original acoustic positioning of multichannel audio. Its design is based on the concept of the ideal movie theater, in which the audience is surrounded by beautiful reverberations from the left, right, and rear.

UNPROCESSED

All-Channel Stereo

SURROUND DECODE	The surround decoder enables multichannel playback from 2-channel sources without sound field effects.

speakers. This program creates a larger sound field and is ideal for background music at

Related links

"Adjusting the sound field effect level" (p.212)

parties.

Enjoying sound field effects without surround speakers (Virtual CINEMA DSP)

If you select one of the sound programs when no surround speakers are connected, the unit automatically creates the surround sound field using the front speakers. You can enjoy sound field effects without surround speakers.

NOTE

Virtual CINEMA DSP does not work on "2ch Stereo" and "All-Channel Stereo". Select a sound program besides those.

Related links

"Enjoying sound field effects optimized for the type of content" (p.105)

Enjoying surround sound with 5 speakers placed in front (Virtual CINEMA FRONT)

When the surround speakers are placed in front and "Virtual CINEMA FRONT" in the "Setup" menu is set to "On", the unit creates the virtual surround speakers in the rear side. You can enjoy multichannel surround sound only with speakers placed in the front.

- "Setting the use of Virtual CINEMA FRONT" (p.197)
- "Virtual CINEMA FRONT" (p.55)

Enjoying surround sound with headphones (SILENT CINEMA)

You can enjoy surround or sound field effects, like a multichannel speaker system, with stereo headphones by connecting the headphones to the PHONES jack and selecting a sound program or a surround decoder.

SILENT ™ CINEMA

- "Enjoying sound field effects optimized for the type of content" (p.105)
- "Enjoying multichannel playback without sound field effects (surround decoder)" (p.111)

Enjoying unprocessed playback

Enjoying original sound (straight decode)

You can play back input sources without any sound field effects. The unit produces stereo sound from the front speakers for 2-channel sources such as CDs, and produces unprocessed multichannel sounds for multichannel sources.

Each time you press STRAIGHT, the straight decode mode is enabled or disabled.

NOTE

- When surround back speakers are used, the unit produces 7.1-channel sound for 5.1-channel sources.
- If Virtual CINEMA FRONT is set to enable, Virtual CINEMA FRONT works when multichannel source is played back.

Related links

"Enjoying surround sound with 5 speakers placed in front (Virtual CINEMA FRONT)" (p.108)

Enjoying multichannel playback without sound field effects (surround decoder)

The unit enables multichannel playback from 2-channel/multichannel sources without sound field effects. Press SUR. DECODE to select a surround decoder.

Each time you press SUR. DECODE, the surround decoder changes.

NOTE

- You can also change the surround decoder "Sur.Decode" in the "Setup" menu.
- You can adjust the surround decoder parameters in "Surround Decoder" in the "Setup" menu.
- The selected surround decoder may not work for some input sources.
- We recommend Dolby Surround while network streaming is Dolby content.
- When the Dolby Surround decoder or the Neural:X decoder is selected, the following virtual processing does not work.
 - Virtual CINEMA FRONT
 - Virtual CINEMA DSP

- "Selecting the surround decoder used in the program" (p.214)
- "Setting the use of Center Spread" (p.215)
- "Adjusting the center localization (broadening effect) of the front sound field" (p.216)
- . "Enjoying sound field effects without surround speakers (Virtual CINEMA DSP)" (p.107)
- "Enjoying surround sound with 5 speakers placed in front (Virtual CINEMA FRONT)" (p.108)

Enjoying higher quality playback (Pure Direct)

The unit allows you to enjoy the high-quality playback with reduced noise. Various processing modes and some circuitry (such as the front display) other than the basic playback function is suspended.

Each time you press PURE DIRECT, the direct playback mode is enabled or disabled. When the Pure Direct is enabled, "PURE DIRECT" lights up on the front panel.

NOTE

When the Pure Direct is enabled, the following functions are not available.

- · Selecting sound programs
- · Using the zone function
- Operating the on-screen "Setup" and "Option" menus
- Viewing information on the front display (when not in operation)

Enjoying 3-dimensional sound

Enjoying Dolby Atmos® and DTS:X™

Playing back Dolby Atmos or DTS:X content creates realistic sound that comes from every direction, including overhead. To receive the full effect, we recommend a speaker system with front presence speakers.

About Dolby Atmos®

- Dolby Atmos content are decoded as Dolby TrueHD or Dolby Digital Plus in the following situations. (Dolby Atmos PCM format is always decoded as Dolby Atmos.)
 - · Neither surround back nor front presence speakers are used.
 - Headphones are used (2-channel playback).

About DTS:X™

- You can adjust the volume of dialogue sounds in "DTS Dialogue Control" in the "Setup" menu.
- When the DTS:X decoder is selected, virtual surround processing does not work.

- "Speaker systems recommended to the unit (basic setup)" (p.40)
- "5.1.2-channel system" (p.42)
- "Enjoying surround sound with 5 speakers placed in front (Virtual CINEMA FRONT)" (p.108)
- "Enjoying sound field effects without surround speakers (Virtual CINEMA DSP)" (p.107)
- "Adjusting the volume of dialogue sound during DTS:X™ playback" (p.225)

Enjoying favorite sound

Enjoying more powerful sound to the audio source (Compressed Music Enhancer)

You can enjoy a dynamic sound by adding depth and breadth to the sound. This function can be used along with any other sound modes.

For digitally compressed formats, you can play back an enriched sound close to the original sound before it was compressed.

Each time you press ENHANCER, Compressed Music Enhancer is enabled or disabled.

NOTE

- Compressed Music Enhancer does not work on the following audio sources.
 - · Signals whose sampling frequency is over 48 kHz
 - DSD audio
- You can also use "Enhancer" in the "Option" menu to enable Compressed Music Enhancer.

Related links

"Setting Compressed Music Enhancer" (p.165)

Enhancing the low-frequency range from the subwoofer

You can enhance the low-frequency range from the subwoofer while avoiding interference with the front speakers in middle- and low-frequency range.

Set "Subwoofer Trim" in the "Option" menu.

Related links

"Adjusting the subwoofer volume" (p.167)

Enjoying powerful sound at low volume

Automatically you can correct the high- and low-frequency levels, hardly heard at low volume, based on the YPAO measurement results and the auditory sensation.

Set "YPAO Volume" in the "Option" menu.

NOTE

- "YPAO Volume" works after the YPAO measurement.
- "YPAO Volume" is automatically enabled after the YPAO measurement.

Related links

"Adjusting the high- and low-frequency levels automatically according to the volume" (p.162)

Making easy to hear the dialogue sounds

You can adjust the volume of dialogue sounds to become easy to hear. Set "Dialogue Level" in the "Setup" menu.

Related links

"Adjusting the volume of dialogue sound" (p.224)

Enjoying bass sound with small speakers (Extra Bass)

You can enjoy sufficient bass sound, regardless of the size of the front speakers and the presence or absence of a subwoofer.

Each time you press BASS, Extra Bass is enabled or disabled.

NOTE

You can also use "Extra Bass" in the "Setup" menu to enable Extra Bass.

Related links

"Setting the use of Extra Bass" (p.196)

Enjoying sound better

Enjoying music streaming services

You can listen to better sound in music streaming services.

Set Compressed Music Enhancer to "On". For details, see the following:

• "Enjoying more powerful sound to the audio source (Compressed Music Enhancer)" (p.114)

Enjoying sound at a low volume at night

Sound at a low volume is hard to listen to.

Set "Adaptive DRC" to "On". For details, see the following:

"Adjusting the dynamic range automatically" (p.163)

Enjoying the sound of voices

Dialogue sound is hard to listen to.

Adjust "Dialogue Level". For details, see the following:

• "Adjusting the volume of dialogue sound" (p.224)

Ovoices may not be heard beautifully.

Set Compressed Music Enhancer to "On". For details, see the following:

- "Enjoying more powerful sound to the audio source (Compressed Music Enhancer)" (p.114)

If voices may not be still heard beautifully, adjust the perceived height of dialogue sounds to higher position. For details, see the following:

• "Adjusting the perceived height of dialogue sound" (p.226)

Enioving surround sound without speakers in the back of the room

• In 5.1-channel system, speakers cannot be placed in the back of the room.

Using "Virtual CINEMA FRONT", the unit creates the virtual surround speakers in the rear side. For details, see the following:

• "Enjoying surround sound with 5 speakers placed in front (Virtual CINEMA FRONT)" (p.108)

Speaker system is 3.1-channel or less.

Virtual CINEMA DSP automatically creates the surround sound field using the front speakers. For details, see the following:

• "Enjoying sound field effects without surround speakers (Virtual CINEMA DSP)" (p.107)

You can enjoy sound with headphones.

SILENT CINEMA creates the surround or sound field effects, like a multichannel speaker system, with stereo headphones. For details, see the following:

• "Enjoying surround sound with headphones (SILENT CINEMA)" (p.109)


PLAYBACK

Basic playback procedure

Basic procedure for playing back video and music

Basic procedure for playing back video and music is as follows.

- 1 Turn on the external devices.
- 2 Use the input selection keys to select an input source.

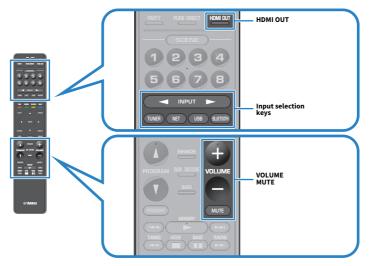

- 3 Start playback on the external device or select a radio station.
- 4 Press VOLUME to adjust the volume.

NOTE

- To mute the audio output, press MUTE. Press MUTE again to unmute.
- You can use HDMI OUT on the remote control to turn on/off the HDMI output for a TV.
- Refer to the instruction manual for the external device.

Item names and functions of the playback screen

When playback starts, the playback screen appears on the TV.



- Status indicators
 - Display the current shuffle/repeat settings and playback status (such as play/pause).
- Playback information
 Displays the artist name, album name, song title, track number, station name, and elapsed time.


NOTE

- Displayed items vary depending on the content of playback.
- Using the external device operation keys on the remote control, you can perform playback operations. Note that the playback operations may not work for some input sources or external devices.
- When "SERVER", "NET RADIO" or "USB" is selected for the input source, press RETURN on the remote control to display the browse screen.

Item names and functions of the browse screen

When the following input source is selected, the browse screen appears on the TV.

- SERVER
- NET RADIO
- USB

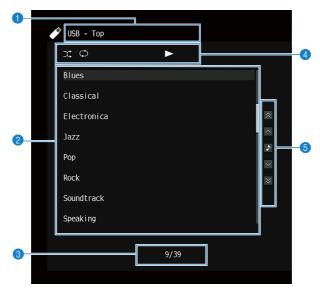

- 1 List name
- 2 Contents list

Displays the list of contents. Select an item and press ENTER to confirm the selection.

- 3 Item number/total
- 4 Status indicators

Display the current shuffle/repeat settings and playback status (such as play/pause).

6 Operation menu

Select an item and press ENTER to confirm the selection.

Icon	Function
♠₩	Moves 10 pages of the list.
^ 	Moves one page of the list.
٨	Moves to the playback screen.

PLAYBACK > Basic playback procedure

NOTE

- Displayed items vary depending on the input source.
- The music content delivered from streaming services can be operated by using MusicCast CONTROLLER on your mobile device.

Playing back TV audio

Playback of TV audio with eARC/ARC

Connect your TV that supports eARC/ARC to the unit with an HDMI cable to play back the TV audio on the unit.

When you select a TV program with the TV remote control, the input source of the unit will be automatically switched to "TV" and the TV audio will be played back on the unit.

NOTE

- When using eARC, you may set the HDMI Control to "Off". But the input source of the unit will not be automatically switched to "TV" when you select a TV program with the TV remote control. The input source must be manually switched to "TV" to play back the TV audio.
- When using ARC, set the HDMI Control and ARC function to "On".
- You may need setting on the TV. Refer to the instruction manual for the TV.
- If your TV does not support eARC/ARC or the audio is interrupted while using eARC/ARC, use a digital optical cable to input TV audio
 to the unit.

- "HDMI connection with a TV" (p.69)
- · "Setting the use of HDMI Control" (p.203)
- "Setting the use of ARC" (p.209)
- "Playback of TV audio with a digital optical cable" (p.125)

Playback of TV audio with a digital optical cable

In the following case, use a digital optical cable to input TV audio to the unit.

- Your TV does not support eARC/ARC.
- You do not want to use eARC/ARC.
 - 1 Set "ARC" in the "Setup" menu to "Off".
 - 2 Select a video content (a TV program) with the TV remote control.

The input source of the unit is automatically switched to "TV" and the TV audio will be played back on the unit.

NOTE

- When you play back TV audio with a cable other than a digital optical cable, set "TV Audio Input" in the "Setup" menu.
- When you set the HDMI Control to "Off", switch the input source to "TV" manually, and then, select a video content (a TV program) with the TV remote control.

- "HDMI connection with a TV" (p.69)
- "Setting the use of ARC" (p.209)
- "Setting the audio input jack used for TV audio" (p.249)

Listening to the radio

Preparing to listen to the radio

Setting the frequency steps

Model For

Asia, Taiwan, Brazil, General, and Central and South America

Set the radio tuning frequency steps of the unit depending on your country or region.

At the factory, the frequency step setting is set to 50 kHz for FM and 9 kHz for AM. Depending on your country or region, set the frequency steps to 100 kHz for FM and 10 kHz for AM.

- 1 Press SETUP.
- 2 Select "Function".
- 3 Select "Tuner".
- 4 Select "FM100/AM10".
- 5 Press SETUP.

This completes the settings.

NOTE

Preset (registered radio stations) and frequency will be initialized if you change the radio tuning frequency steps.

Preparing the DAB tuning

Model For

U.K., Europe, Russia and Australia

Before listening to DAB (Digital Audio Broadcasting) radio, perform an initial scan to register the DAB radio stations automatically.

- 1 Select "TUNER" as the input source.
- 2 Press BAND to select the DAB band.



3 Press [►► TUNING] to start an initial scan.

When the initial scan finishes, the unit automatically tunes in to the first DAB radio station in order by frequency.

NOTE

- DAB uses digital signals for clearer sound and more stable reception compared to analog signals. The unit can also receive DAB+
 (an upgraded version of DAB) that allows for more stations using MPEG-4 HE-AAC v2 audio codec, which has a more efficient
 transmission method.
- Be sure to check the DAB coverage in your area in that not all areas are currently being covered. For a list of nationwide DAB statuses and worldwide DAB frequencies, check WorldDMB online at http://www.worlddab.org/.
- If no DAB radio stations are found by an initial scan, the front display will change to the initial Scan menu. Press [>> TUNING] to start an initial scan again.
- You can check reception strength of each DAB channel label. Press MODE two times to view the Tune AID menu. Then, select the
 desired DAB channel label. The reception strength of DAB channel label is displayed in 0 (none) to 100 (best).
- To perform an initial scan again after some DAB radio stations are stored, press MODE. If you perform an initial scan again, the DAB radio stations currently registered to the preset numbers will be cleared.

■ DAB frequency information

The unit supports Band III (174 to 240 MHz) only.

Frequency	Channel label
174.928 MHz	5A
176.640 MHz	5B
178.352 MHz	5C
180.064 MHz	5D
181.936 MHz	6A
183.648 MHz	6B
185.360 MHz	6C
187.072 MHz	6D
188.928 MHz	7A

PLAYBACK > Listening to the radio

190.640 MHz 7B 192.352 MHz 7C 194.064 MHz 7D 195.936 MHz 8A 197.648 MHz 8B 199.360 MHz 8C 201.072 MHz 8D 202.928 MHz 9A 204.640 MHz 9B 206.352 MHz 9C 208.064 MHz 9D 209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C 215.072 MHz	
194.064 MHz 7D 195.936 MHz 8A 197.648 MHz 8B 199.360 MHz 8C 201.072 MHz 8D 202.928 MHz 9A 204.640 MHz 9B 206.352 MHz 9C 208.064 MHz 9D 209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C	
195.936 MHz 8A 197.648 MHz 8B 199.360 MHz 8C 201.072 MHz 8D 202.928 MHz 9A 204.640 MHz 9B 206.352 MHz 9C 208.064 MHz 9D 209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C	
197.648 MHz 8B 199.360 MHz 8C 201.072 MHz 8D 202.928 MHz 9A 204.640 MHz 9B 206.352 MHz 9C 208.064 MHz 9D 209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C	
199.360 MHz 8C 201.072 MHz 8D 202.928 MHz 9A 204.640 MHz 9B 206.352 MHz 9C 208.064 MHz 9D 209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C	
201.072 MHz 8D 202.928 MHz 9A 204.640 MHz 9B 206.352 MHz 9C 208.064 MHz 9D 209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C	
202.928 MHz 9A 204.640 MHz 9B 206.352 MHz 9C 208.064 MHz 9D 209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C	
204.640 MHz 9B 206.352 MHz 9C 208.064 MHz 9D 209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C	
206.352 MHz 9C 208.064 MHz 9D 209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C	
208.064 MHz 9D 209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C	
209.936 MHz 10A 211.648 MHz 10B 213.360 MHz 10C	
211.648 MHz 10B 213.360 MHz 10C	
213.360 MHz 10C	
· · · · · · · · · · · · · · · · · · ·	
215.072 MHz 10D	
216.928 MHz 11A	
218.640 MHz 11B	
220.352 MHz 11C	
222.064 MHz 11D	_
223.936 MHz 12A	_
225.648 MHz 12B	
227.360 MHz 12C	_
229.072 MHz 12D	
230.784 MHz 13A	_
232.496 MHz 13B	
234.208 MHz 13C	
235.776 MHz 13D	
237.488 MHz 13E	
239.200 MHz 13F	

Listening to the radio

You can tune in to a radio station by using the unit's built-in tuner.

1 Select "TUNER" as the input source.

"TUNER" is selected as the input source and the frequency currently selected is displayed on the front display.



"TUNED" lights up on the front display when the unit is receiving a radio station signal.

"STEREO" lights up on the front display when the unit is receiving a stereo radio signal.

2 Press BAND to select the following band.

- FM/AM (Except for U.K., Europe, Russia and Australia models)
- DAB/FM (U.K., Europe, Russia and Australia models)

3 Select a radio station.

- Press TUNING repeatedly to select a frequency for reception.
 Hold down TUNING for about a second to search stations automatically.
- · Press PRESET to select a registered radio station.

NOTE

- To switch between stereo and monaural for FM radio reception, press MODE. When the signal reception for an FM radio station is unstable, switching to monaural may improve it. Even when you switch to stereo, "STEREO" does not light up on the front display if the unit is not receiving a stereo radio signal.
- You can watch videos input from external devices while listening to radio.
- · You can check reception strength of each DAB channel label.

- "Registering a radio station manually" (p.132)
- "Selecting a video source to be displayed with the selected audio source" (p.172)

Displaying the Radio Data System information

Model For

U.K., Europe and Russia

Radio Data System is a data transmission system used by FM stations. The unit can receive various types of data, such as "Program Service", "Program Type", "Radio Text" and "Clock Time", when it is tuned in to a Radio Data System broadcasting station.

- 1 Tune in to the desired Radio Data System broadcasting station.
- Push and rotate SELECT/ENTER on the front panel to select between the various display items.

The information appears on the front display.

Reception	Frequency
Program Service	Program service name
Program Type	Current program type
Radio Text	Information on the current program
Clock Time	Current time
DSP Program	Sound mode name
Audio Decoder	Decoder name
Output CH	Sound outputting speakers
HDMI Status	HDMI jacks information (connection etc.)
System Status	System information (eco mode etc.)

NOTE

- "---" is displayed in "Program Service", "Program Type", "Radio Text", and "Clock Time" if the radio station does not provide the Radio Data System service.
- We recommend using "Auto Preset" to tune in to the Radio Data System broadcasting stations.

Related links

"Registering FM radio stations automatically (Auto Preset)" (p.133)

Displaying the DAB information

Model For

U.K., Europe, Russia and Australia

The unit can receive various types of DAB information when it is tuned into a DAB radio station.

- 1 Tune in to the desired DAB radio station.
- Push and rotate SELECT/ENTER on the front panel to select between the various display items.

The information appears on the front display.



Service Label	Station name
Dynamic Label	Information on the current station
Ensemble Label	Ensemble name
Program Type	Station genre
Date And Time	Current date and time
Audio Mode	Audio mode (monaural/stereo) and bit rate
CH Label/Frequency	Channel label and frequency
Signal Quality	Signal reception quality (0 [none] to 100 [best])
DSP Program	Sound mode name
Audio Decoder	Decoder name
Output CH	Sound outputting speakers
HDMI Status	HDMI jacks information (connection etc.)
System Status	System information (eco mode etc.)

NOTE

Some information may not be available depending on the selected DAB radio station.

Registering a radio station manually

Tune in to a radio station and register it to a preset number.

- 1 Tune in to the desired radio station.
- 2 Hold down MEMORY for 3 seconds.



- 3 Press PRESET to select the preset number.
- 4 Press MEMORY.



This completes the registration.

NOTE

- You can register up to 40 radio stations as presets.
- Hold down MEMORY for 5 seconds after tuning in to the desired radio station so that you can register it to the next empty (unused)
 preset number after the most recently registered number.
- To cancel the registration, press BAND.
- The front display returns to the input select mode automatically without operations for 30 seconds.

- · "Listening to the radio" (p.129)
- "Registering FM radio stations automatically (Auto Preset)" (p.133)

Registering FM radio stations automatically (Auto Preset)

You can register FM radio stations automatically. FM radio stations with strong signals are automatically registered to the preset numbers.

- 1 Select the FM band.
- 2 Hold down MEMORY for 3 seconds.



- **3** Press PRESET to select the preset number from which to start the registration.
- 4 Press [►► TUNING].

The Auto Preset process starts.



NOTE


- You can register up to 40 radio stations as presets.
- To cancel the Auto Preset process, press BAND.
- (U.K., Europe and Russia models only)
 Only Radio Data System broadcasting stations are registered automatically by the Auto Preset function.

- · "Listening to the radio" (p.129)
- "Registering a radio station manually" (p.132)

Clearing preset stations

Clears radio stations registered to the preset numbers.

- 1 Select "TUNER" as the input source.
- 2 Hold down MEMORY for 3 seconds.

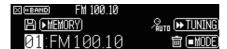

- 3 Press PRESET to select a preset station to be cleared.
- 4 Press MODE.

The preset station is cleared.



- 5 Repeat steps 3 to 4 until all desired preset stations are cleared.
- 6 Press BAND.

The front display returns to the input select mode.

 
Playing back music with the Bluetooth® connection

Playback of Bluetooth® device music on the unit

You can play back music files stored on a Bluetooth device (such as smartphones) on the unit.



When you use Bluetooth device controls to adjust volume, the volume may be unexpectedly loud, and it could result in
difficulty in hearing or damage to devices. If the volume suddenly increases during playback, stop playback immediately.



- 1 Select "Bluetooth" as the input source.
- 2 On the Bluetooth device, select the unit (network name of the unit).

If the pass key is required, enter the number "0000".

3 On the Bluetooth device, start playback.

The playback screen is displayed on the TV.

NOTE

- If the unit detects the Bluetooth device previously connected, the unit automatically connects to it. To establish another Bluetooth connection, first terminate the current Bluetooth connection.
- You can adjust the unit's volume from the Bluetooth device during playback.
- To terminate the Bluetooth connection, perform one of the following operations.
 - · Perform the disconnect operation on the Bluetooth device.
 - · Select an input source other than "Bluetooth" on the unit.
 - \bullet Select "Disconnect" in "Audio Receive" in the "Setup" menu.
- The Bluetooth indicator on the front display lights up while the unit is connected to a Bluetooth device.

 


- "Setting the use of Bluetooth®" (p.277)
- "Item names and functions of the playback screen" (p.121)
- "Setting the use of volume control via AirPlay/Bluetooth" (p.176)
- "Terminating the connection between a Bluetooth® device and the unit" (p.278)

Playback of music using Bluetooth® speakers/headphones

You can enjoy audio played back on the unit using Bluetooth speakers/headphones.

Be sure to connect the Bluetooth speakers/headphones whose volume is adjustable. You cannot adjust the volume of the Bluetooth speakers/headphones from the unit.




- 1 Select an input source other than "Bluetooth".
- 2 Press SETUP.
- 3 Set "Transmitter" in "Bluetooth" in the "Setup" menu to "On".
- 4 Select the Bluetooth speakers/headphones in "Device Search" in the "Setup" menu.

When the connection process finishes, "Completed" appears and audio played back on the unit will be reproduced from the Bluetooth speakers/headphones.

NOTE

- Use the Bluetooth speakers/headphones to adjust their volume.
- · Sounds will be also output from the speakers connected to the unit.
- · AirPlay and DSD audio cannot be delivered.
- · You cannot use the Bluetooth audio transmitter function and the Bluetooth audio receiver function at the same time.
- If the desired Bluetooth device is not displayed on the list, set the Bluetooth device to the pairing mode and then perform "Device Search" operation again.
- To terminate the Bluetooth connection, perform one of the following operations.
 - Perform the disconnect operation on the Bluetooth speakers/headphones.
 - Set "Transmitter" in "Bluetooth" in the "Setup" menu to "Off".
- The Bluetooth indicator on the front display lights up while the unit is connected to a Bluetooth device.

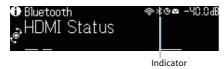

- "Setting the use of Bluetooth®" (p.277)
- "Setting the use of audio transmission to a Bluetooth® device" (p.280)
- "Connecting the unit to a Bluetooth® device that receives transmitted audio" (p.281)

Playing back music with AirPlay

Playback of music with AirPlay

The AirPlay allows you to play back music on the unit. Tap (Click) the AirPlay icon on your iPhone or iTunes/music and select the unit as the audio output device.





CAUTION

When you use AirPlay device controls to adjust volume, the volume may be unexpectedly loud, and it could result in difficulty in
hearing or damage to devices. If the volume suddenly increases during playback, stop playback immediately.

NOTE

- You can turn on the unit automatically when starting playback on the AirPlay device.
- You can edit the network name (the unit's name on the network) displayed on the AirPlay device.
- You can adjust the unit's volume from the AirPlay device during playback.
- The unit supports AirPlay 2.
- · Refer to the website of Apple Inc. about AirPlay.


- "Setting the use of the Network Standby function" (p.274)
- "Setting the network name of the unit" (p.275)
- "Setting the use of volume control via AirPlay/Bluetooth" (p.176)

Playing back music stored on a USB flash drive

Playback of USB flash drive content

You can play back music files stored on a USB flash drive on the unit.

1 Connect the USB flash drive to the USB jack.

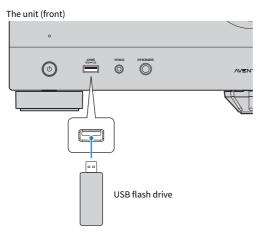

2 Select "USB" as the input source.

The browse screen is displayed on the TV. If playback is ongoing on your USB flash drive, the playback screen is displayed.

3 Select an item.

Playback starts and the playback screen is displayed.

NOTE

- To return to the top level while on the browse screen, hold down RETURN on the remote control.
- To switch the screen mode browse/playback/off, press DISPLAY.
- If the USB flash drive contains many files, it may take time to load them.
- The maximum limits of playback are 500 music files. The folder structure of your USB flash drive may reduce the maximum limits.
- Stop playback of the USB flash drive before disconnecting it from the USB jack.
- Connect a USB flash drive directly to the USB jack of the unit. Do not use extension cables.
- The unit cannot charge USB flash drive while it is in standby mode.
- $\bullet \ \ \mbox{You can configure the shuffle/repeat settings for playback of contents.}$
- You can register contents as shortcuts and access them directly.

PLAYBACK > Playing back music stored on a USB flash drive

- "Item names and functions of the browse screen" (p.122)
- "Item names and functions of the playback screen" (p.121)
- "Configuring the shuffle setting" (p.174)
- "Configuring the repeat setting" (p.175)
- "Registering a favorite content as shortcut" (p.148)

Playing back music stored on media servers (PCs/NAS)

Playback of music media servers (PCs/NAS)

You can play back music files stored on your media server on the unit.

NOTE

You need to configure the media sharing setting on each device or media server software in advance. For details, refer to the instruction manual for the device or software.

1 Select "SERVER" as the input source.

The browse screen is displayed on the TV. If playback of a music file selected from the unit is ongoing on your media server, the playback screen is displayed.

2 Select a media server.

3 Select an item.

Playback starts and the playback screen is displayed.

NOTE

- · Press NET repeatedly to select the input source.
- To return to the top level while on the browse screen, hold down RETURN on the remote control.
- To switch the screen mode browse/playback/off, press DISPLAY.
- If the audio is interrupted while using the wireless network connection, use the wired network connection.
- · You can configure the shuffle/repeat settings for playback of contents.
- You can also use the Digital Media Controller (DMC) to control playback.
- · You can register contents as shortcuts and access them directly

- "Item names and functions of the browse screen" (p.122)
- "Item names and functions of the playback screen" (p.121)
- "Configuring the shuffle setting" (p.174)
- · "Configuring the repeat setting" (p.175)
- "Setting the use of a Digital Media Controller" (p.273)
- "Registering a favorite content as shortcut" (p.148)

Listening to Internet radio

Selecting an Internet radio station

Select an Internet radio station and start playback.

1 Select "NET RADIO" as the input source.

The browse screen is displayed on the TV.

2 Select an item.

Playback starts and the playback screen is displayed.

NOTE

- · Press NET repeatedly to select the input source.
- To return to the top level while on the browse screen, hold down RETURN on the remote control.
- To switch the screen mode browse/playback/off, press DISPLAY.
- · You may not be able to receive some Internet radio stations.
- The unit uses the airable.Radio service. airable is a service of airable GmbH.
- Service may change or be discontinued without notice. We ask for your understanding in advance that Yamaha Corporation would not bear any liability for it.

- "Adding a "NET RADIO" radio station to the "Favorites" folder" (p.177)
- "Item names and functions of the browse screen" (p.122)
- "Item names and functions of the playback screen" (p.121)

Listening to music streaming services

Listening to a music streaming service

You can enjoy the music content delivered from streaming services.

For details on supported music streaming services, refer to products information of the Yamaha website or the MusicCast CONTROLLER app.

Additional information of music streaming services is also carried in the following website.

https://manual.yamaha.com/av/mc/ss/

NOTE

- You need a pay application in some streaming services. For details, refer to the service provider's website.
- Service may change or be discontinued without notice. We ask for your understanding in advance that Yamaha Corporation would not bear any liability for it.

- "Checking the network information of the unit" (p.269)
- "Adding the unit to the MusicCast network" (p.89)

USEFUL FUNCTIONS

Sleep timer function

Setting the time of the sleep timer

The unit switches to the standby mode after set time passes. Press SLEEP repeatedly to set the time of the sleep timer (120 min, 90 min, 60 min, 30 min, off). When the sleep timer is on, the sleep timer indicator lights up on the front display.



SCENE function

Selecting the input source and favorite settings with one touch (SCENE)

The SCENE function allows you to select the input source and settings registered to the corresponding scene with just one touch. The settings which can be registered are as follows.

[Search tag]#Q04 SCENE


- HDMI Control
- Input
- · Registered Content
- · HDMI Output/Dimmer
- Mode
- Sound
- Surround
- Volume
- Lipsync
- · Speaker Setup
- Zone Interlock

- "Selecting a registered scene" (p.145)
- "Registering a scene" (p.147)

Selecting a registered scene

Press a SCENE number key on the remote control, and the settings registered to the corresponding scene are directly selected. Alternatively, you can also select a registered scene by pressing SCENE switching key repeatedly. The unit turns on automatically when it is in standby mode.

[Search tag]#Q04 SCENE

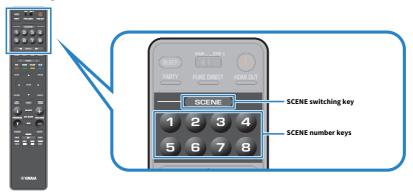

NOTE

- You can also select a registered scene 1 to 4 by touching SCENE (4 numbers) on the front panel.
- The SCENE function can be selected for each zone. Set the zone switch to the zone for which you want to select a registered scene and press a numbered key or press SCENE keys repeatedly.

By default, the following input source is registered for each SCENE number key. You can also check other registered settings in "Scene Setting" in the "Setup" menu.

Main zone

SCENE number key 1: HDMI1

SCENE number key 2: TUNER

SCENE number key 3: AUDIO2

SCENE number key 4: NET RADIO

SCENE number key 5: HDMI2

SCENE number key 6: HDMI3

SCENE number key 7: TV

SCENE number key 8: SERVER

Zone2

SCENE number key 1: AUDIO1

SCENE number key 2: TUNER

SCENE number key 3: AUDIO2

SCENE number key 4: NET RADIO

USEFUL FUNCTIONS > SCENE function

SCENE number key 5: AUDIO3

SCENE number key 6: AUDIO4

SCENE number key 7: USB

SCENE number key 8: SERVER

Related links

"Selecting items to be included as the scene assignments" (p.232)

Registering a scene

You can change the default setting assigned to each SCENE number key. When "NET", "USB" or "TUNER" is selected for the input source, you can register the assigned radio station or content.

[Search tag]#Q04 SCENE

- 1 Prepare the unit's settings you want to assign to a SCENE number key.
- 2 Hold down the desired SCENE number key on the remote control until the following message appears.
 - · On the front display: Setting Complete
 - · On the TV: Setting Complete

This completes the registers.

NOTE

- We recommend registering the scene while playing back the content that you want to register.
- You can change the SCENE name displayed on the front display or on the TV.
- You can configure more detailed scene assignments in "Scene Setting" in the "Setup" menu.
- The SCENE function can be registered in each zone. Set the zone switch to the zone in which you want to register a scene.
- · To use HDMI Control and synchronized operations, you need to configure the HDMI settings on the unit.


- "Selecting items to be included as the scene assignments" (p.232)
- "Renaming the SCENE name" (p.233)
- . "Setting the use of HDMI Control" (p.203)
- "Turning on/off the power of zones" (p.154)

Shortcut function

Registering a favorite content as shortcut

You can register favorite content (such as music stored on media servers and Internet radio stations) as shortcuts.

- 1 Play back a song or a radio station to be registered.
- 2 Hold down MEMORY for 3 seconds.

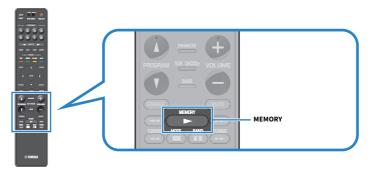

"MEMORY", the shortcut number to which the content will be registered, and "Empty" appear on the front display.

3 Press MEMORY.

The registered shortcut number and "Memorized" appear on the front display.

This completes the registers.

NOTE

- To set a shortcut number to which the content will be registered, use PRESET to select the shortcut number.
- You can register up to 40 kinds of content as shortcuts.
- You can also use the "Favorites" feature to register the currently playing Internet radio station when you select "NET RADIO" as the input source.
- The unit registers Bluetooth or AirPlay as an input source. No individual content can be registered.


Related links

"Adding a "NET RADIO" radio station to the "Favorites" folder" (p.177)


Recalling a registered content as shortcut

Recall a registered content (such as music stored on media servers and Internet radio stations) by selecting the shortcut number.

1 Press BLUETOOTH, NET or USB.

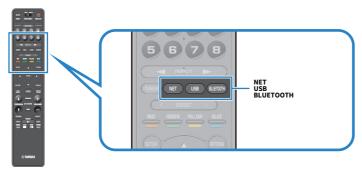

2 Press PRESET to select a desired content.

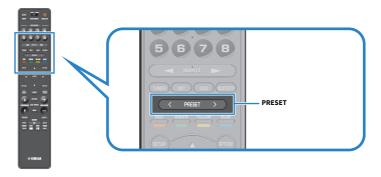

Playback of the selected content starts.

NOTE

- "No Presets" appears on the front display when no content is registered.
- The registered content (songs and Internet radio stations) can be displayed as a list and easily removed by using MusicCast CONTROLLER on your mobile device.

Related links

"Using MusicCast CONTROLLER" (p.88)


ENJOYING IN MULTIPLE ROOMS (ZONES)

Preparing zones

Playback in multiple rooms (multi zone function)

You can play back an input source in the room where the unit is installed and in another room.

You can use the unit according to your favorite, for example, while you are watching TV in the living room (Main zone), another person can listen to radio in the study room (Zone2).

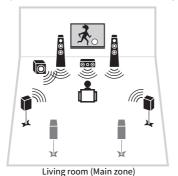



Study room (Zone2)

NOTE


- You can select different input sources in the room where the unit is installed (Main zone) and in another room (zone).
- Two methods are available; using the unit's internal amplifier or using an external amplifier.

- "Multi-zone configuration examples" (p.151)
- "Turning on/off the power of zones" (p.154)
- "Basic procedure in zone" (p.155)


Multi-zone configuration examples

You can enjoy music using speakers placed in other rooms.

■ Using SPEAKERS terminals

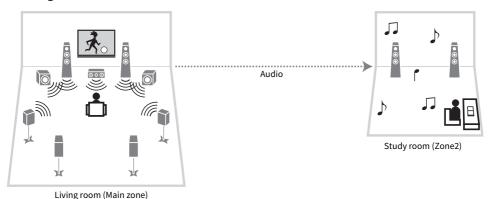

■ Using ZONE OUT jacks

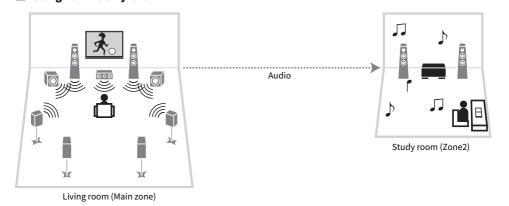

Related links

"Connecting zone speakers using the unit's internal amplifier" (p.152)

Connecting zone speakers

Connecting zone speakers using the unit's internal amplifier

Connect zone speakers to the unit with speaker cables. And according to the speaker's connection, change your speaker configuration setting.

NOTICE

- Unplug the unit's power cable from an AC wall outlet before connecting the speakers.
- 1 Connect zone speakers to the EXTRA SP1 or EXTRA SP2 terminals.
- 2 Set "Power Amp Assign" in the "Setup" menu.


- "7.1 +1Zone" (p.58)
- "5.1.2 +1Zone" (p.60)
- "Setting your speaker system" (p.190)

Connecting zone speakers using an external amplifier

Connect the external amplifier placed in zone to the unit with a stereo pin cable. You can adjust the volume for zone output with the unit. When using an external amplifier with volume control, set "Volume" in "Zone2" in the "Setup" menu to "Fixed".

NOTICE

• Unplug the unit's power cable from the AC wall outlet before connecting an external amplifier.

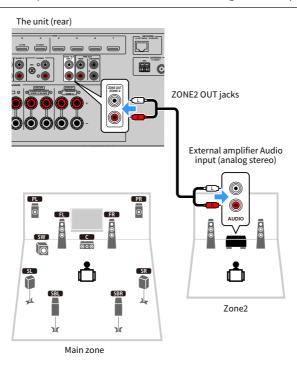

Related links

"Setting the use of volume adjustments for zone output" (p.235)

Operating zones

Turning on/off the power of zones

Switch the power of each zone between on and off.

- 1 Set the zone switch on the remote control to the zone that you want to operate.
- **2** Press ().

Each time you press the key, you can turn on/off the zone.

When the zone is turned on, "ZONE" lights up on the front panel.

NOTE

- If all of the zones are turned off, the unit switches to the standby mode.
- You can switch the power of the zone in the "Front Display" menu.

- "Part names and functions of the front panel" (p.24)
- "Setting the power of each zone to on/standby" (p.286)

Basic procedure in zone

Basic procedure for playback in zone is as follows. The zone selected by the zone switch can be operated.

- 1 Turn on the zone.
- 2 Turn on the external devices connected to the unit.
- 3 Use the input selection keys to select an input source.
- 4 Start playback on the external device or select a radio station.
- **5** Press VOLUME to adjust the volume.

NOTICE

• To avoid unexpected noise, never play back DTS-CDs in Zone2.

NOTE

- You cannot select Bluetooth, USB and network sources exclusively for each zone. For example, if you select "SERVER" for Zone2 when "USB" is selected for the Main zone, the input source for the Main zone also switches to "SERVER".
- The zone input automatically switches in conjunction with the input source selected in the Main zone when "Main Zone Sync" is selected as the zone input.
- To adjust the zone volume, press VOLUME or MUTE when using the unit's internal amplifier.
- · Refer to the instruction manual for the external device.

- "Turning on/off the power of zones" (p.154)
- "Other procedure in zone" (p.156)

Other procedure in zone

Other procedure in every zone is as follows.

- Press SCENE key to select the input source and settings with just one touch.
- To set the sleep timer (120 min, 90 min, 60 min, 30 min, off), press SLEEP repeatedly. The zone output will be disabled after a specified period of time.
- To enable the Compressed Music Enhancer function, press ENHANCER.

NOTE

In zone, to play back DSD audio and the audio signal whose sampling frequency is 352.8 kHz/384 kHz, select "Main Zone Sync" as the zone input or use the party mode.

- "Selecting the input source and favorite settings with one touch (SCENE)" (p.144)
- "Enjoying more powerful sound to the audio source (Compressed Music Enhancer)" (p.114)
- "Enjoying the same source in multiple rooms (party mode)" (p.157)

Enjoying the same source in multiple rooms (party mode)

The party mode allows you to play back in all zones the same music that is being played back in the Main zone. During the party mode, stereo playback is automatically selected for all zones.

Each time you press PARTY, the party mode is turned on or off.

Related links

"Setting the use of switching to the party mode on zone" (p.244)

CONFIGURATIONS

Configuring the unit

Using the menu

The unit is equipped with following menus.

"Option" menu:

You can configure playback settings according to the input source currently being played back. Operate this menu displayed on the TV with the remote control.

"Setup" menu:

You can configure the unit's various functions. Operate this menu displayed on the TV with the remote control.

"Front Display" menu:

You can configure the unit's system settings. Operate this menu displayed on the front display using the front panel.

NOTE

- The "Option" menu and the "Setup" menu displayed on the TV are the independent operation of the "Front Display" menu.
- You can operate the menu on the TV with the remote control, while you can operate the menu on the front display using the front panel.


- "Option menu items" (p.161)
- "Setup menu items" (p.181)
- "Front Display menu items" (p.284)

Configuring playback settings for different playback sources (Option menu)

Basic operation of the Option menu

Perform the following basic procedure to operate the "Option" menu. Operate this menu displayed on the TV with the remote control.

1 Press OPTION.

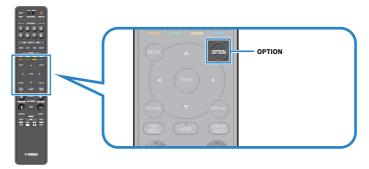



TV screen

- 2 Select an item.
- **3** Select a setting.
- 4 Press OPTION.

This completes the settings.

CONFIGURATIONS > Configuring playback settings for different playback sources (Option menu)

Related links

"Default settings of the Option menu" (p.381)

Option menu items

Use the following table to configure playback settings of the unit.

Item		Page
YPAO Volume	YPAO Volume	p.162
	Adaptive DRC	p.163
DCD/Common d	Adaptive DSP Level	p.164
DSP/Surround	Enhancer	p.165
Volume Trim	Input Trim	p.166
volume i rim	Subwoofer Trim	p.167
Lipsync	Lipsync	p.168
	Format	p.169
	Channel In	p.169
Audio Signal Information	Channel Out	p.169
	Sampling	p.169
	Dialogue	p.169
	Video In	p.170
Video Signal Information	Video Out	p.170
	Color Format	p.170
Audio In	Audio In	p.171
Video Out	Video Out	p.172
Auto Play		p.173
Shuffle	Shuffle	p.174
Repeat	Repeat	p.175
Volume Interlock	Interlock	p.176
Add to favorites		p.177
Remove from favorites		p.178

NOTE

Available items vary depending on the selected input source.

Configuring the volume automatically based on the YPAO measurement results

Adjusting the high- and low-frequency levels automatically according to the volume

Selects whether to adjust the high- and low-frequency levels to the volume automatically. If this function is set to "On", you can enjoy natural sounds even at low volume. YPAO Volume works effectively after the YPAO measurement.

Option menu

"YPAO Volume" > "YPAO Volume"

Settings

Off	Disables YPAO Volume.
On	Enables YPAO Volume.

NOTE

- We recommend enabling both "YPAO Volume" and "Adaptive DRC" when you are listening at lower volumes or at night.
- "YPAO Volume" is automatically set to "On" after the YPAO measurement.

- "Flow of the speaker configurations" (p.92)
- "Adjusting the dynamic range automatically" (p.163)
- "Basic operation of the Option menu" (p.159)

Adjusting the dynamic range automatically

Selects whether to adjust the dynamic range (from maximum to minimum) to the volume automatically. If this function is set to "On", it is useful for listening to playback at a low volume at night.

Option menu

"YPAO Volume" > "Adaptive DRC"

Settings

Off	Does not adjust the dynamic range automatically.
On	Automatically adjusts the dynamic range.

NOTE

We recommend enabling both "YPAO Volume" and "Adaptive DRC" when you are listening at lower volumes or at night.

- "Adjusting the high- and low-frequency levels automatically according to the volume" (p.162)
- "Basic operation of the Option menu" (p.159)

Configuring DSP/Surround

Adjusting the sound field effect level automatically

Selects whether to automatically adjust the effect level of the sound program.

Option menu

"DSP/Surround" > "Adaptive DSP Level"

Settings

Off	Does not adjust the effect level automatically.
On	Adjusts the effect level automatically depending on the YPAO measurement results and volume adjustments.

Related links

Setting Compressed Music Enhancer

Selects whether to use Compressed Music Enhancer. You can also use ENHANCER on the remote control to enable/disable Compressed Music Enhancer.

Option menu

"DSP/Surround" > "Enhancer"

Settings

Off	Disables Compressed Music Enhancer.
On	Enables Compressed Music Enhancer.

NOTE

This setting is applied separately to each input source.

- "Enjoying more powerful sound to the audio source (Compressed Music Enhancer)" (p.114)
- "Basic operation of the Option menu" (p.159)

Correcting volume differences during playback

Correcting volume differences between input sources

Corrects volume differences between input sources. If you are bothered by volume differences when switching between input sources, use this function to correct it.

Option menu

"Volume Trim" > "Input Trim"

Setting range

-6.0 dB to +6.0 dB

NOTE

This setting is applied separately to each input source.

Related links

Adjusting the subwoofer volume

Fine-adjusts the subwoofer volume.

Option menu

"Volume Trim" > "Subwoofer Trim"

Setting range

-6.0 dB to +6.0 dB

Related links

Enabling Lipsync adjustment

Selects whether to use the adjustment configured in "Lipsync" in the "Setup" menu.

Option menu

"Lipsync" > "Lipsync"

Settings

Off	Disables the "Lipsync" adjustment.
On	Enables the "Lipsync" adjustment.

NOTE

This setting is applied separately to each input source.

- "Setting the adjustment method of the Lipsync function" (p.222)
- "Basic operation of the Option menu" (p.159)

Checking the audio signal information

Displays information about the audio signal.

Option menu

"Audio Signal Information"

Format	Audio format of the input signal	
Channel In	The number of source channels in the input signal (front/surround/LFE)	
	For example, "3/2/0.1" means 3 front channels, 2 surround channels, and LFE.	
output Channel Out	The number of signal output channels and the speaker terminals from which signals are output	
	For example, "5.1.2" means standard 5.1-channel plus 2 channels for overhead speaker channels.	
Sampling	The number of samples per second of the input digital signal	
Dialogue	The dialogue normalization level of the input bitstream signal	

NOTE

You can also check which speakers are currently outputting sound by "Output Channel" information on the front display.



- "Selecting the input information displayed on the front display" (p.28)
- "Basic operation of the Option menu" (p.159)

Checking the video signal information

Displays information about the video signals.

Option menu

"Video Signal Information"

Video In	Type and resolution of the input video signal
Video Out	Type and resolution of the output video signal
Color Format	Color format of the video signal

Related links

Combining an audio input jack with a HDMI input jack

Selects the audio input jack to play back together with a HDMI input jack. You can play back HDMI video with audio via an audio input jack except HDMI input jack.

After select HDMI you want to set as the input source, select an audio input jack in this menu.

Option menu

"Audio In" > "Audio In"

Settings

AUDIO 1-5

Video/audio input jacks available on the unit

Output jacks on video device		Input jacks on the unit	
Video	Audio	Video	Audio
НДМІ	Digital optical	HDMI 1-7	AUDIO 1
	Digital coaxial	HDMI 1-7	AUDIO 2
	Analog stereo	HDMI 1-7	AUDIO 3-5

[&]quot;Basic operation of the Option menu" (p.159)

Selecting a video source to be displayed with the selected audio source

Selects a video source to be displayed with the selected audio source. You can watch the video from a different source while listening to the radio and so on.

Option menu

"Video Out" > "Video Out"

Settings

Off	Does not output video.
HDMI 1-7	Outputs video input through the corresponding video input jack.

NOTE

In "Video Out" menu, you can select a video source to be displayed with the input only audio except HDMI.

Related links

Setting the use of Auto Play function

Selects whether to use Auto Play function in the content such as streaming services.

Option menu

"Auto Play"

Settings

Off	Disables Auto Play function.
On	Starts automatically to play back the last content which you played back.
Auto	Starts automatically to play back the content which only you played back at setting the unit to standby mode.

NOTE

- In some input sources, you might not select "On" or "Auto".
- In some input sources or content, you might not enable Auto Play function.

Related links

Configuring the shuffle setting

Configures the shuffle setting for playback.

Option menu

"Shuffle" > "Shuffle"

Settings

Off	Turns off the shuffle function.
On	Plays back songs in the current album (folder) in random order.

NOTE

This setting is available only when "USB" or "SERVER" is selected as the input source.

Related links

Configuring the repeat setting

Configures the repeat setting for playback.

Option menu

"Repeat" > "Repeat"

Settings

Off	Turns off the repeat function.
One	Plays back the current song repeatedly.
All	Plays back all songs in the current album (folder) repeatedly.

NOTE

This setting is available only when "USB" or "SERVER" is selected as the input source.

Related links

Setting the use of volume control via AirPlay/Bluetooth

Selects whether to use volume control from AirPlay devices and Bluetooth devices. If other than "Off" is set, you can adjust the unit's volume from the AirPlay devices and Bluetooth devices.

Option menu

"Volume Interlock" > "Interlock"

Settings

Off	Disables volume control from AirPlay/Bluetooth devices.
Limited	Enables volume control within the limited range (-80.0 dB to -20.0 dB [0.5 to 60.5] and mute).
Full	Enables volume control in the full range (-80.0 dB to +16.5 dB [0.5 to 97.0] and mute).

NOTE

Some Bluetooth devices may not control the unit's volume.

Related links

Adding a "NET RADIO" radio station to the "Favorites" folder

When you select "NET RADIO" as the input source, you can register the currently playing radio station to the "Favorites" folder.

On the playback screen, the current station is added to the "Favorites" folder.

On the browse screen, the station selected in the list is added to the "Favorites" folder.

Option menu

"Add to favorites"

NOTE

- Radio stations registered to favorites are displayed with "★".
- You can register Internet radio stations as shortcuts.

- "Removing a radio station from the "Favorites" folder" (p.178)
- "Registering a favorite content as shortcut" (p.148)

Removing a radio station from the "Favorites" folder

Removes a radio station from the "Favorites" folder. On the browse screen, select the station to be removed in advance.

Option menu


"Remove from favorites"

Configuring various functions (Setup menu)

Basic operation of the Setup menu

Perform the following basic procedure to operate the "Setup" menu. Operate this menu displayed on the TV with the remote control.

1 Press SETUP.

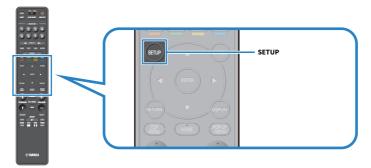

2 Select a menu.



- 3 Select an item.
- 4 Select a setting.
- **5** Press SETUP.

This completes the settings.

CONFIGURATIONS > Configuring various functions (Setup menu)

NOTE

- If new firmware is available, the message screen appears.
- If new firmware is available, the envelope icon (≥) appears in the "Setup" menu.

- "Updating the unit's firmware via the network" (p.300)
- "Default settings of the Setup menu" (p.382)

Setup menu items

Speaker Settings

Item		Page
Power Amp Assign		p.190
	Subwoofer	p.191
	Front	p.192
	Center	p.192
	Surround	p.192
	Surround Back	p.192
Configuration	Presence	p.192
	Layout	p.193
	Crossover	p.194
	Subwoofer Phase	p.195
	Extra Bass	p.196
	Virtual CINEMA FRONT	p.197
Distance		p.198
Level		p.199
Equalizer		p.200
Speaker Impedance		p.201
Test Tone		p.202

HDMI Settings

Item	Page
HDMI Control	p.203
Audio Output	p.204
Standby Through	p.205
4K Upscaling	p.206
HDCP Version	p.207
Standby Sync	p.208
ARC	p.209
HDMI Video Format	p.210

Sound Settings

	Page
	p.211
(sound program)	p.212
Surround Decode	p.214
Center Spread	p.215
Center Image	p.216
Level	p.217
Front / Rear Balance	p.218
Left / Right Balance	p.219
Height Balance	p.220
Monaural Mix	p.221
Select	p.222
Adjustment	p.223
Dialogue Level	p.224
DTS Dialogue Control	p.225
Dialogue Lift	p.226
Dynamic Range	p.227
Max Volume	p.228
Initial Volume	p.229
VSBS	p.230
	p.231
	Surround Decode Center Spread Center Image Level Front / Rear Balance Left / Right Balance Height Balance Monaural Mix Select Adjustment Dialogue Level DTS Dialogue Control Dialogue Lift Dynamic Range Max Volume Initial Volume

Scene Settings

Item	Page
Scene Setting	p.232
Scene Rename	p.233

Multi Zone Settings

Item			Page
Information			p.234
	Volume	Volume	p.235
		Max Volume	p.236
		Initial Volume	p.237
		Left / Right Balance	p.238
(zone)	Sound Mode	Monaural	p.239
		Enhancer	p.240
		Extra Bass	p.241
	Tone Control	Tone Control	p.242
	Audio Delay	Audio Delay	p.243
Party Mode Set			p.244
Zone Rename			p.245

Function Settings

Item			Page
	Input Rename		p.246
Input Setting	Input Skip		p.248
	TV Audio Input		p.249
DSP Skip			p.250
T.:	Trigger Mode		p.251
Trigger Output	Target Zone		p.254
		Dimmer	p.255
	Dil C	Volume	p.256
	Display Settings	Short Message	p.257
User Interface		Position	p.258
	Touch Sound		p.259
	Remote Color Key		p.260
	Memory Guard		p.261
F.C.O.	Auto Power Standby		p.262
ECO	ECO Mode		p.263
Tuner	Frequency Step		p.264
Initialization			p.265
Backup/Restore			p.266
Firmware Update			p.268

Network Settings

Item	Page
Information	p.269
Network Connection	p.270
IP Address	p.272
DMC Control	p.273
Network Standby	p.274
Network Name	p.275
MusicCast Link Power Interlock	p.276

Bluetooth Settings

Item		Page
Bluetooth		p.277
Audio Receive	Disconnect	p.278
	Bluetooth Standby	p.279
Audio Send	Transmitter	p.280
	Device Search	p.281

Language Setting

Item	Page
Language	p.282

Configuring the speaker settings

Setting your speaker system

Selects the setting according to the speakers that are connected.

Setup menu

"Speaker" > "Power Amp Assign"

Settings

Basic	A normal speaker system.
7.1 +1Zone	Zone speakers in addition to the 7.1 system in the Main zone.
5.1.2 +1Zone	Zone speakers in addition to the 5.1.2 system in the Main zone.
BI-AMP	Front speakers that support bi-amp connections.

- "BI-AMP" (p.62)
- "Connecting zone speakers using the unit's internal amplifier" (p.152)
- "Basic operation of the Setup menu" (p.179)

Setting the use of a subwoofer

Selects the setting according to the use of your subwoofer.

Setup menu

"Speaker" > "Configuration" > "Subwoofer"

Settings

	One or two subwoofers are connected.
Use	The subwoofer will produce LFE (low-frequency effect) channel audio and low-frequency components from other channels.
None	No subwoofer is connected.
	The front speakers will produce low-frequency components.

[&]quot;Basic operation of the Setup menu" (p.179)

Setting the use of each speaker and its size

Selects the setting according to the use and size of your speakers.

Setup menu

"Speaker" > "Configuration" > (speaker)

Settings

Small	Small speakers. As a general guideline, the woofer diameter is smaller than 16 cm (6.1/4").
	The subwoofer will produce low-frequency components (configurable in "Crossover").
Large	Large speakers. As a general guideline, the woofer diameter is larger than 16 cm (6.1/4").
	The speaker will produce all of the frequency components.
None	No speaker is connected.
	Channel audio of the speaker set to "None" will be produced from the other speakers.

NOTE

- The speaker size of the front speakers is automatically set to "Large" when "Subwoofer" in the "Setup" menu is set to "None".
- Be sure to connect the front left and right speakers.

Related links

- "Setting the crossover frequency of the low-frequency components" (p.194)
- "Setting the use of a subwoofer" (p.191)
- "Basic operation of the Setup menu" (p.179)

■ When no speaker in a speaker type is connected

"Configuration" of the speaker type, in which no speaker is connected, in the "Speaker" is set to "None". The other speakers will produce its channel audio.

- Center channel audio
 - The front speakers will produce center channel audio.
- · Surround channel audio
 - The front speakers will produce surround channel audio. Virtual CINEMA DSP works in this case.
- · Surround back channel audio
 - The surround speakers and subwoofer (or front speakers) will produce surround back channel audio.
- · Presence channel audio
 - The surround speakers and subwoofer (or front speakers) will produce presence channel audio.

Setting the layout of the front presence speakers

Selects a presence layout when front presence speakers are used. This setting facilitates the optimization of the sound field effect.

Setup menu

"Speaker" > "Configuration" > "Layout"

Settings

Front Height	The front presence speakers are installed on the front wall.
Overhead	The front presence speakers are installed to the ceiling.
Dolby Enabled SP	The Dolby Enabled speakers are used as the front presence speakers.

- "Setting the use of each speaker and its size" (p.192)
- "Front presence speaker layout" (p.364)
- "Basic operation of the Setup menu" (p.179)

Setting the crossover frequency of the low-frequency components

Sets the lower limit of the low-frequency components that can be output from a speaker whose size is set to "Small".

A frequency sound lower than the specified value will be produced from the subwoofer or front speakers.

Setup menu

"Speaker" > "Configuration" > "Crossover"

Settings

40 Hz, 60 Hz, 80 Hz, 90 Hz, 100 Hz, 110 Hz, 120 Hz, 160 Hz, 200 Hz

NOTE

When the volume and crossover frequency are adjustable on your subwoofer, set your subwoofer as follows.

- · The volume is set to half.
- · The crossover frequency is set to maximum.

- "Setting the use of each speaker and its size" (p.192)
- "Basic operation of the Setup menu" (p.179)

Setting the phase of the subwoofer

Sets the phase of the subwoofer. When the bass sound is lacking, switch the subwoofer phase.

Setup menu

"Speaker" > "Configuration" > "Subwoofer Phase"

Settings

Normal	Does not reverse the subwoofer phase.
Reverse	Reverses the subwoofer phase.

- "Setting the use of a subwoofer" (p.191)
- "Basic operation of the Setup menu" (p.179)

Setting the use of Extra Bass

Uses Extra Bass to enhance bass sound. If this function is set to "On", you can enjoy sufficient bass sounds, regardless of the size of the front speakers and the presence or absence of the subwoofer.

Setup menu

"Speaker" > "Configuration" > "Extra Bass"

Settings

Off	Disables Extra Bass.
On	Enables Extra Bass.

NOTE

You can also use BASS on the remote control to enable/disable Extra Bass.

Related links

Setting the use of Virtual CINEMA FRONT

Selects whether to use Virtual CINEMA FRONT.

Setup menu

"Speaker" > "Configuration" > "Virtual CINEMA FRONT"

Settings

Off	Disables Virtual CINEMA FRONT.
On	Enables Virtual CINEMA FRONT.

NOTE

This setting is not available when "Surround" in the "Setup" menu is set to "None".

- "Enjoying surround sound with 5 speakers placed in front (Virtual CINEMA FRONT)" (p.108)
- "Setting the use of each speaker and its size" (p.192)
- "Basic operation of the Setup menu" (p.179)

Setting the distance between each speaker and the listening position

Sets the distance so that sounds from the speakers reach the listening position at the same time.

Setup menu

"Speaker" > "Distance" > (speaker)

Setting range

0.30 m to 24.00 m (1.0 ft to 80.0 ft)

NOTE

Select the unit of distance from "Meter" or "Feet" in "Unit".

- "Setting the use of each speaker and its size" (p.192)
- "Basic operation of the Setup menu" (p.179)

Adjusting the volume of each speaker

Adjusts the volume of each speaker to suit your listening position.

Setup menu

"Speaker" > "Level" > (speaker)

Setting range

-10.0 dB to +10.0 dB

NOTE

Test tone output helps you to adjust the speaker balance while confirming its effect.

- "Setting the use of each speaker and its size" (p.192)
- "Outputting test tones" (p.202)
- "Basic operation of the Setup menu" (p.179)

Setting the equalizer

Selects the type of equalizer to adjust the tone.

Setup menu

"Speaker" > "Equalizer" > "EQ Select"

Settings

GEQ	Adjusts the equalizer manually.
YPAO:Flat	Adjusts each speaker to achieve the same characteristics.
YPAO:Front	Adjusts each speaker to achieve the same characteristics as the front speakers.
YPAO:Natural	Adjusts each speaker to achieve the same characteristics with lowered high frequency range.
Off	Does not use the equalizer.

When selecting "GEQ"

- 1 Select "Channel" and then select the desired speaker channel.
- 2 Select the desired band (frequency) and adjust the gain.

Setting range

-6.0 dB to +6.0 dB

3 Press SETUP.

This completes the settings.

NOTE

- Test tone output helps you to adjust the equalizer while confirming its effect
- "YPAO:Flat", "YPAO:Front", and "YPAO:Natural" are available only when the YPAO has been performed.

- "Outputting test tones" (p.202)
- "Flow of the speaker configurations" (p.92)
- "Basic operation of the Setup menu" (p.179)

Setting the speaker impedance

Sets the unit's speaker impedance settings depending on the impedance of the speakers connected.

Setup menu

"Speaker" > "Speaker Impedance"

Settings

COMIN	For 6-ohm or higher speakers.
6 Ω MIN	You can also connect 4-ohm speakers for the front speakers.
8 Ω ΜΙΝ	For 8-ohm or higher speakers.

Related links

Outputting test tones

Outputs the test tone when you adjust the speaker balance or equalizer while confirming its effect.

Setup menu

"Speaker" > "Test Tone"

Settings

Off	Does not output test tones.
On	Outputs test tones.

Related links

Configuring the HDMI settings

Setting the use of HDMI Control

Selects whether to use HDMI Control which operate HDMI Control-compatible devices.

Setup menu

"HDMI" > "HDMI Control"

Settings

Off	Disables HDMI Control.
On	Enables HDMI Control.
	The settings in "Standby Sync" and "ARC" are applied.

NOTE

You need to perform the HDMI Control link setup after connecting HDMI Control-compatible devices.

Related links

Setting the output of HDMI audio to the TV's speakers

Selects whether to output HDMI audio to the speakers of a TV connected via the HDMI OUT jack.

Setup menu

"HDMI" > "Audio Output"

Settings

Off	Disables audio output from the TV.
On	Enables audio output from the TV.

NOTE

This setting is available only when "HDMI Control" in the "Setup" menu is set to "Off".

- "Setting the use of HDMI Control" (p.203)
- "Basic operation of the Setup menu" (p.179)

Setting the use of HDMI Standby Through

Selects whether to output video/audio, which is input through HDMI jacks, to the TV when the unit is in standby mode.

Setup menu

"HDMI" > "Standby Through"

Settings

Off	Does not output video/audio to the TV.
On	Outputs video/audio to the TV. The unit consumes more power than when "Off" or "Auto" is selected.
Auto	Automatically selects whether to output video/audio depending on the status of the connected device.

NOTE

"Off" is not selectable when "HDMI Control" is set to "On".

- "Setting the use of HDMI Control" (p.203)
- "Basic operation of the Setup menu" (p.179)

Setting the use of 4K upscaling of the HDMI video signal

Selects whether to use 4K upscaling of the HDMI video signal. If this function is set to "On", 1080p content is displayed at 4K resolution.

Setup menu

"HDMI" > "4K Upscaling"

Settings

Off	Disables the 4K upscaling.
On	Enables the 4K upscaling.

Related links

Setting the version of HDCP used on the HDMI input jacks

Selects the HDCP version of the HDMI input jacks. You can set this function for watching 4K video content if necessary. This setting is applied separately to each HDMI input jack.

Setup menu

"HDMI" > "HDCP Version" > (HDMI input)

Settings

Auto	Automatically sets the version of HDCP according to content.
1.4	Sets the version of HDCP to always be 1.4.

Related links

Linking the standby modes of the unit and the TV

Selects whether to use HDMI control to link the unit's standby mode to the TV's power when "HDMI Control" in the "Setup" menu is set to "On".

Setup menu

"HDMI" > "Standby Sync"

Settings

Off	Does not link the unit's standby mode.	
On	Sets the unit to standby mode when the TV is turned off.	
Auto	Sets the unit to standby mode when the TV is turned off only when the unit is receiving TV audio or HDMI signals.	

- "Setting the use of HDMI Control" (p.203)
- "Basic operation of the Setup menu" (p.179)

Setting the use of ARC

Selects whether to output TV audio to the speakers connected to the unit when "HDMI Control" in the "Setup" menu is set to "On".

Setup menu

"HDMI" > "ARC"

Settings

Off	Disables ARC.
On	Enables ARC.

NOTE

You do not need to change "On" (default setting) normally. In case noises are produced because TV audio signals input to the unit are not supported by the unit, set to "Off". And use the TV's speakers.

- "Setting the use of HDMI Control" (p.203)
- "Basic operation of the Setup menu" (p.179)

Setting the HDMI 4K signal format

Selects the format of signals input/output at the unit when HDMI 4K compatible TV and playback device are connected to the unit. This setting is applied separately to each HDMI input jack.

Setup menu

"HDMI" > "HDMI Video Format" > (HDMI input)

Settings

Mode 1	Inputs/outputs 4K signals shown in the following table.
Mode 2	Inputs/outputs 4K signals shown in the following table.

Format

			Mode 1		Mode 2		
		8 bit	10 bit	12 bit	8 bit	10 bit	12 bit
4K/60, 50 Hz	RGB 4:4:4	V	-		-		
	YCbCr 4:4:4	V	-		-		
	YCbCr 4:2:2		~		-		
	YCbCr 4:2:0		V		~	-	
4K/30, 25, 24 Hz	RGB 4:4:4		V		~	-	
	YCbCr 4:4:4		V		~	-	
	YCbCr 4:2:2		V		✓		

NOTE

- Depending on the connected device or HDMI cables, video may not be displayed correctly when "Mode 1" is selected. In this case, select "Mode 2".
- When "Mode 1" is selected, use a Premium High Speed HDMI Cable or Premium High Speed Cable with Ethernet.

Related links

Configuring the sound settings

Adjusting the tone of the audio output

Adjusts the level of high-frequency range (Treble) and low-frequency range (Bass) individually.

Setup menu

"Sound" > "Tone Control"

Setting range

-6.0 dB to +6.0 dB

NOTE

- When both "Treble" and "Bass" are 0.0 dB, "Bypass" appears.
- If you set an extreme value, sounds may not match those from other channels.
- The audio output of the front speakers, center speaker and subwoofers can be adjusted.

Related links

Adjusting the sound field effect level

Adjusts the effect level of the sound program to enhance or reduce the sound field effect. Select the sound program and press ENTER for adjusting.

Setup menu

"Sound" > "DSP Parameter" > (sound program)

Setting range

Item	Function	Settings	
DSP Level	Adjusts the effect level of the sound program (to enhance or reduce the sound field effect).	-6 dB-+3 dB	
Initial Delay	Adjusts the delay between the direct sound and presence sound field generation. Higher value delays the sound field generation, and lower value quickens it.	1 ms-99 ms	
	The presence sound field is created in the front side.		
Room Size	Adjusts the broadening effect of the presence sound field. Higher value enhances the broadening effect, and lower value reduces it.	0.1-2.0	
	The presence sound field is created in the front side.		
Liveness	Adjusts the loss of the presence sound field. Higher value strengthens the reflectivity, and lower value weakens it.	0-10	
	The presence sound field is created in the front side.		
	Adjusts the decay time of the reverberant sound.		
Reverb Time	Higher value enriches the reverberant sound, and lower value has clear sound.	1.0 s-5.0 s	
Reverb Delay	Adjusts the delay between the direct sound and reverberant sound generation. Higher value delays the reverberant sound generation, and lower value quickens it.	0 ms-250 ms	
	Adjusts the volume of the reverberant sound.		
Reverb Level	Higher value strengthens the reverberant sound, and lower value weakens it.	0%-100%	
Surround Initial Delay	Adjusts the delay between the direct sound and surround sound field generation. Higher value delays the sound field generation, and lower value quickens it.	1 ms-49 ms	
	The surround sound field is created in the rear side of right and left.		
Surround Room Size	Adjusts the broadening effect of the surround sound field. Higher value enhances the broadening effect, and lower value reduces it.	0.1-2.0	
	The surround sound field is created in the rear side of right and left.		
Surround Liveness	Adjusts the loss of the surround sound field. Higher value strengthens the reflectivity, and lower value weakens it.	0-10	
	The surround sound field is created in the rear side of right and left.		
Surround Back Initial Delay	Adjusts the delay between the direct sound and surround back sound field generation. Higher value delays the sound field generation, and lower value quickens it.	1 ms-49 ms	
	The surround back sound field is created in the rear side.		

CONFIGURATIONS > Configuring various functions (Setup menu)

Item	Function	Settings
Surround Back Room Size	Adjusts the broadening effect of the surround back sound field. Higher value enhances the broadening effect, and lower value reduces it.	0.1-2.0
	The surround back sound field is created in the rear side.	
Surround Back Liveness	Adjusts the loss of the surround back sound field. Higher value strengthens the reflectivity, and lower value weakens it.	0-10
	The surround back sound field is created in the rear side.	

NOTE

Available setting items and set values vary depending on the sound program.

- "Enjoying sound field effects optimized for the type of content" (p.105)
- "Basic operation of the Setup menu" (p.179)

Selecting the surround decoder used in the program

Selects a surround decoder. It is used when "Surround Decode" is selected by PROGRAM on the remote control.

Setup menu

"Sound" > "Surround Decoder" > "Surround Decode"

Settings

	Uses the decoder automatically selected by input source.			
Auto	The DTS Neural:X decoder is selected for DTS sources and the Dolby Surround decoder is selected for other sources.			
	Dolby Surround decoder.			
 ■ Dsur	Expands the sound using a method optimized for the layout of the installed speakers. A real acoustic space (including overhead) will be created especially when object-based audio (such as Dolby Atmos content) is played.			
	DTS Neural:X decoder.			
Neural:X	Expands the sound using a method optimized for the layout of the installed speakers. A real acoustic space (including overhead) will be created especially when object-based audio (such as DTS:X content) is played.			
Neo:6 Cinema	DTS Neo:6 decoder (or DTS-ES Matrix decoder).			
	It is suitable for movies. Sounds will be output from the surround/surround back speakers.			
Neo:6 Music	DTS Neo:6 decoder (or DTS-ES Matrix decoder).			
	It is suitable for music. Sounds will be output from the surround/surround back speakers.			

NOTE

- You can adjust the surround decoder parameters.
- The selected surround decoder may not work for some input sources.
- We recommend Dolby Surround while network streaming is Dolby contents.
- The Neural:X decoder does not work for Dolby Digital Plus or Dolby TrueHD signals. Select "Auto" or "Dolby TrueHD signals.
- When the Dolby Surround decoder or the Neural:X decoder is selected, virtual surround processing does not work.

- "Setting the use of Center Spread" (p.215)
- "Adjusting the center localization (broadening effect) of the front sound field" (p.216)
- "Basic operation of the Setup menu" (p.179)

Setting the use of Center Spread

Selects whether to spread the center channel signals from a 2-channel source to left and right when "DDsur" is selected for the surround decoder.

Setup menu

"Sound" > "Surround Decoder" > "Center Spread"

Settings

Off	Disables Center Spread.
On	Enables Center Spread.

NOTE

If you feel the center sound is too strong, set this function to "On".

- "Selecting the surround decoder used in the program" (p.214)
- "Basic operation of the Setup menu" (p.179)

Adjusting the center localization (broadening effect) of the front sound field

Adjusts the center localization (broadening effect) of the front sound field when "Neo:6 Music" is selected for the surround decoder. Higher value strengthens the center localization (less broadening effect) and lower value weakens it (more broadening effect).

Setup menu

"Sound" > "Surround Decoder" > "Center Image"

Setting range

0.0 to 1.0

- "Selecting the surround decoder used in the program" (p.214)
- "Basic operation of the Setup menu" (p.179)

Adjusting the entire volume

Adjusts the entire volume. This setting is effective when "All-Channel Stereo" is selected in the sound programs.

Setup menu

"Sound" > "All-Channel Stereo" > "Level"

Setting range

-5 to +5

Related links

Adjusting the front and rear volume balance

Adjusts the front and rear volume balance. Higher value enhances the front side, and lower value enhances the rear side. This setting is effective when "All-Channel Stereo" is selected in the sound programs.

Setup menu

"Sound" > "All-Channel Stereo" > "Front / Rear Balance"

Setting range

-5 to +5

Related links

Adjusting the left and right volume balance

Adjusts the left and right volume balance. Higher value enhances the right side, and lower value enhances the left side. This setting is effective when "All-Channel Stereo" is selected in the sound programs.

Setup menu

"Sound" > "All-Channel Stereo" > "Left / Right Balance"

Setting range

-5 to +5

Related links

Adjusting the height volume balance

Adjusts the height volume balance using the front presence speakers. Higher value enhances the upside, and lower value enhances the downside. This setting is effective "All-Channel Stereo" is selected in the sound programs.

Setup menu

"Sound" > "All-Channel Stereo" > "Height Balance"

Setting range

0 to 10

NOTE

The front presence speakers do not produce sounds when "Height Balance" is set to "0".

Related links

Setting the use of Monaural Mix

Outputs mixed monaural sound. This setting is effective when "All-Channel Stereo" is selected in the sound programs.

Setup menu

"Sound" > "All-Channel Stereo" > "Monaural Mix"

Settings

Off	Disables monaural sound output.
On	Enables monaural sound output.

Related links

Setting the adjustment method of the Lipsync function

Selects the method for adjusting the delay between video and audio output (Lipsync).

Setup menu

"Sound" > "Lipsync" > "Select"

Settings

Manual	Adjusts the delay between video and audio output manually.
Manual	The setting in "Adjustment" is applied to the audio output timing.
Auto	Adjusts the delay between video and audio output automatically.
	This setting is available only when a TV that supports an automatic lipsync function is connected to the unit via HDMI.
	You can fine-adjust the audio output timing in "Adjustment".

- "Adjusting the delay of the Lipsync function" (p.223)
- "Basic operation of the Setup menu" (p.179)

Adjusting the delay of the Lipsync function

Adjusts the delay between video and audio output (Lipsync) manually.

Setup menu

"Sound" > "Lipsync" > "Adjustment"

Setting range

0 ms to 500 ms

NOTE

You can fine-adjust the audio output timing when "Select" in the "Setup" menu is set to "Auto".

- "Setting the adjustment method of the Lipsync function" (p.222)
- "Basic operation of the Setup menu" (p.179)

Adjusting the volume of dialogue sound

Adjusts the volume of dialogue sounds that are hardly heard. Higher value strengthens the dialogue sounds.

Setup menu

"Sound" > "Dialogue" > "Dialogue Level"

Setting range

0 to 3

Related links

Adjusting the volume of dialogue sound during DTS:X™ playback

Adjusts the volume of dialogue sounds that are hardly heard for DTS:X content. Higher value strengthens the dialogue sounds.

Setup menu

"Sound" > "Dialogue" > "DTS Dialogue Control"

Setting range

0 to 6

NOTE

This setting is available only when DTS:X content which supports the DTS Dialogue Control feature is played back.

Related links

Adjusting the perceived height of dialogue sound

Adjusts the perceived height of dialogue sounds when the position (height) of dialogue sound is artificial. Bigger setting value gets the higher position.

If the dialogue sounds as if it is coming from below the screen, you can raise its perceived height by increasing this setting.

Setup menu

"Sound" > "Dialogue" > "Dialogue Lift"

Setting range

0 to 5



NOTE

This setting is available only when one of the following conditions is met.

• One of the sound programs (except for "2ch Stereo" and "All-Channel Stereo") is selected when front presence speakers are used.

Related links

Setting the dynamic range adjustment method

Selects the dynamic range (from maximum to minimum) adjustment method for Dolby Digital and DTS signals playback.

Setup menu

"Sound" > "Volume" > "Dynamic Range"

Settings

Maximum	Produces audio without adjusting the dynamic range.
Standard Optimizes the dynamic range for regular home use.	
	Sets the dynamic range for clear sound even at night or at low volumes.
Minimum/Auto	When playing back Dolby TrueHD signals, the dynamic range is automatically adjusted based on the input signal information.

Related links

Setting the limit value of the volume

Sets the limit value of the volume adjusted by using such as VOLUME keys on the remote control.

Setup menu

"Sound" > "Volume" > "Max Volume"

Setting range

-60.0 dB to +15.0 dB, +16.5 dB [20.5 to 95.5, 97.0]

- "Setting the scale of the volume display" (p.256)
- "Basic operation of the Setup menu" (p.179)

Setting the initial volume for when the unit is turned on

Sets the initial volume when the unit is turned on.

Setup menu

"Sound" > "Volume" > "Initial Volume"

Settings

Off		Sets the volume level when it last entered standby mode.
On	Mute	Mutes the audio output.
	-80.0 dB to +16.5 dB [0.5 to 97.0]	Sets the specified volume level.
		This setting works only when the volume level is set lower than "Max Volume".

- "Setting the scale of the volume display" (p.256)
- "Setting the limit value of the volume" (p.228)
- "Basic operation of the Setup menu" (p.179)

Setting Virtual Surround Back Speaker (VSBS)

Selects whether to create Virtual Surround Back Speaker (VSBS). When VSBS is enabled, the unit creates VSBS using the surround speakers even if no surround back speakers are connected.

Setup menu

"Sound" > "Virtual Speaker" > "VSBS"

Settings

Off	Does not create Virtual Surround Back Speaker (VSBS).
On	Creates Virtual Surround Back Speaker (VSBS).

NOTE

- VSBS is effective only when 6.1/7.1-channel content is played back.
- VSBS, that is working with CINEMA DSP 3D, is not available when the straight decode mode or the pure direct playback mode is
 enabled.

Related links

Setting DTS Format Notification

Informs the BD player about the DTS formats that the unit supports.

Setup menu

"Sound" > "DTS Mode"

Settings

Mode 1	Conforms to the DTS:X standard.
Mode 1	This setting is used normally.
Mode 2	This setting is used if the BD player fails to properly output a DTS signal even when it is playing back DTS-HD or DTS:X content.

Related links

Configuring the scene settings

Selecting items to be included as the scene assignments

Selects items to be included as the scene assignments. You can also view the settings currently assigned to the selected scene.

Setup menu

"Scene" > "Scene Setting"

- 1 Select the SCENE name and press ENTER.
- 2 Select an item and switch between "Enable" and "Disable".



NOTE

- To restore the default settings for the selected scene, select "Reset" and press ENTER.
- · To use HDMI Control and synchronized operations, you need to configure the HDMI settings on the unit.

- "Setting the use of HDMI Control" (p.203)
- · "Registering a scene" (p.147)
- "Basic operation of the Setup menu" (p.179)

Renaming the SCENE name

Changes the SCENE name displayed on the front display or on the TV.

Setup menu

"Scene" > "Scene Rename"

- 1 Select the SCENE name and press ENTER to enter the name edit screen.
- 2 Edit the name.



- 3 Select "OK".
- 4 Press SETUP.

This completes the settings.

NOTE

- · To clear the entry, select "CLEAR".
- To restore the default name, select "RESET".

Related links

Configuring the multi zone settings

Checking the zone information

Displays information about zone.

Setup menu

"Multi Zone" > "Information"

Status	The power on/off for zone	
Input	The input source selected for zone	
Volume	The volume setting for zone	
Treble	The tone control setting (the level of Treble) for zone	
Bass	The tone control setting (the level of Bass) for zone	

[&]quot;Basic operation of the Setup menu" (p.179)

Setting the use of volume adjustments for zone output

Sets volume adjustments for zone output.

If you have connected an external amplifier with volume control to the unit, set this function to "Fixed".

Setup menu

"Multi Zone" > (zone) > "Volume" > "Volume"

Settings

Fixed	Disables volume adjustments for zone output.
Variable	Enables volume adjustments for zone output.

NOTE

This setting is not available depending on the setting in "Power Amp Assign".

- "Setting your speaker system" (p.190)
- "Basic operation of the Setup menu" (p.179)

Setting the zone upper limit of the volume

Sets the zone upper limit of the volume adjusted by using such as VOLUME keys on the remote control.

Setup menu

"Multi Zone" > (zone) > "Volume" > "Max Volume"

Setting range

-60.0 dB to +10.0 dB [20.5 to 90.5]

NOTE

This setting is available only when "Volume" is set to "Variable".

- "Setting the use of volume adjustments for zone output" (p.235)
- "Basic operation of the Setup menu" (p.179)

Setting the zone initial volume for when the unit is turned on

Sets the zone initial volume for when the unit is turned on.

Setup menu

"Multi Zone" > (zone) > "Volume" > "Initial Volume"

Settings

Off		Sets the level at the volume level when it last entered standby mode.
On	Mute	Mutes the audio output.
	-80.0 dB to +10.0 dB [0.5 to 90.5]	Sets the level to the specified volume level.
		This setting works only when the volume level is set lower than "Max Volume".

NOTE

This setting is available only when "Volume" is set to "Variable".

- "Setting the use of volume adjustments for zone output" (p.235)
- "Setting the zone upper limit of the volume" (p.236)
- "Basic operation of the Setup menu" (p.179)

Adjusting the volume balance for zone output

Adjusts the volume balance for zone output. Higher value enhances the right side volume, and lower value enhances the left side volume.

Setup menu

"Multi Zone" > (zone) > "Volume" > "Left / Right Balance"

Setting range

-20 to +20

Related links

Setting the use of monaural sounds for zone output

Selects whether to produce monaural sounds for zone output.

Setup menu

"Multi Zone" > (zone) > "Sound Mode" > "Monaural"

Settings

Off	Does not produce monaural sounds in zone.
On	Produces monaural sounds in zone.

Related links

Setting the use of Compressed Music Enhancer for zone output

Sets Compressed Music Enhancer for zone output. You can also use ENHANCER on the remote control.

Setup menu

"Multi Zone" > (zone) > "Sound Mode" > "Enhancer"

Settings

Off	Disables Compressed Music Enhancer.
On	Enables Compressed Music Enhancer.

Related links

Setting the use of Extra Bass for zone output

Sets Extra Bass for zone output. If Extra Bass is enabled, you can enjoy sufficient bass sounds, regardless of the size of speakers.

Setup menu

"Multi Zone" > (zone) > "Sound Mode" > "Extra Bass"

Settings

Off	Disables Extra Bass.
On	Enables Extra Bass.

Related links

Adjusting the tone for zone output

Adjusts the level of high-frequency range (Treble) and low-frequency range (Bass) for zone output.

Setup menu

"Multi Zone" > (zone) > "Tone Control" > "Tone Control"

Settings

Auto	Adjusts the levels of Treble and Bass automatically in synchronization with the main volume.
Manual	Adjusts the level of Treble and Bass manually.
	The adjusting range is -6.0 dB to +6.0 dB.
Bypass	Does not adjust the level of Treble and Bass.

[&]quot;Basic operation of the Setup menu" (p.179)

Adjusting the time deviation in relation to the Main zone

Adjusts the time deviation (Audio Delay) in relation to the Main zone.

Setup menu

"Multi Zone" > (zone) > "Audio Delay" > "Audio Delay"

Setting range

0 ms to 100 ms

Related links

Setting the use of switching to the party mode on zone

Enables switching to the party mode.

Setup menu

"Multi Zone" > "Party Mode Set" > (target zone)

Settings

Disable	Disables switching to the party mode.
Enable	Enables switching to the party mode.
Епаріе	You can turn on/off the party mode by pressing PARTY on the remote control.

NOTE

When the party mode is turned on, you cannot change the settings.

- "Enjoying the same source in multiple rooms (party mode)" (p.157)
- "Basic operation of the Setup menu" (p.179)

Renaming the zone name

Changes the zone name displayed on the TV.

Setup menu

"Multi Zone" > "Zone Rename"

1 Select a zone name to be renamed.

The cursor moves to the name edit screen.

2 Edit the name.



- 3 Select "OK".
- 4 Press SETUP.

NOTE

- To clear the entry, select "CLEAR".
- To restore the default name, select "RESET".

Related links

Configuring the function settings

Automatically setting the input source names

Automatically sets the input source names depending on the connected external device.

Setup menu

"Function" > "Input Setting" > "Input Rename" > (input)

- 1 Select an input source to be renamed.
- 2 Select "Auto".
- 3 To change another input source name, repeat steps 1 to 2.
- 4 Press SETUP.

This completes the settings.

NOTE

When "Auto" is selected, the created name is saved even after the external device is disconnected. To reset to the default setting, with no connection to the corresponding input jack, switch the setting to "Manual" and then back to "Auto".

Related links

Manually setting the input source names

Manually sets the input source names.

Setup menu

"Function" > "Input Setting" > "Input Rename" > (input)

- 1 Select an input source to be renamed.
- 2 Select "Manual".
- 3 Press ENTER.
- 4 Edit the name.
- 5 Select "OK".
- 6 To change another input source name, repeat steps 1 to 5.
- **7** Press SETUP.

This completes the settings.

NOTE

- To cancel the entry, select "CLEAR".
- To restore the default name, select "RESET".

Related links

Setting input sources to be skipped when operating the INPUT key

Sets which input sources are skipped when operating the INPUT key. You can select the desired input source quickly by using this function.

Setup menu

"Function" > "Input Setting" > "Input Skip" > (input)

Settings

Off	Does not skip the selected input source.
On	Skips the selected input source.

Related links

Setting the audio input jack used for TV audio

Selects an audio input jack, which connected to TV audio output, of the unit.

When you switch the input source of the unit to "TV", the playback of TV audio is as follows.

- Without eARC/ARC function: the TV audio is played back with the audio input jack set for TV audio in "TV Audio Input".
- With eARC/ARC function: the TV audio is played back with eARC/ARC, regardless of setting in "TV Audio Input".

When using ARC function, set "HDMI Control" and "ARC" in the "Setup" menu to "On".

When using eARC function, you do not have to set the ARC function. "HDMI Control" is set if necessary.

Setup menu

"Function" > "Input Setting" > "TV Audio Input"

Settings

AUDIO 1-5

NOTE

You may need setting on the TV. Refer to the instruction manual for the TV.

- "Setting the use of HDMI Control" (p.203)
- "Setting the use of ARC" (p.209)
- "Basic operation of the Setup menu" (p.179)

Setting sound programs to be skipped when operating the PROGRAM keys

Sets which sound programs are skipped when operating the PROGRAM keys. You can select the desired sound program quickly by using this function.

Setup menu

"Function" > "DSP Skip"

Settings

Off	Does not skip the selected sound program.
On	Skips the selected sound program.

NOTE

This setting is applied separately to each sound program.

Related links

Specifying the condition for the TRIGGER OUT jack to function

Specifies the condition for the TRIGGER OUT jack functions which make the external devices synchronize with the unit.

Setup menu

"Function" > "Trigger Output" > "Trigger Mode"

Settings

Power	Synchronizes transmitting/stopping the electronic signal with the power status of the zone specified with "Target Zone".
Source	Synchronizes transmitting/stopping the electronic signal with the input switching in the zone specified with "Target Zone".
	An electronic signal is transmitted according to the setting.
Manual	Sets transmitting/stopping the electronic signal manually.

- "Specifying the zone with which the TRIGGER OUT jack functions are synchronized" (p.254)
- "Specifying the output level of the electronic signal transmitted with each input" (p.252)
- "Switching the output level for electronic signal transmission manually" (p.253)
- "Basic operation of the Setup menu" (p.179)

Specifying the output level of the electronic signal transmitted with each input

Specifies the output level of the electronic signal transmitted with each input when "Trigger Mode" is set to "Source".

Setup menu

"Function" > "Trigger Output" > "Trigger Mode" > "Source" > (input)

Settings

Low	Stops the electronic signal transmission when you switch to the input source specified in this option.
High	Transmits the electronic signal when you switch to the input source specified in this option.

Related links

Switching the output level for electronic signal transmission manually

Switches the output level for electronic signal transmission manually when "Trigger Mode" is set to "Manual". This setting can be used to confirm proper function of the external device connected via the TRIGGER OUT jack.

Setup menu

"Function" > "Trigger Output" > "Trigger Mode" > "Manual"

Settings

Low	Stops the electronic signal transmission.
High	Transmits 12 volts of electronic signal.

Related links

Specifying the zone with which the TRIGGER OUT jack functions are synchronized

Specifies the zone with which the TRIGGER OUT jack functions are synchronized when "Trigger Mode" is set to "Power" or "Source".

Setup menu

"Function" > "Trigger Output" > "Target Zone"

Settings

Main	Synchronizes with the Main zone.
(zone name)	Synchronizes with each zone.
All	Synchronizes with the Main or each zone.

Related links

Adjusting the brightness of the front display

Adjusts the brightness of the following on the front panel. Higher value brightens the front display.

- · Front display
- Indicators (ZONE, PURE DIRECT)

Setup menu

"Function" > "User Interface" > "Display Settings" > "Dimmer"

Front Display menu

"Dimmer"

Setting range

-5 to 0

NOTE

- The front display is turned off by "-5". The default setting is "-2".
- Though you set "Dimmer" to "-5", short message and menu on the front display will be displayed in brightness "-4".
- If you set "Dimmer" to "-5", it is incomprehensible that the power of the unit is set to on. Pay attention to forget to turn off the unit. We recommend setting "Auto Power Standby" in the "Setup" menu to besides "Off".
- The setting brightness may become dark when "ECO Mode" is set to "On".
- The setting of "Dimmer" in the "Setup" menu is interlocked with the setting of "Dimmer" in the "Front Display" menu.
- You can set "Dimmer" using the color keys on the remote control when "Remote Color Key" in the "Setup" menu is set to "Display Control".

- "Setting the functions for the color keys on the remote control" (p.260)
- "Setting the amount of time for the auto-standby function" (p.262)
- "Setting the use of the eco mode" (p.263)
- "Basic operation of the Setup menu" (p.179)
- · "Basic operation of the Front Display menu" (p.283)

Setting the scale of the volume display

Switches the scale of the volume display.

Setup menu

"Function" > "User Interface" > "Display Settings" > "Volume"

Settings

dB	The "dB" unit
0-97	The numeric value (0-97)

Related links

Setting the use of short messages on the TV

Selects whether to display short messages on the TV when the unit is operated.

Setup menu

"Function" > "User Interface" > "Display Settings" > "Short Message"

Settings

Off	Does not display short messages.
On	Displays short messages.

Related links

Setting the position of short messages

Sets the position of short messages on the TV screen.

Setup menu

"Function" > "User Interface" > "Display Settings" > "Position"

Settings

Bottom	Displays short messages at the bottom of the TV screen.
Тор	Displays short messages at the top of the TV screen.

NOTE

This setting is available only when "Short Message" in the "Setup" menu is set to "On".

- "Setting the use of short messages on the TV" (p.257)
- "Basic operation of the Setup menu" (p.179)

Setting the operation sound

Selects whether to ring a sound when operating the touch key on the front panel.

Setup menu

"Function" > "User Interface" > "Touch Sound"

Settings

Off	Does not output the operation sound.
On	Outputs the operation sound.

NOTE

This setting is interlocked with the setting of "Touch Sound" in the "Front Display" menu.

- "Setting the use of the operation sound" (p.290)
- "Basic operation of the Setup menu" (p.179)

Setting the functions for the color keys on the remote control

Sets the functions for the RED/GREEN/YELLOW/BLUE keys on the remote control.

Setup menu

"Function" > "User Interface" > "Remote Color Key"

Settings

Default	Assigns the functions of devices connected to the unit with an HDMI cable.
	This setting is effective when "HDMI Control" in the "Setup" menu is set to "On".
	Assigns the functions of sound mode to each key.
	RED: MOVIE
Program	GREEN: MUSIC
	YELLOW:STEREO
	BLUE: SUR.DECODE
	Assigns the functions of TV Control to each key.
	RED: EXIT (closes the menu on the TV)
TV Control	GREEN: INFO (displays information about the TV such as the resolution)
I V Control	YELLOW: BROADCAST (switches the TV broadcast type)
	BLUE: INPUT (switches the TV input)
	This setting is effective when "HDMI Control" in the "Setup" menu is set to "On".
Display Control	Assigns the functions of Display Control to each key.
	RED: Dimmer- (darkens the front display and indicators)
	GREEN: Dimmer+ (brightens the front display and indicators)
	YELLOW: Display item - (displays the previous information on the front display)
	BLUE: Display item + (displays the next information on the front display)

NOTE

- To use HDMI control, you need to perform the HDMI Control link setup after connecting HDMI Control-compatible devices when this function is set to "Default" or "TV Control".
- HDMI Control and HDMI Control link function might not work properly when this function is set to "Default" or "TV Control".

- "Setting the use of HDMI Control" (p.203)
- "Adjusting the brightness of the front display" (p.255)
- "Selecting the input information displayed on the front display" (p.28)
- "Basic operation of the Setup menu" (p.179)

Preventing accidental changes to the settings

Protects the settings to prevent accidental changes.

Setup menu

"Function" > "User Interface" > "Memory Guard"

Settings

Off	Does not protect the settings.
	Protects the settings.
On	Change in the setting is prohibited until "Off" is selected. The lock icon (${\bf \hat n}$) is displayed on the menu screen.

Related links

Setting the amount of time for the auto-standby function

Sets the amount of time for setting the unit to standby mode automatically.

Setup menu

"Function" > "ECO" > "Auto Power Standby"

Settings

Off	Does not set the unit to standby mode.
5 minutes, 20 minutes	Sets the unit to standby mode when you have not operated the unit and the unit has not detected any input signal for the specified time.
2 hours, 4 hours, 8 hours, 12 hours	Sets the unit to standby mode when you have not operated the unit for the specified time.

NOTE

- Just before the unit enters standby mode, the number of seconds to standby mode counts down on the front display.
- When "Dimmer" is set to "-5" (turned off), it is incomprehensible that the power of the unit is set to on. If you set "Auto Power Standby" to "Off", pay attention to forget to turn off the unit.

Related links

Setting the use of the eco mode

Reduces the unit's power consumption by setting the eco mode. If this function is set to "On", be sure to restart the unit. New setting becomes effective after a restart.

Setup menu

"Function" > "ECO" > "ECO Mode"

Settings

Off	Disables the eco mode.
On	Enables the eco mode.
	The front display may become dark.

NOTE

If you want to play audio at high volume, set "ECO Mode" to "Off".

Related links

Changing the FM/AM tuning frequency setting

Model For

Asia, Taiwan, Brazil, General, and Central and South America

Sets the FM/AM tuning frequency setting of the unit depending on your country or region.

Setup menu

"Function" > "Tuner" > "Frequency Step"

Settings

FM100/AM10	Adjusts the FM frequency by 100-kHz steps and AM by 10-kHz steps.
FM50/AM9	Adjusts the FM frequency by 50-kHz steps and AM by 9-kHz steps.

NOTE

Preset (registered radio stations) and frequency will be initialized if you change the radio tuning frequency steps.

Related links

Restoring the default settings

Restores the default settings for the unit (initialization).

Setup menu

"Function" > "Initialization"

Choices

All	Restores the default settings for the unit.
Network	Restores the default settings for network configurations.

1 Select "All" or "Network".

2 Press ENTER to execute the initialization.

In case of "All", the unit will restart automatically a few seconds later.

In case of "Network", "Complete" is displayed on the front display when the process finishes.

NOTE

You can also restore the default settings in "Initialization" in the "Front Display" menu.

Related links

Backing up and restoring all the settings

Informs the unit's setting to a USB flash drive and restores it to the unit. Prepare a USB flash drive using FAT16 or FAT32 format in advance.

Setup menu

"Function" > "Backup/Restore"

Choices

Backup	Backups all the settings for the USB flash drive.
Restore	Restores all the previous backuped settings.

■ In case of "Backup"

- 1 Connect the USB flash drive to the USB jack on the front panel.
- 2 Select "Backup".

In process, "Backup Executing" is displayed on the TV. And "Executing" is displayed on the front display. When the process finishes, "Backup Complete" is displayed ("Complete" on the front display).

If "Backup Failed" appears on the TV ("Error" on the front display), check the following and start the process again.

- You cannot save by overwriting. If you save the settings repeatedly, please move the file in different folder.
- The file is stored by the name of "MC_backup_(model name).dat" in the route of the USB flash drive.

NOTE

- Do not turn off the unit during the backing up process. Otherwise, the settings may not be restored correctly.
- The user information (such as account, password) is not saved.
- You can also backup all the settings in "Backup/Restore" in the "Front Display" menu.

Related links

"Basic operation of the Setup menu" (p.179)

■ In case of "Restore"

- 1 Connect the USB flash drive to the USB jack on the front panel.
- 2 Select "Restore".

In process, "Restore Executing" is displayed on the TV. And "Executing" is displayed on the front display. When the process finishes, "Restore Complete" is displayed ("Complete" on the front display). The unit will restart automatically a few seconds later.

CONFIGURATIONS > Configuring various functions (Setup menu)

If "Restore Failed" appears on the TV ("Error" on the front display), check the following and start the process again.

• Check that the file is stored in the route of the USB flash drive.

NOTE

- "Restore" is effective after backing up all the settings.
- Do not turn off the unit during the restoring process. Otherwise, the settings may not be restored correctly.
- You can also restore all the settings in "Backup/Restore" in the "Front Display" menu.

Related links

Updating the firmware

Updates the firmware. You can also check the firmware version and system ID.

Setup menu

"Function" > "Firmware Update"

Choices

Network Update	Updates the firmware via the network.
USB Update	Updates the firmware using a USB flash drive.

NOTE

- "Network Update" is not selectable when firmware update is in preparation.
- Do not perform this menu unless firmware update is necessary. Also, make sure you confirm the information supplied with updates before updating the firmware.
- . Firmware update via the network takes about 20 minutes or more.
- If the Internet connection speed is slow, or the unit is connected to the wireless network, network update may not be possible
 depending on the condition of the network. In this case, wait until firmware update is ready, or update the firmware using the USB
 flash drive.
- You can also updates the firmware in "Firmware Update" in the "Front Display" menu.

- "Updating the unit's firmware via the network" (p.300)
- "Basic operation of the Setup menu" (p.179)

Configuring the network settings

Checking the network information of the unit

Displays the network information of the unit.

Setup menu

"Network" > "Information"

Status	The connection status of the NETWORK jack
Connection	Connection method
SSID	The access point to which the unit is connected
MusicCast Network	Readiness or not for the MusicCast Network
MusicCast Surround	Readiness or not for the MusicCast Surround
MAC Address (Ethernet)	MAC address
MAC Address (Wi-Fi)	
IP Address	IP address
Subnet Mask	Subnet mask
Default Gateway	The IP address of the default gateway
DNS Server (P)	The IP address of the primary DNS server
DNS Server (S)	The IP address of the secondary DNS server

Related links

Setting the network connection method (Wired/Wireless)

Selects the network connection method.

Setup menu

"Network" > "Network Connection"

Choices

Wired	Connects the unit to a network with a network cable.
Wireless(Wi-Fi)	Connects the unit to a network via the wireless router (Wi-Fi).

- "Network connection of the unit" (p.77)
- "Selecting a wireless network connection method" (p.358)
- "Basic operation of the Setup menu" (p.179)

Setting the network parameters automatically (DHCP)

Sets the network parameters (such as IP address, Subnet Mask, and Default Gateway) automatically using a DHCP server.

Setup menu

"Network" > "IP Address" > "DHCP"

Settings

Off	Does not use a DHCP server.
	You can configure the network parameters manually.
On	Uses a DHCP server.
	The unit's network parameters are configured automatically.

Related links

Setting the network parameters manually

Sets the network parameters (such as IP address, Subnet Mask, and Default Gateway) manually.

Setup menu

"Network" > "IP Address"

- 1 Set "DHCP" to "Off".
- 2 Select a parameter type.
- 3 Set the network parameter.
- 4 Press ENTER.
- 5 To set another parameter, repeat steps 2 to 4.
- 6 Press SETUP.

This completes the settings.

Related links

Setting the use of a Digital Media Controller

Selects whether to allow a Digital Media Controller (DMC) to control playback. If this function is enabled, you can control playback of the unit from DMCs on the same network.

Setup menu

"Network" > "DMC Control"

Settings

Disable	Does not allow DMCs to control playback.
Enable	Allows DMCs to control playback.

Related links

Setting the use of the Network Standby function

Selects whether the unit can be turned on from other network devices.

Setup menu

"Network" > "Network Standby"

Settings

Off	Disables the network standby function.
On	Enables the network standby function.
	The unit consumes more power than when "Off" is selected.
Auto	Enables the network standby function.
	If "Network Connection" is set to "Wired", the unit is set to the power saving mode when the network cable is disconnected and the power consumption is suppressed.

NOTE

- If you set "Network Standby" to "Off", "Bluetooth Standby" will be disabled.
- In the power saving mode, the unit cannot be turned on from other network devices when the network cable is connected again. Turn on the unit manually.



With an advanced energy saving design, this product achieves a low power consumption of not more than 1.8 watts when in Network Standby mode.

- "Setting the network connection method (Wired/Wireless)" (p.270)
- "Setting the use of the Bluetooth® Standby function" (p.279)
- "Basic operation of the Setup menu" (p.179)

Setting the network name of the unit

Edits the unit's name on the network (the network name) displayed on other network devices.

Setup menu

"Network" > "Network Name"

- 1 Press ENTER.
- 2 Edit the name.
- 3 Select "OK".
- 4 Press SETUP.

This completes the settings.

NOTE

- To clear the entry, select "CLEAR".
- To restore the default network name, select "RESET".

Related links

Setting the power interlock from the unit to MusicCast compatible devices

Selects whether turning on the power of the unit (the master device) also turns on the power of other devices (the slave device) of the MusicCast network.

Setup menu

"Network" > "MusicCast Link Power Interlock"

Settings

Off	Disables the power interlock from the unit to MusicCast compatible devices.
On	Enables the power interlock from the unit to MusicCast compatible devices.

Related links

Configuring the Bluetooth® settings

Setting the use of Bluetooth®

Selects whether to use the Bluetooth function.

Setup menu

"Bluetooth" > "Bluetooth"

Settings

Off	Disables the Bluetooth function.
On	Enables the Bluetooth function.

Related links

Terminating the connection between a Bluetooth® device and the unit

Terminates the Bluetooth connection between a Bluetooth device (such as a smartphone) and the unit. Select "Disconnect" and press ENTER to terminate the Bluetooth connection.

Setup menu

"Bluetooth" > "Audio Receive" > "Disconnect"

NOTE

This setting is not available when no Bluetooth devices are connected.

Related links

Setting the use of the Bluetooth® Standby function

Selects whether to turn on the unit from Bluetooth devices. If this function is set to "On", the unit automatically turns on when a connect operation is performed on the Bluetooth device.

Setup menu

"Bluetooth" > "Audio Receive" > "Bluetooth Standby"

Settings

Off	Disables the Bluetooth standby function.
0.5	Enables the Bluetooth standby function.
On	The unit consumes more power than when "Off" is selected.

NOTE

This setting is not available when "Network Standby" is set to "Off".

- "Setting the use of the Network Standby function" (p.274)
- "Basic operation of the Setup menu" (p.179)

Setting the use of audio transmission to a Bluetooth® device

Selects whether to transmit audio played back on the unit to Bluetooth devices (such as speakers and headphones).

Setup menu

"Bluetooth" > "Audio Send" > "Transmitter"

Settings

Off	Disables the Bluetooth audio transmitter function.
On	Enables the Bluetooth audio transmitter function.

- "Connecting the unit to a Bluetooth® device that receives transmitted audio" (p.281)
- "Basic operation of the Setup menu" (p.179)

Connecting the unit to a Bluetooth® device that receives transmitted audio

Establishes a connection between the unit and Bluetooth devices (such as speakers and headphones) that receive audio transmitted from the unit when "Transmitter" is set to "On" in the "Setup" menu.

Setup menu

"Bluetooth" > "Audio Send" > "Device Search"

- 1 Confirm the message and press ENTER.
- 2 Select the list.
- 3 Select the Bluetooth speakers/headphones to be connected with the unit.
- 4 Press "ENTER".

When the connection process finishes, "Completed" is displayed.

5 Press "ENTER".

This completes the settings.

NOTE

- If the desired Bluetooth device is not displayed on the list, set the Bluetooth device to pairing mode and then perform "Device Search" operation again.
- To terminate the Bluetooth connection, perform a disconnect operation on the Bluetooth speakers/headphones.

- "Setting the use of audio transmission to a Bluetooth® device" (p.280)
- "Basic operation of the Setup menu" (p.179)

Configuring the language settings

Setting the menu language

Selects the menu language such as the Setup menu.

Setup menu

"Language"

Settings

English	English
日本語	Japanese
Français	French
Deutsch	German
Español	Spanish
Русский	Russian
Italiano	Italian
中文	Chinese

 
[&]quot;Basic operation of the Setup menu" (p.179)

Configuring the unit's settings by operation of the body front panel (Front Display menu)

Basic operation of the Front Display menu

Perform the following basic procedure to operate the "Front Display" menu. Operate this menu displayed on the front display using the front panel.

1 Touch MENU (CONNECT) on the front panel.



2 Select an item by using SELECT/ENTER.



Confirm

- 3 Select a setting.
- 4 Touch MENU (CONNECT).

This completes the settings.

NOTE

In the "Front Display" menu, touch RETURN on the front panel to cancel the operation or display the previous menu.

Related links

"Default settings of the Front Display menu" (p.387)

Front Display menu items

Use the following table to configure system settings of the unit.

Item			Page
Dimmer			285
Zone Power			286
	,	Volume Knob Lock	287
	Function Lock	Input Selector Lock	288
		Scene Key Lock	289
	Touch Sound		290
	Remote Sensor		291
Settings	Remote ID		292
	Information Skip		293
	Initialization		294
	Backup/Restore		295
	Firmware Update		297
	Retail Demo Mode		298

Adjusting the brightness of the front display

Adjusts the brightness of the following on the front panel. Higher value brightens the front display.

- · Front display
- Indicators (ZONE, PURE DIRECT)

Setup menu

"Function" > "User Interface" > "Display Settings" > "Dimmer"

Front Display menu

"Dimmer"

Setting range

-5 to 0

NOTE

- The front display is turned off by "-5". The default setting is "-2".
- If you set "Dimmer" to "-5", the front display will be turned off after closing the menu.
- Though you set "Dimmer" to "-5", short message and menu on the front display will be displayed in brightness "-4".
- If you set "Dimmer" to "-5", it is incomprehensible that the power of the unit is set to on. Pay attention to forget to turn off the unit. We recommend setting "Auto Power Standby" in the "Setup" menu to besides "Off".
- The setting brightness may become dark when "ECO Mode" is set to "On".
- The setting of "Dimmer" in the "Setup" menu is interlocked with the setting of "Dimmer" in the "Front Display" menu.
- You can set "Dimmer" using the color keys on the remote control when "Remote Color Key" in the "Setup" menu is set to "Display Control".

- "Setting the functions for the color keys on the remote control" (p.260)
- · "Setting the amount of time for the auto-standby function" (p.262)
- "Setting the use of the eco mode" (p.263)
- "Basic operation of the Setup menu" (p.179)
- "Basic operation of the Front Display menu" (p.283)

Setting the power of each zone to on/standby

Switches the power of the zone to be operated between on and off (standby).

Front Display menu

"Zone Power" > (zone)

Settings

Off	Turns off the zone.
On	Turns on the zone.

Related links

"Basic operation of the Front Display menu" (p.283)

Setting the use of the volume on the front panel

Selects whether to use the volume on the front panel. You can disable the volume operation on the unit to prevent the volume from being set unexpectedly loud by a child.

Front Display menu

"Settings" > "Function Lock" > "Volume Knob Lock"

Settings

Off	Enables the volume operation on the unit.
On	Disables the volume operation on the unit.

Related links

"Basic operation of the Front Display menu" (p.283)

Setting the use of the input selector on the front panel

Selects whether to use SELECT/ENTER on the front panel as the input selector.

Front Display menu

"Settings" > "Function Lock" > "Input Selector Lock"

Settings

Off	Enables the input selection operation of SELECT/ENTER on the unit.
On	Disables the input selection operation of SELECT/ENTER on the unit.

Related links

"Basic operation of the Front Display menu" (p.283)

Setting the use of the scene key on the front panel

Selects whether to use SCENE (4 numbers) on the front panel.

Front Display menu

"Settings" > "Function Lock" > "Scene Key Lock"

Settings

Off	Enables the operation of SCENE on the unit.
On	Disables the operation of SCENE on the unit.

Related links

"Basic operation of the Front Display menu" (p.283)

Setting the use of the operation sound

Selects whether to ring a sound when operating the touch key on the front panel.

Front Display menu

"Settings" > "Touch Sound"

Settings

Off	Does not output the operation sound.
On	Outputs the operation sound.

NOTE

This setting is interlocked with the setting of "Touch Sound" in the "Setup" menu.

Related links

- "Setting the operation sound" (p.259)
- "Basic operation of the Front Display menu" (p.283)

Setting the use of the remote control

Selects whether to use the remote control sensor on the front panel.

Front Display menu

"Settings" > "Remote Sensor"

Settings

Off	Turns off the remote control sensor.
On	Turns on the remote control sensor.

NOTE

- While the remote control sensor is turned off, you cannot control the unit from the remote control. Set this function to "On" normally.
- "Remote Sensor Off" is displayed on the front display with the remote control while the remote control sensor is turned off.

Related links

"Basic operation of the Front Display menu" (p.283)

CONFIGURATIONS > Configuring the unit's settings by operation of the body front panel (Front Display menu)

Selecting the remote control ID

Sets the unit's remote control ID so that it matches the remote control's ID. When using multiple Yamaha AV receivers, set a unique remote control ID for its corresponding receiver.

Front Display menu

"Settings" > "Remote ID"

Settings

ID1, ID2

Changing the remote control ID of the remote control

- To select ID1, while holding down the left cursor key, hold down SCENE number key 1 for 5 seconds.
- To select ID2, while holding down the left cursor key, hold down SCENE number key 2 for 5 seconds.

NOTE

If the remote control IDs of the unit and the remote control do not match, "Remote ID Mismatch" appears on the front display when the remote control is operated.

Related links

"Basic operation of the Front Display menu" (p.283)

Setting information items to be skipped when operating SELECT/ENTER

Sets which information items are skipped when operating SELECT/ENTER on the front panel. You can select the desired information quickly by using this function to skip the unnecessary information.

Front Display menu

"Settings" > "Information Skip" > (information item)

Settings

Off	Does not skip the selected information item.
On	Skips the selected information item.

NOTE

If you set this function of all information items to "On", the first item (default) appears on the front display.

Related links

- "Selecting the input information displayed on the front display" (p.28)
- "Basic operation of the Front Display menu" (p.283)

Restoring the default settings

Restores the default settings for the unit (initialization).

Front Display menu

"Settings" > "Initialization"

Choices

All Initialization	Restores the default settings for the unit.
Network Initialization	Restores the default settings for network configurations.

- 1 Select "All Initialization" or "Network Initialization".
- 2 Select "Execute".

Reconfirmation is displayed on the front display.

3 Select "Execute".

In case of "All Initialization", the unit will restart automatically.

In case of "Network Initialization", "Complete" is displayed when the process finishes.

NOTE

You can also restore the default settings in "Initialization" in the "Setup" menu.

Related links

"Basic operation of the Front Display menu" (p.283)

Backing up and restoring all the settings

Informs the unit's setting to a USB flash drive and restores it to the unit. Prepare a USB flash drive using FAT16 or FAT32 format in advance.

Front Display menu

"Settings" > "Backup/Restore"

Choices

Backup	Backups all the settings for the USB flash drive.
Restore	Restores all the previous backuped settings.

■ In case of "Backup"

- 1 Connect the USB flash drive to the USB jack on the front panel.
- 2 Select "Backup".
- 3 Select "Execute".

In process, "Executing" is displayed on the front display. And "Backup Executing" is displayed on the TV. When the process finishes, "Complete" is displayed ("Backup Complete" on the TV).

If "Error" appears on the front display ("Backup Failed" on the TV), check the following and start the process again.

- You cannot save by overwriting. If you save the settings repeatedly, please move the file in different folder.
- The file is stored by the name of "MC_backup_(model name).dat" in the route of the USB flash drive.

NOTE

- Do not turn off the unit during the backing up process. Otherwise, the settings may not be restored correctly.
- The user information (such as account, password) is not saved.
- You can also backup all the settings in "Backup/Restore" in the "Setup" menu.

Related links

"Basic operation of the Front Display menu" (p.283)

■ In case of "Restore"

- 1 Connect the USB flash drive to the USB jack on the front panel.
- 2 Select "Restore".

CONFIGURATIONS > Configuring the unit's settings by operation of the body front panel (Front Display menu)

3 Select "Execute".

In process, "Executing" is displayed on the front display. And "Restore Executing" is displayed on the TV. When the process finishes, "Complete" is displayed ("Restore Complete" on the TV). The unit will restart automatically a few seconds later.

If "Error" appears on the front display ("Restore Failed" on the TV), check the following and start the process again.

• Check that the file is stored in the route of the USB flash drive.

NOTE

- "Restore" is effective after backing up all the settings.
- . Do not turn off the unit during the restoring process. Otherwise, the settings may not be restored correctly.
- You can also restore all the settings in "Backup/Restore" in the "Setup" menu.

Related links

"Basic operation of the Front Display menu" (p.283)

Updating the firmware

Updates the firmware that provides additional features or product improvements.

New firmware can be downloaded from our website. For details, refer to the information supplied with updates.

Front Display menu

"Settings" > "Firmware Update"

Choices

Network Update	Updates the firmware via the network.
USB Update	Updates the firmware using a USB flash drive.

NOTE

- When firmware update is in preparation, "---" appears in "Network Update" and you cannot update the firmware. After a latest firmware update is available, select "Execute" and update the firmware.
- Do not perform this menu unless firmware update is necessary. Also, make sure you confirm the information supplied with updates before updating the firmware.
- You can also updates the firmware in "Firmware Update" in the "Setup" menu.

Related links

- "Firmware updates" (p.299)
- "Basic operation of the Front Display menu" (p.283)

Setting the use of Retail Demo Mode

Selects whether to use Retail Demo Mode of the front display. In Retail Demo Mode, the feature of the unit and QR code are displayed on the front display. When you scan the QR code with your smartphone, you can read the introduction page of the unit.

Front Display menu

"Settings" > "Retail Demo Mode"

Settings

Off	Disables Retail Demo Mode.
On	Enables Retail Demo Mode.

NOTE

- In Retail Demo Mode, you cannot confirm information other than demonstrations on the front display. Information, such as the current input name, the current volume and other status information, is not displayed on the front display.
- · However, in Retail Demo Mode, short messages are displayed.
- In Retail Demo Mode, the setting of "Auto Power Standby" in the "Setup" menu is disabled. Even if "Auto Power Standby" is set to besides "Off", the unit does not enter to the standby mode automatically.

Related links

"Basic operation of the Front Display menu" (p.283)

UPDATE

Updating the unit's firmware

Firmware updates

New firmware that provides additional features or product improvements will be released as needed. For details on firmware, visit the Yamaha website. The unit's firmware can be updated via the network or using a USB flash drive.

■ When the unit is connected to the Internet

If a firmware update is ready, the firmware update indicator on the front display lights up.



NOTE

- The firmware update indicator might not light up when a latest firmware update is available.
- If the Internet connection speed is slow, or the unit is connected to the wireless network, you might not get the message of new
 firmware depending on the condition of the network connection. In this case, update the firmware using the USB flash drive.

Related links

- "Updating the unit's firmware via the network" (p.300)
- "Updating the unit's firmware using a USB flash drive" (p.302)

Updating the unit's firmware via the network

When the unit is connected to the Internet and a firmware update is ready, the following message appears after SETUP is pressed.



You can switch the language.

Confirm the message and start the firmware update via the network.

NOTICE

- Do not operate the unit or disconnect the power cable or network cable during firmware update. If the firmware update is interrupted, there is a possibility that the unit will malfunction. In this case, contact your nearest authorized Yamaha dealer or service center to request repair.
- 1 Read the on-screen description and press the down cursor key.

The next screen appears.

2 Press ENTER.

The on-screen display turns off and the firmware update begins.

When "UPDATE SUCCESS PLEASE POWER OFF!" appears on the front display, press (b) on the front panel.

The firmware update is complete.

NOTE

- · Firmware update takes about 20 minutes or more.
- If the Internet connection speed is slow, or the unit is connected to the wireless network, you might not get the message of new
 firmware depending on the condition of the network connection. In this case, update the firmware using the USB flash drive.

Firmware update reservation

You can make a reservation to perform the firmware update when turning off the unit.

UPDATE > Updating the unit's firmware

The procedure for reservation is as follows.

- 1 Press not ENTER but the down cursor key in previous step 2.
- 2 On the next screen, press ENTER.

The firmware update is reserved.

With an update reservation, the firmware update confirmation screen is displayed on the front display when you turn off the unit.

Press ENTER on the front panel or on the remote control to start the firmware update. After the firmware update is complete, the unit will turn off automatically.

NOTE

- The unit turns off automatically without performing the firmware update if two minutes pass after the screen to confirm the firmware update is displayed.
- To cancel the firmware update process, press RETURN on the front panel or on the remote control, and the unit will turn off.
- The unit turns off without performing the firmware update if you turn off the unit with MusicCast CONTROLLER.

Related links

"Firmware updates" (p.299)

Updating the unit's firmware using a USB flash drive

If the unit is not connected to the Internet, or the Internet connection speed is slow, update the firmware using the USB flash drive.

For details on downloads and firmware updates, visit the Yamaha website.

NOTICE

• Do not operate the unit or disconnect the power cable or network cable during firmware update. If the firmware update is interrupted, there is a possibility that the unit will malfunction. In this case, contact your nearest authorized Yamaha dealer or service center to request repair.

Related links

- "Updating the unit's firmware via the network" (p.300)
- "Firmware updates" (p.299)

TROUBLESHOOTING

When any problem appears

If trouble occurs, first check the following:

Make sure of the following when the unit does not function properly.

- The power cables of the unit, TV and playback devices (such as BD/DVD players) are connected to AC wall
 outlets securely.
- The unit, subwoofer, TV and playback devices (such as BD/DVD players) are turned on.
- The connectors of each cable are securely inserted in to jacks on each device.

Power, system, or remote control trouble

The power does not turn on

• The protection circuitry has been activated three times consecutively.

If the standby indicator on the unit blinks when you try to turn on the power, it means that capability to turn on the power is disabled as a safety precaution. Contact your nearest Yamaha dealer or service center to request repair.

The power does not turn on in synchronization with the TV

HDMI Control on the unit is disabled.

If turning off the unit is not synchronized to the TV either, check the setting of HDMI Control on the unit. For details on HDMI Control, see the following:

· "Setting the use of HDMI Control" (p.203)

HDMI Control on the TV is disabled.

If only turning on the unit is not synchronized to the TV, check the setting on the TV. For details, refer to the instruction manual for the TV and set HDMI Control on the TV.

Because of a power failure, the unit's power is no longer synchronized.

Disconnect the HDMI cables and power cables, and after five minutes, reconnect the cables of playback devices first, then the unit, and then the TV. Then, check that the power is synchronized.

The power does not turn off

• The internal microcomputer has frozen, due to an external electric shock (such as lightning or excessive static electricity) or to a drop in the power supply voltage.

Hold down \circlearrowleft (power) on the front panel for more than 15 seconds to reboot the unit. If the problem persists, disconnect the power cable from the AC wall outlet and plug it again.

The power turns off (standby mode) immediately

The unit was turned on while a speaker cable was shorted.

Twist the bare wires of each speaker cable firmly and reconnect to the unit and speakers. For details, see the following:

· "Connecting the speaker" (p.66)

The unit enters standby mode automatically

• The sleep timer worked.

Turn on the unit and start playback again.

• The auto-standby function activated because the unit was not used for the specified time.

To disable the auto-standby function, set "Auto Power Standby" in the "Setup" menu to "Off". For details, see the following:

• "Setting the amount of time for the auto-standby function" (p.262)

• The speaker impedance setting is incorrect.

Set the speaker impedance to match your speakers. For details, see the following:

• "Setting the speaker impedance" (p.201)

• The protection circuitry has been activated because of a short circuit.

Twist the bare wires of each speaker cable firmly and reconnect to the unit and speakers. For details, see the following:

· "Connecting the speaker" (p.66)

■ The protection circuitry has been activated because of too high volume.

Turn down the volume. If "ECO Mode" in the "Setup" menu is set to "On", set it to "Off". For details, see the following:

· "Setting the use of the eco mode" (p.263)

The unit is not reacting

 The internal microcomputer is frozen, due to an external electric shock (such as lightning or excessive static electricity) or to a drop in the power supply voltage.

Hold down \circlearrowleft (power) on the front panel for more than 15 seconds to reboot the unit. If the problem persists, disconnect the power cable from the AC wall outlet and plug it again.

• The volume operation on the front panel is disabled.

Set "Volume Knob Lock" in the "Front Display" menu to "Off". For details, see the following:

- "Setting the use of the volume on the front panel" (p.287)
- The operation of SELECT/ENTER on the front panel is disabled.

Set "Input Selector Lock" in the "Front Display" menu to "Off". For details, see the following:

- "Setting the use of the input selector on the front panel" (p.288)
- The operation of SCENE on the front panel is disabled.

Set "Scene Key Lock" in the "Front Display" menu to "Off". For details, see the following:

• "Setting the use of the scene key on the front panel" (p.289)

The unit cannot be controlled using the remote control

The unit is out of the operating range.

Use the remote control within the operating range. For details, see the following:

- "Operating range of the remote control" (p.14)
- The batteries are weak.

Replace with new batteries.

● The unit's remote control sensor is exposed to direct sunlight or strong lighting.

Adjust the lighting angle, or reposition the unit.

• The remote control sensor on the unit is turned off.

Turn on the remote control sensor on the unit. For details, see the following:

- "Setting the use of the remote control" (p.291)
- The remote control IDs of the unit and the remote control are not identical.

Change the remote control ID of the unit or the remote control. For details, see the following:

- · "Selecting the remote control ID" (p.292)
- The remote control is set to another zone operation mode.

Set the remote control to the target zone operation mode. For details, see the following:

• "Part names and functions of the remote control" (p.33)

Cannot select the desired input source even if "INPUT" is pressed

• The function which skips some input sources is set.

Set "Input Skip" of the desired input source in the "Setup" menu to "Off". For details, see the following:

• "Setting input sources to be skipped when operating the INPUT key" (p.248)

The device connected to the unit via HDMI cannot be controlled using the RED/GREEN/YELLOW/BLUE keys of the remote control

The device which is connected to the unit via HDMI does not support the operation of the RED/ GREEN/YELLOW/BLUE keys.

Use a device which supports the operation of the RED/GREEN/YELLOW/BLUE keys.

 The settings of the RED/GREEN/YELLOW/BLUE keys of the unit's remote control have been changed.

Set the "Color Key" settings in the "Setup" menu to "Default". For details, see the following:

• "Setting the functions for the color keys on the remote control" (p.260)

The front display is turned off

• The brightness of the front display is set to be turned off.

Set "Dimmer" in the "Front Display" menu or "Setup" menu to bigger than "-5". For details, see the following:

• "Adjusting the brightness of the front display" (p.255)

Audio trouble

No sound

Another input source is selected.

Select an appropriate input source with the input selection keys. For details, see the following:

- "Basic procedure for playing back video and music" (p.120)
- Signals that the unit cannot reproduce are being input.

Some digital audio formats cannot be played back on the unit. Ensure that the signals are types that the unit is able to play back. For details on supported file formats, HDMI audio formats or compatible decoding format, see the following:

- "Supported file formats" (p.370)
- · "Specifications" (p.374)
- The power of Zone is not turned on.

Slide the Zone switch, and then press \circ (receiver power) to the power of Zone turns on. For details, see the following:

- "Basic procedure in zone" (p.155)
- The cable connecting the unit and playback device is broken.

If there is no problem with the connection, replace with another cable.

The volume cannot be increased

● The maximum volume is set too low.

Use "Max Volume" in the "Setup" menu to adjust the maximum volume. For details, see the following:
• "Setting the limit value of the volume" (p.228)

• A device connected to the output jacks of the unit is not turned on.

Turn on all devices connected to the output jacks of the unit.

No sound is coming from a specific speaker

The playback source does not contain a signal for the channel.

To check it, display information about the current audio signal on the TV. For details, see the following:

· "Checking the audio signal information" (p.169)

The currently selected sound program/decoder does not use the speaker.

To check it, use "Test Tone" in the "Setup" menu. For details, see the following:

· "Outputting test tones" (p.202)

Audio output of the speaker is disabled.

Perform YPAO or use "Configuration" in the "Setup" menu to change the speaker settings. For details, see the following:

- "Flow of the speaker configurations" (p.92)
- "Setting the use of a subwoofer" (p.191)
- "Setting the use of each speaker and its size" (p.192)

The volume of the speaker is set too low.

Perform YPAO or use "Level" in the "Setup" menu to adjust the speaker volume. For details, see the following:

- "Flow of the speaker configurations" (p.92)
- "Adjusting the volume of each speaker" (p.199)

• The speaker cable connecting the unit and the speaker is broken.

Check the unit's SPEAKERS terminals and the speaker's terminals. If there is no problem with the connection, replace a broken speaker cable with another speaker cable.

The speaker is malfunctioning.

To check it, replace with another speaker. If the problem persists with using another speaker, the unit may be malfunctioning.

No sound is coming from the subwoofer

The playback source does not contain Low Frequency Effect (LFE) or low-frequency signals.

To check it, set "Extra Bass" in the "Setup" menu to "On", in order to output the front channel low-frequency components from the subwoofer. For details, see the following:

· "Setting the use of Extra Bass" (p.196)

Subwoofer output is disabled.

Perform YPAO or set "Subwoofer" in the "Setup" menu to "Use". For details, see the following:

- "Flow of the speaker configurations" (p.92)
- "Setting the use of a subwoofer" (p.191)

■ The volume of the subwoofer is too low.

Adjust the volume on the subwoofer.

The subwoofer has been turned off by its auto-standby function.

Disable the auto-standby function of the subwoofer or adjust its sensitivity level.

No sound from the playback device connected to the unit with HDMI

- The TV does not support HDCP (High-bandwidth Digital Content Protection).
 Refer to the instruction manuals for the TV and check the TV's specifications.
- The number of devices connected to the HDMI OUT jack exceeds the limit. Disconnect some of the HDMI devices.

No sound from the playback device when HDMI Control is used

The TV is set to output audio from the TV speakers.

Change the audio output setting on your TV so that the playback device audio is output from the speakers connected to the unit.

TV audio is selected as the input source.

Select an appropriate input source with the input selection keys.

No sound from the TV when HDMI Control is used

■ The TV is set to output audio from the TV speakers.

Change the audio output setting on your TV so that the TV audio is output from the speakers connected to the unit.

A TV that does not support eARC/ARC is connected to the unit only with an HDMI cable.

Use a digital optical cable to make an audio connection. For details, see the following:

- "HDMI connection with a TV" (p.69)
- If the TV is connected to the unit with an audio cable, the TV audio input setting does not match the actual connection.

Use "TV Audio Input" in the "Setup" menu to select the correct audio input jack. For details, see the following:

- "Setting the audio input jack used for TV audio" (p.249)
- If you are trying to use eARC/ARC, eARC/ARC function is disabled on the unit or TV.

Set "ARC" in the "Setup" menu to "On", and enable eARC/ARC function on the TV. For details, see the following:

- "Setting the use of ARC" (p.209)
- If you are trying to use eARC/ARC, the HDMI cable is not connected to the eARC/ARC-compatible HDMI jack on the TV.

Connect the HDMI cable to the eARC/ARC-compatible HDMI jack (HDMI jack marked "ARC") on the TV. Some HDMI jacks on the TV are not compatible with eARC/ARC. For details, refer to the instruction manual for the TV.

Any other device's audio is played back when you switch the input source of the unit to "TV"

● The eARC/ARC function is not used.

Audio is played back with the audio input jack selected in "TV Audio Input" in the "Setup" menu unless the TV audio is played back with eARC/ARC function. It is not a malfunction.

Only the front speakers work on multichannel audio

The currently selected sound program is "2ch Stereo".

Select the sound program other than "2ch Stereo". For details, see the following:

• "Enjoying sound field effects optimized for the type of content" (p.105)

Noise/hum is heard

- The unit is too close to another digital or radio frequency device.
 - Move the unit further away from the device.
- The cable connecting the unit and playback device is broken.

If there is no problem with the connection, replace with another cable.

The sound is distorted

 A device (such as an external power amplifier) connected to the unit's audio output jacks is not turned on.

Turn on all devices connected to the unit's audio output jacks.

• The volume of the unit is too high.

Turn down the volume. If "ECO Mode" in the "Setup" menu is set to "On", set it to "Off". For details, see the following:

• "Setting the use of the eco mode" (p.263)

Video trouble

No video

Another input source is selected on the unit.

Select an appropriate input source with the input selection keys.

Another input source is selected on the TV.

Switch the TV input to display the video from the unit.

The video signal output from the unit is not supported by the TV.

Check the video output setting of the playback device. For information about video signals supported by the TV, refer to the instruction manuals for the TV.

The cable connecting the unit and TV (or playback device) is broken.

If there is no problem with the connection, replace with another cable.

No video from the playback device connected to the unit with HDMI

• The input video signal (resolution) is not supported by the unit.

To check the information about the current video signal (resolution) and video signals supported by the unit, see the following:

- "Checking the video signal information" (p.170)
- The TV does not support HDCP (High-bandwidth Digital Content Protection).

Refer to the instruction manuals for the TV and check the TV's specifications.

• The number of devices connected to the HDMI OUT jack is over the limit.

Disconnect some of the HDMI devices.

No image (contents required the HDCP 1.4/2.3 - compatible HDMI device) from the playback device

● The TV (HDMI input jack) does not support HDCP 1.4/2.3.

Connect the unit to the TV (HDMI input jack) that supports HDCP 1.4/2.3. (The Warning message can be displayed on the TV screen.)

The "Option" menu or "Setup" menu is not displayed on the TV

• Another input source is selected on the TV.

Switch the TV input to display the video from the unit (HDMI OUT jack).

• The Pure Direct is enabled.

Press PURE DIRECT to disable the Pure Direct. For details, see the following:

• "Enjoying higher quality playback (Pure Direct)" (p.112)

FM/AM radio trouble

FM radio reception is weak or noisy

■ There is multi-path interference.

Adjust the FM antenna height or orientation, or place it in a different location.

• Your area is too far from the FM station transmitter.

Press MODE on the remote control to select monaural FM radio reception.

AM radio reception is weak or noisy

• The noises may be caused by fluorescent lamps, motors, thermostats, or other electrical equipment.

It is difficult to completely eliminate noise. It may be reduced by using an outdoor AM antenna.

Radio stations cannot be selected automatically

• Your area is too far from the FM station transmitter.

Select the station manually. Or use an outdoor antenna. We recommend using a sensitive multi-element antenna. For details on selecting the station manually, see the following:

· "Listening to the radio" (p.129)

● The AM radio signal is weak.

Adjust the AM antenna orientation. Select the station manually. Use an outdoor AM antenna. For details on selecting the station manually, see the following:

· "Listening to the radio" (p.129)

AM radio stations cannot be registered as presets

• Auto Preset has been used.

Auto Preset is for registering FM radio stations only. Register AM radio stations manually. For details, see the following:

• "Registering a radio station manually" (p.132)

Radio stations cannot be selected by pressing PRESET

No radio stations are registered.

When no radio stations are registered, "No Presets" appears on the front display by pressing PRESET. Register the radio station to the preset number. For details, see the following:

"Registering a radio station manually" (p.132)

You can also register FM radio stations with strong signals automatically (Auto Preset). For details, see the following:

• "Registering FM radio stations automatically (Auto Preset)" (p.133)

FM radio stations with weak signals might not be registered automatically. Register the stations manually.

DAB radio trouble

No DAB radio reception

• An initial scan has not been performed.

Perform an initial scan to receive DAB radio. For details, see the following:

• "Preparing the DAB tuning" (p.127)

No DAB radio reception even after performing an initial scan

• Reception strength of DAB radio is poor.

Check reception strength in Tune AID displayed on the front panel, and adjust the antenna height or orientation, or place it in a different location. For details, see the following:

• "Preparing the DAB tuning" (p.127)

There is no DAB coverage in your area.

Check with your dealer or WorldDMB online at "http://www.worlddab.org" for a listing of the DAB coverage in your area.

DAB radio reception is weak or noisy

• There is multi-path interference.

Check reception strength in Tune AID displayed on the front panel, and adjust the antenna height or orientation, or place it in a different location. For details, see the following:

• "Preparing the DAB tuning" (p.127)

• Your area is too far from the DAB station transmitter.

Use an outdoor antenna. We recommend using a sensitive multi-element antenna.

DAB information is not available or is inaccurate

● The selected DAB radio station may be temporarily out of service or may not provide information.

Contact the DAB broadcaster.

No DAB radio sound

• The selected DAB radio station may be temporarily out of service.

Try the station later or select another station.

USB trouble

The unit does not detect the USB flash drive

- The USB flash drive is not connected to the USB jack securely.
 - Turn off the unit, reconnect your USB flash drive, and turn the unit on again.
- The file system of the USB flash drive is not FAT16 or FAT32.
 - Use a USB flash drive with FAT16 or FAT32 format.

Folders and files in the USB flash drive cannot be viewed.

• The data in the USB flash drive is protected by the encryption.

Use a USB flash drive without an encryption function.

The registered content in the USB flash drive cannot be recalled by pressing PRESET

- A USB flash drive different from registration is connected to the unit.
 - Connect the USB flash drive which contains the registered content as shortcut to the unit.
- The registered content (file) has been moved to another location. Register the content again.
- Some music files have been added or deleted to or from the folder.

The unit may not recall the registered content correctly. Register the content again.

The unit does not perform continuous playback on files of USB flash drive

 When the unit detects a series of unsupported files during playback, playback stops automatically.

Do not save unsupported files (such as images and hidden files) in folders for playback.

• Over 500 music files are in the selected folder.

The maximum limits of playback are 500 music files. The folder structure of your USB flash drive may reduce the maximum limits.

Network trouble

The network feature does not function

The network parameters (IP address) have not been obtained properly.

Enable the DHCP server function on your router and set "DHCP" in the "Setup" menu to "On" on the unit. For details, see the following:

• "Setting the network parameters automatically (DHCP)" (p.271)

If you want to configure the network parameters manually, check that you are using an IP address which is not used by other network devices in your network. For details, see the following:

• "Setting the network parameters manually" (p.272)

The unit is connected to the IPv6 router.

Some network features of the unit do not support IPv6 network. Connect to an IPv4 network.

The unit cannot connect to the Internet via a wireless router (access point)

• The wireless router (access point) is turned off.

Turn on the wireless router.

• The unit and the wireless router (access point) are too far apart.

Place the unit and the wireless router (access point) closer to each other.

• There is an obstacle between the unit and the wireless router (access point).

Move the unit and the wireless router (access point) in a location where there are no obstacles between them.

• The wireless router (access point) is set to use the wireless channel 14.

Change settings of the wireless router (access point) to use one of the wireless channels from 1 to 13.

Wireless network is not found

 Microwave ovens or other wireless devices in your neighborhood might disturb the wireless communication.

Turn off these devices or move the unit and the wireless router (access point) away from them. If your wireless router supports 5 GHz band, establish a new connection in 5 GHz band.

Access to the network is restricted by the firewall settings of the wireless router (access point).
 Check the firewall setting of the wireless router (access point).

The unit does not detect the media server (PC/NAS)

The media sharing setting is not correct.

Configure the sharing setting and select the unit as a device to which music contents are shared.

 Some security software installed on your media server is blocking the access of the unit to your media server.

Check the settings of security software installed on your media server.

• The unit and media server are not in the same network.

Check the network connections and your router settings, and then connect the unit and the media server to the same network.

The files in the media server (PC/NAS) cannot be viewed or played back

• The files are not supported by the unit or the media server.

Use the file format supported by both the unit and the media server. For information about the file formats supported by the unit, see the following:

• "Supported file formats" (p.370)

The registered content in the media server (PC/NAS) cannot be recalled by pressing PRESET

● The media server (PC/NAS) is turned off.

Turn on the media server which contains the registered content.

● The media server (PC/NAS) is not connected to the network.

Check the network connections and your router settings.

● The registered content (file) has been moved to another location.

Register the content again.

• Some music files have been added or deleted to or from the folder.

The unit may not recall the registered content correctly. Register the content again.

The Internet radio cannot be played

■ The unit is not connected to the Internet.

To use an Internet radio station, the unit must be connected to the Internet. Check whether the network parameters (such as the IP address) are properly assigned to the unit. For details, see the following:

- "Checking the network information of the unit" (p.269)
- The selected Internet radio station is currently not available.

There may be a network problem at the radio station, or the service may have been stopped. Try the station later or select another station.

■ The selected Internet radio station is currently broadcasting silence.

Some Internet radio stations broadcast silence at certain of times of the day. Try the station later or select another station.

 Access to the network is restricted by the firewall settings of your network devices (such as the router).

Check the firewall settings of your network devices. The Internet radio can be played only when it passes through the port designated by each radio station. The port number varies depending on the radio station.

The iPhone does not recognize the unit when using AirPlay

The unit is connected to a multiple SSID router.

Access to the unit might be restricted by the network separation function on the router. Connect the iPhone to the SSID which can access the unit. (Connect it to the Primary SSID at the top of the list.)

Unable to play back music with AirPlay

• The unit cannot play back the songs stored on the iPhone.

Check the song data. If it cannot be played on the iPhone itself, the song data or storage area may be broken.

The application for mobile devices does not detect the unit

• The unit and mobile device are not in the same network.

Check the network connections and your router settings, and then connect the unit and mobile device to the same network.

• The unit is connected to a multiple SSID router.

Access to the unit might be restricted by the network separation function on the router. Connect the iPhone to the SSID which can access the unit. (Connect it to the Primary SSID at the top of the list.)

Firmware update via the network is failed

• It may not be possible depending on the condition of the network.

Update the firmware via the network again or use a USB flash drive. For details, see the following:

• "Updating the firmware" (p.268)

Bluetooth® trouble

A Bluetooth® connection cannot be established

• The wireless antennas on the rear panel of the unit does not stand upright.

Stand the wireless antennas upright for connecting to a Bluetooth device wirelessly.

■ The Bluetooth function of the unit is disabled.

Enable the Bluetooth function. For details, see the following:

- · "Setting the use of Bluetooth®" (p.277)
- The Bluetooth function of a Bluetooth device is turned off.

Turn on the Bluetooth function of a Bluetooth device.

Another Bluetooth device is already connected to the unit.

Terminate the current Bluetooth connection and then establish a new connection. For details, see the following:

- "Playback of Bluetooth® device music on the unit" (p.135)
- The unit and the Bluetooth device are too far apart.

Move the Bluetooth device closer to the unit.

There is a device (such as microwave oven and wireless LAN) that outputs signals in the 2.4 GHz frequency band nearby.

Move the unit and the Bluetooth device away from those devices. If your wireless router supports 5 GHz band, establish a new connection in 5 GHz band.

● The Bluetooth device does not support A2DP.

Use a Bluetooth device that supports A2DP.

● The connection information registered on the Bluetooth device is not working for some reason.

Delete the connection information on the Bluetooth device, and then establish a connection between the Bluetooth device and the unit again. For details, see the following:

· "Playback of Bluetooth® device music on the unit" (p.135)

No sound is produced, or the sound is interrupted during playback with Bluetooth® connection

● The volume of the Bluetooth device is set too low.

Turn up the volume of the Bluetooth device.

The Bluetooth device is not set to send audio signals to the unit.

Switch the audio output of the Bluetooth device to the unit.

■ The Bluetooth connection has been terminated.

Establish a Bluetooth connection between the Bluetooth device and the unit again. For details, see the following:

- "Playback of Bluetooth® device music on the unit" (p.135)
- The unit and the Bluetooth device are too far apart.

Move the Bluetooth device closer to the unit.

There is a device (such as microwave oven and wireless LAN) that outputs signals in the 2.4 GHz frequency band nearby.

Move the unit and the Bluetooth device away from those devices. If your wireless router supports 5 GHz band, establish a new connection in 5 GHz band.

Error indications on the front display

Error indications on the front display

Refer to the following table when the error message is indicated on the front display.

Message	Cause	Remedy
Check SP Wires	The speaker cables are short circuited.	Twist the bare wires of the cables firmly and connect to the unit and speakers properly. For details, see the following:
		"Connecting the speaker" (p.66)
Access denied	Access to the media servers (PCs/NAS) is denied.	Configure the sharing settings and select the unit as a device to which music contents are shared.
Access error	The unit cannot access the USB device.	Turn off the unit and reconnect your USB device. If the problem persists, try another USB device.
	There is a problem with the signal path from the network to the unit.	Make sure your router and modem are turned on, and check the connection between the unit and your router (or hub). For details, see the following:
		"Connecting a network cable (wired connection)" (p.78)
		"Preparing wireless antennas (wireless connection)" (p.79)
Unable to play	The unit cannot play back the songs.	Ensure that the files are types that the unit is able to play back. If the unit supports the file format, but still cannot play back any files, the network may be overloaded with heavy traffic. For information about the formats supported by the unit, see the following:
		"Supported file formats" (p.370)
USB Overloaded	An overcurrent is flowing through the USB device.	Turn off the unit and reconnect your USB device. If the problem persists, try another USB device.
Internal Error	An internal error has occurred.	Contact the nearest authorized Yamaha dealer or service center.
Remote ID Mismatch	The remote control IDs of the unit and the remote control are not identical.	Change the remote control ID of the unit or the remote control. For details, see the following: • "Selecting the remote control ID" (p.292)
Remote Sensor Off	The remote control sensor on the unit is turned off.	Turn on the remote control sensor on the unit. For details, see the following: • "Setting the use of the remote control" (p.291)
NOT FOUND	In "USB Update", the firmware file stored on the USB flash drive was not found.	Check that the new firmware is stored on the USB flash drive. For details on downloads, visit the Yamaha website.
Version error	Firmware update failed.	Update the firmware again. For details, see the following:
		"Updating the firmware" (p.297)
		"Updating the unit's firmware via the network" (p.300)
Update failed.	Firmware update failed.	According to the guidance displayed on the front display, update the firmware again.

APPENDIX

Care and cleaning

Care for the front panel

The way of care for the front panel is as follows.

- Wipe the front panel with a soft dry cloth. Do not wipe the surface hard. Failure to observe this may cause damage to the surface.
- Before you clean the front panel, be sure to turn off (standby) the power to the unit.
- In standby mode, hold down SELECT/ENTER to disable the touch panel operation so that you can prevent the unit from turning on carelessly.

Connecting to a network wirelessly

Selecting a wireless network connection method

Select a wireless connection method according to your network environment.

- 1 Press SETUP.
- 2 Select "Network".
- 3 Select "Network Connection".
- 4 Select "Wireless(Wi-Fi)".

The following connection methods are available.

- "Setting up a wireless connection using the WPS button" (p.359)
- "Setting up a wireless connection using an iPhone" (p.360)
- "Setting up a wireless connection by selecting from the list of available access points" (p.361)
- "Setting up a wireless connection manually" (p.362)
- "Setting up a wireless connection using the WPS PIN code" (p.363)

NOTE

When the unit is added to a MusicCast network, the network settings can be configured at the same time. If you use MusicCast, this method is recommended.

Related links

"Adding the unit to the MusicCast network" (p.89)

Setting up a wireless connection using the WPS button

You can easily set up a wireless connection with one push of the WPS button on the wireless router.

Setup menu

"Network" > "Network Connection" > "Wireless(Wi-Fi)"

- 1 Select "WPS Button".
- 2 According to the on-screen guidance, connect to the network wirelessly.

When the connection process finishes, "Completed" appears on the TV.

If "Not connected" appears, repeat from step 1 or try another connection method.

This completes the network settings.

NOTE

The unit may not connect to the wireless router using WEP as the encryption method. In this case, try another connection method.

About WPS

 WPS (Wi-Fi Protected Setup) is a standard established by the Wi-Fi Alliance, which allows easy establishment of a wireless home network.

Related links

"Selecting a wireless network connection method" (p.358)

Setting up a wireless connection using an iPhone

You can set up a wireless connection by applying the connection settings on iPhone.

Before proceeding, confirm that your iPhone is connected to a wireless router.

NOTE

You need iPhone with iOS 7 or later.

Setup menu

"Network" > "Network Connection" > "Wireless(Wi-Fi)"

1 Select "WAC(iOS)".

2 According to the on-screen guidance, connect to the network wirelessly.

When the sharing process finishes, the unit is automatically connected to the selected network.

This completes the network settings.

NOTE

- · This process will restore the default settings for the following.
 - · Network settings
 - · Bluetooth settings
 - Bluetooth, USB, media server and network content registered as shortcuts
 - Internet radio stations registered to "Favorites"
 - · Account information for the network services
- This configuration does not work if the security method of your wireless router (access point) is WEP. In this case, use other
 connection method.
- If the unit is connected with a network cable, a warning message is displayed on the TV. Disconnect the network cable from the unit, and then set up a wireless connection.

Related links

"Selecting a wireless network connection method" (p.358)

Setting up a wireless connection by selecting from the list of available access points

You can set up a wireless connection by selecting an access point from the list of wireless LAN routers found by the unit. You need to manually enter the security key.

Setup menu

"Network" > "Network Connection" > "Wireless(Wi-Fi)"

- 1 Select "Access Point Scan".
- **2** According to the on-screen guidance, connect to the network wirelessly.

When the connection process finishes, "Completed" appears on the TV.

If "Not connected" appears, repeat from step 1 or try another connection method.

This completes the network settings.

Related links

"Selecting a wireless network connection method" (p.358)

Setting up a wireless connection manually

You can set up a wireless connection by entering the required information manually. You need to set up the SSID (network name), encryption method and security key for your network.

Setup menu

"Network" > "Network Connection" > "Wireless(Wi-Fi)"

- 1 Select "Manual Setting".
- 2 According to the on-screen guidance, connect to the network wirelessly.

When the connection process finishes, "Completed" appears on the TV.

If "Not connected" appears, check that all the information is entered correctly, and repeat from step 1.

This completes the network settings.

Related links

"Selecting a wireless network connection method" (p.358)

Setting up a wireless connection using the WPS PIN code

You can set up a wireless connection by entering the unit's PIN code into the wireless router. The method is available if the wireless router supports the WPS PIN code method.

Setup menu

"Network" > "Network Connection" > "Wireless(Wi-Fi)"

- 1 Select "PIN Code".
- 2 According to the on-screen guidance, connect to the network wirelessly.

When the connection process finishes, "Completed" appears on the TV.

If "Not connected" appears, repeat from step 1 or try another connection method.

This completes the network settings.

Related links

"Selecting a wireless network connection method" (p.358)

Using front presence speakers

Front presence speaker layout

The following three layout patterns are available for the front presence speakers. Choose a layout pattern that suits your listening environment.

- · Front Height
- Overhead
- Dolby Enabled SP

NOTE

- You can enjoy Dolby Atmos, DTS:X or CINEMA DSP 3D with any layout pattern.
- When using front presence speakers, configure the "Layout" setting in the "Setup" menu before automatically optimizing the speaker settings (YPAO).

Related links

"Setting the layout of the front presence speakers" (p.193)

Installing the front presence speakers in Front Height position

Install the front presence speakers on the front wall (Front Height).

It delivers a natural sound field with excellent linkage of left, right, top and bottom sound spaces, and sound extensity effectively.



Installing the front presence speakers in Overhead position

Install the front presence speakers to the ceiling above the listening position (Overhead).

It delivers realistic overhead sound effects and sound field with excellent linkage of front and rear sound spaces effectively.




• Be sure to use speakers that are made for ceiling use and take anti-drop measures. Ask a qualified contractor or dealer personnel for installation works.



NOTE

When installing front presence speakers to a ceiling, install them just above the listening position, or the ceiling between the extensions of the front speakers and listening position.

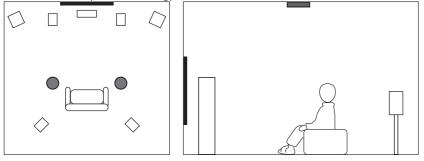

Using Dolby Enabled speakers as the front presence speakers

Use Dolby Enabled speakers as the front presence speakers.

This utilizes sound reflected from ceiling and lets you enjoy overhead sound only from speakers that are placed at the same level as traditional speakers.

For details, refer to the instruction manual for the Dolby Enabled speakers.



NOTE

- Place the Dolby Enabled speakers on top of or near the traditional front speakers.
- A Dolby Enabled speaker unit may be integrated into a traditional speaker.

Supported devices and file formats

Supported Bluetooth® devices

The following Bluetooth devices can be used by the unit.

- Bluetooth devices that support A2DP can be used.
- Operation of all Bluetooth devices cannot be guaranteed.

Supported USB devices

The following USB devices can be used by the unit.

- This unit is compatible with USB memory devices that are in FAT16 or FAT32 format. Do not connect any other type of USB devices.
- USB devices with encryption cannot be used.
- Operation of all USB devices cannot be guaranteed.

Supported file formats

The following file formats can be used by the unit.

File	Sampling frequency (kHz)	Quantization bits (bit)	Bitrate (kbps)	Number of channels	Support for gapless playback
WAV *	32/44.1/48/ 88.2/96/176.4/ 192/352.8/384	16/24/32	-	2	~
мрз	32/44.1/48	-	8 to 320	2	-
WMA	32/44.1/48	-	8 to 320	2	-
MPEG-4 AAC	32/44.1/48	-	8 to 320	2	-
FLAC	32/44.1/48/ 88.2/96/176.4/ 192/352.8/384	16/24	-	2	~
ALAC	32/44.1/48/ 88.2/96	16/24	-	2	~
AIFF	32/44.1/48/ 88.2/96/176.4/ 192/352.8/384	16/24/32	-	2	~
DSD	2.8 MHz/ 5.6 MHz/ 11.2 MHz	1	-	2	~

^{*} Linear PCM format only. 32 bit-float files cannot be played back.

[•] The playable file formats differ depending on the software installed on media servers (PCs/NAS). Refer to the instruction manual of the server software for details.

[•] Digital Rights Management (DRM) contents cannot be played back.

Zone output

Multi-zone output

Multi-zone output is shown as follows.

	Output		
	Using the unit's internal amplifier	Using an external amplifier ZONE OUT jacks	
Input	EXTRA SP 1-2 jacks		
	Zone2	Zone2	
Digital audio (HDMI)	-	-	
Digital audio (COAXIAL/ OPTICAL)	***************************************	→ (*2)	
Analog audio (AUDIO)	→	→	
USB (*1)	→	→	
Network sources (*1)	→	→	
TUNER	→	→	

^{→:} Available

NOTE

During the party mode, the input source selected in the Main zone is played back in all zones.

Related links

- "Connecting zone speakers using the unit's internal amplifier" (p.152)
- "Connecting zone speakers using an external amplifier" (p.153)
- "Enjoying the same source in multiple rooms (party mode)" (p.157)

^{*1} To play back DSD audio in Zone2, select "Main Zone Sync" as the Zone2 input, or use the party mode.

^{*2} It is available when PCM signals (2 channels) are input.

Trademarks

Trademarks

The trademarks used in this manual are as follows.



DOLBY ATMOS[®]

Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, Dolby Surround, Dolby Vision, and the double-D symbol are trademarks of Dolby Laboratories.



For DTS patents, see http://patents.dts.com.

Manufactured under license from DTS, Inc. DTS, the Symbol, DTS in combination with the Symbol, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries.

© DTS, Inc. All Rights Reserved.



This AV Receiver is compatible with AirPlay 2. iOS 11.4 or later is required.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Apple, AirPlay, Apple TV, Apple Watch, iPad, iPad Air, iPad Pro, iPhone, Lightning, and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.

Amazon Alexa™

Amazon, Alexa, Amazon Music and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

App StoreSM

App Store is a service mark of Apple Inc.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator. Inc.

x.v.Color™

"x.v.Color" is a trademark of Sony Corporation.

Android™ Google Play™

Android and Google Play are trademarks of Google LLC.



The Wi-Fi CERTIFIED™ Logo and Wi-Fi Protected Setup are certification marks of Wi-Fi Alliance®.

Wi-Fi, Wi-Fi CERTIFIED, Wi-Fi Protected Setup and WPA2 are registered trademarks of Wi-Fi Alliance®.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Yamaha Corporation is under license.





Digital Audio Broadcasting

The unit supports DAB/DAB+ tuning.

SILENT ™ CINEMA

"SILENT CINEMA" is a trademark of Yamaha Corporation.



MusicCast is a trademark or registered trademark of Yamaha Corporation.



Yamaha Eco-Label is a mark that certifies products of high environmental performance.

Google Noto Fonts

This product uses the following fonts.

Copyright © June 2015, Google (https://www.google.com/get/noto/#sans-lgc), with Reserved Font Name Noto Sans.

Copyright © June 2015, Google (https://www.google.com/get/noto/help/cjk/), with Reserved Font Name Noto Sans CJK.

This Font Software is licensed under the SIL Open Font License, Version 1.1.

This license is available with a FAQ at: http://scripts.sil.org/OFL

GPL/LGPL

This product utilizes GPL/LGPL open-source software in some sections. You have the right to obtain, duplicate, modify, and redistribute this open-source code only. For information on GPL/LGPL open source software, how to obtain it, and the GPL/LGPL license, refer to the Yamaha Corporation website

(https://download.yamaha.com/sourcecodes/musiccast/).

Licenses

For information on the licenses of the third-party software in this product, refer to the following.

http://(IP address of this product*)/licenses.html

* IP address of this product is checked with MusicCast CONTROLLER.

Specifications

Specifications

The specifications of this unit are as follows.

Input jacks

Analog Audio

• Audio x 4 (including PHONO)

Digital Audio

- Optical x 1 (Supported frequencies: 32 kHz to 96 kHz)
- Coaxial x 1 (Supported frequencies: 32 kHz to 192 kHz)

HDMI Input

HDMI x 7

Other jacks

- USB x 1 (USB2.0)
- NETWORK (Wired) x 1 (100Base-TX/10Base-T)

Output jacks

Analog Audio

- Speaker Out x 9 (7 ch) (FRONT L/R, CENTER, SURROUND L/R, EXTRA SP 1 L/R*1, EXTRA SP 2 L/R*2)
- *1 Assignment is possible [F.PRESENCE, ZONE2]
- *2 Assignment is possible [SURROUND BACK, ZONE2, BI-AMP (FRONT L/R)]
- Pre Out x 4 (FRONT L/R, Subwoofer [monaural] x 2)
- ZONE2 OUT x 2 (L/R)
- Headphone x 1

HDMI Output

• HDMI OUT x 1

Other jacks

- YPAO x 1
- REMOTE IN x 1
- REMOTE OUT x 1
- TRIGGER OUT x 1

нрмі

HDMI Features:

 4K UltraHD Video (include 4K/60, 50Hz 10/12bit), 3D Video, ARC (Audio Return Channel), eARC (enhanced Audio Return Channel), HDMI Control (CEC), Auto Lip Sync, Deep Color, "x.v.Color", HD audio playback, 21:9 Aspect Ratio, BT.2020 Colorimetry, HDR Compatible, Dolby Vision, Hybrid Log-Gamma

Video Format (Repeater Mode)

- VGA
- 480i/60 Hz
- 576i/50 Hz
- 480p/60 Hz
- 576p/50 Hz
- 720p/60 Hz, 50 Hz
- 1080i/60 Hz, 50 Hz
- 1080p/60 Hz, 50 Hz, 30 Hz, 25 Hz, 24 Hz
- 4K/60 Hz, 50 Hz, 30 Hz, 25 Hz, 24 Hz

Audio Format

- Dolby Atmos
- · Dolby TrueHD
- · Dolby Digital Plus
- · Dolby Digital
- DTS:X
- DTS-HD Master Audio
- DTS-HD High Resolution
- DTS Express
- DTS
- DSD 2-ch to 6-ch (2.8 MHz)
- PCM 2-ch to 8-ch (Max. 192 kHz/24-bit)

Content Protection: HDCP 1.4/2.3 compatible

Link Function: CEC supported

TUNER

Analog Tuner

- [U.K., Europe and Russia models]
 DAB/FM with Radio Data System x 1 (TUNER)
- [Australia model]
- DAB/FM x 1 (TUNER)
 [Other models]
 FM/AM x 1 (TUNER)

USB

Capable of Mass Storage Class USB Memory

Current Supply Capacity: 1.0 A

Bluetooth

Sink Function

- Source Device to AVR (ex. Smartphone/Tablet)
- · Supported profile
 - · A2DP, AVRCP
- · Supported codec
 - · SBC, AAC

Source Function

- AVR to Sink Device (ex. Bluetooth Headphone)
- · Supported profile
 - · A2DP, AVRCP
- · Supported codec
 - · SBC
- Capable of Play/Stop Operation from Sink Device

Bluetooth version

• Ver. 4.2

Wireless output

• Bluetooth Class 2

Maximum communication distance

• 10 m (33 ft) without interference

Network

PC Client Function

AirPlay 2 supported

Internet Radio

music streaming service

Wi-Fi function

- Capable of WPS by PIN Method and Push-Button-Method
- · Available Security Method: WEP, WPA2-PSK (AES), Mixed Mode
- Wireless LAN Standards: IEEE 802.11 a/b/g/n/ac*
 - * 20 MHz channel bandwidth only
- Radio Frequency: 2.4/5 GHz

Compatible Decoding Formats

Decoding Format

- · Dolby Atmos
- Dolby TrueHD, Dolby Digital Plus
- · Dolby Digital
- DTS:X
- DTS-HD Master Audio, DTS-HD High Resolution, DTS Express
- DTS, DTS 96/24, DTS-ES Matrix 6.1, DTS-ES Discrete 6.1

APPENDIX > Specifications

Post Decoding Format

- Dolby Surround
- DTS Neo: 6 Music, DTS Neo: 6 Cinema
- Neural:X

Audio Section

100 W/ch	
100 W/ch	
100 W/CII	
100 W/ch	
	105 W
	125 W
125 W	
150 W	
130 W	
150 W	
130 W	
160 W	
100 11	
100 or more	
$3.5~\text{mV}/47~\text{k}\Omega$	
200 mV/47 k Ω	
45 mV	
2.4 V	
1.0 V/470 Ω	
1.0 V/470 Ω	
1.0 V/470 Ω	

Maximum Output Level	
• PRE OUT	
• Front L/R	2.0 V
• SUBWOOFER	6.5 V
Headphone Impedance	
	16 Ω or more
Frequency Response	
AUDIO 3 etc. to Front (Pure Direct) (10 Hz to 100 kHz)	+0/-3 dB
RIAA Equalization Deviation	
• PHONO (20 Hz to 20 kHz)	0±0.5 dB
Total Harmonic Distortion	
 PHONO to PRE OUT (Pure Direct) (1 kHz, 1 V) 	0.02% or less
AUDIO 3 etc. to Front (Pure Direct) (20 Hz to 20 kHz, 50 W, 8 $\Omega)$	0.04% or less
Signal to Noise Ratio (IHF-A Network)	
• PHONO (Pure Direct) (Input 1 $k\Omega$ Shorted, Speaker Out)	95 dB or more
	110 dB or more
Residual Noise (IHF-A Network)	
Front L/R (Speaker Out)	150 μV or less
Channel Separation	
 PHONO (Input 1 kΩ Shorted, 1 kHz/10 kHz) 	60 dB/55 dB or more
• AUDIO 3 etc. (Input 1 k Ω Shorted, 1 kHz/10 kHz)	70 dB/50 dB or more
Volume Control	
Main Zone	MUTE, -80 dB to +16.5 dB (0.5 dB Step)
• Zone2	MUTE, -80 dB to +10.0 dB (0.5 dB Step)
Tone Control Characteristics	
Main Zone	
Bass Boost/Cut	±6 dB/0.5 dB Step at 50 Hz
Bass Turnover	350 Hz
Treble Boost/Cut	±6 dB/0.5 dB Step at 20 kHz
Treble Turnover	3.5 kHz
• Zone2	
Bass Boost/Cut	±6 dB/0.5 dB Step at 50 Hz
Bass Turnover	350 Hz
Treble Boost/Cut	± 6 dB/0.5 dB Step at 20 kHz
Treble Turnover	3.5 kHz

Filter Characteristics

(fc=40/60/80/90/100/110/120/160/200 Hz)

• H.P.F. (Front, Center, Surround, Surround Back)

• L.P.F. (Subwoofer) 24 dB/oct.

FM Section

Tuning Range

• [U.S.A. and Canada models]

87.5 MHz to 107.9 MHz

 [Asia, Taiwan, Brazil, Central and South America and General models]

87.5/87.50 MHz to 108.0/108.00 MHz

• [Other models]

87.50 MHz to 108.00 MHz

50 dB Quiet Sensitivity (IHF, 1 kHz, 100% MOD.)

Monaural

3 μV (20.8 dBf)

12 dB/oct.

Signal to Noise Ratio (IHF)

MonauralStereo

69 dB 68 dB

Harmonic Distortion

Monaural

0.5% 0.6%

Stereo

Antenna Input

75 Ω unbalanced

AM Section (Except for U.K., Europe, Russia and Australia models)

Tuning Range

• [U.S.A. and Canada models]

530 kHz to 1710 kHz

• [Asia, Taiwan, Brazil, Central and South America and General models]

 $530/531 \, \mathrm{kHz} \, \mathrm{to} \, 1710/1611 \, \mathrm{kHz}$

• [Other models]

531 kHz to 1611 kHz

DAB Section (U.K., Europe, Russia and Australia models)

Tuning Range

174.928 MHz to 239.200 MHz (Band III)

Support Audio Format

MPEG 1 Layer II/MPEG-4 HE-AAC v2 (aacPlus v2)

Antenna

 $75\,\Omega\,unbalanced$

General

Power Supply		
• [U.S.A. and Canada models]	AC 120 V, 60 Hz	
 [Taiwan, Brazil and Central and South America models] 	AC110 to 120 V, 60 Hz	
• [China model]	AC 220 V, 50 Hz	
• [Korea model]	AC 220 V, 60 Hz	
• [Australia model]	AC 240 V, 50 Hz	
• [U.K., Europe and Russia models]	AC 230 V, 50 Hz	
• [Asia and General models]	AC 220 to 240 V, 50/60 Hz	
Power Consumption		
	360 W	
Standby Power Consumption		
HDMI Control Off, Standby through Off, Network Standby Off	0.1 W	
HDMI Control On, Standby through On, Network Standby Off		
• Input: AUDIO 1 (HDMI no signal)	0.8 W	
HDMI Control Off, Standby through Off, Network Standby On, Bluetooth Standby Off		
• Wired	1.6 W	
• Wi-Fi	1.7 W	
HDMI Control Off, Standby through Off, Network Standby On, Bluetooth Standby On		
• Wired	1.6 W	
HDMI Control On, Standby through On, Network Standby On, Bluetooth Standby On		
• Wi-Fi	2.4 W	
Maximum Power Consumption		
[Asia, Brazil, Central and South America and General models]	590 W	
Dimensions (W x H x D)		
	435 x 171 x 372 mm	
	(17-1/8" x 6-3/4" x 14-5/8")	
Reference Dimensions (with wireless antenna upright)		
* Including legs and protrusions		
	435 x 245 x 372 mm	
	(17-1/8" x 9-5/8" x 14-5/8")	
Weight		
	10.2 kg (22.5 lbs)	

^{*} The contents of this manual apply to the latest specifications as of the publishing date. To obtain the latest manual, access the Yamaha website then download the manual file.

Default settings

Default settings of the Option menu

The default settings of the "Option" menu are as follows. YPAO Volume YPAO Volume Off Adaptive DRC DSP/Surround Adaptive DSP Level On • Enhancer • HDMI 1-7, AUDIO 1-5, TV Off Others On Volume Trim • Input Trim 0.0 dB · Subwoofer Trim 0.0 dB Lipsync On **Audio Signal Information** Video Signal Information Audio In Video Out Off On Auto Play Shuffle Off Off Repeat Volume Interlock Limited

Default settings of the Setup menu

The default settings of the "Setup" menu are as follows.

Speaker

Power Amp Assign	Basic
Configuration	
• Subwoofer	Use
• Front	Small
• Center	Small
• Surround	Small
Surround Back	None
Front Presence	Small
• Layout	Front Height
• Crossover	80 Hz
Subwoofer Phase	Normal
Extra Bass	Off
Virtual CINEMA FRONT	Off
Distance	3.00 m (10.0 ft)
Level	0.0 dB
Equalizer	Off
Speaker Impedance	8 Ω MIN
Test Tone	Off
НДМІ	
HDMI Control	On
Audio Output	Off
Standby Through	
• U.K., Europe, Russia and Korea models	Auto
• Other models	On
4K Upscaling	Off
HDCP Version	
• HDMI 1-7	Auto

Standby Sync	Auto
ARC	Oi
HDMI Video Format	
• HDMI 1-7	Mode :
Sound	
Tone Control	Treble, Bas Bypass (0.0 dB
	* When both "Treble" and "Bass" are 0.0 dB, "Bypass" appears
DSP Parameter	
Surround Decoder	
 Surround Decoder 	Auto
Center Spread	Of
Center Image	0
All-Channel Stereo	
• Level	
• Front / Rear Balance	
 Left / Right Balance 	
Height Balance	:
Monaural Mix	Of
Lipsync	
• Select	Auto
	(This setting is effective when a TV that supports an automatic lipsync function is connected to the unit via HDMI.
Adjustment	0 ms
Dialogue	
Dialogue Level	
DTS Dialogue Control	
Dialogue Lift	
Volume	
• Dynamic Range	Maximum
Max Volume	+16.5 dB
Initial Volume	Of
Virtual Speaker	
• VSBS	Oı

DTS Mode	Mode 1
DT3 Mode	Mode
Scene	
Scene Setting	
Scene Rename	
Multi Zone	
Information	
Zone2	
• Volume	
• Volume	Variable
Max Volume	+10.0 dE
Initial Volume	Of
• Left / Right Balance	(
Sound Mode	
Monaural	Of
• Enhancer	Or
• Extra Bass	Of
Tone Control	Auto
Audio Delay	0 m:
Party Mode Set	
• Zone2	Enable
Zone Rename	
Main Zone	
• Zone2	
Function	
Input Setting	
Input Rename	
• HDMI 1-7	Auto
• Others	Manua
(For AUDIO 3-5, TUNER, TV, MusicCast Link, SERVER, NET RADIO, Bluetooth, USB only "	Manual" can be selected.
Input Skip	Of
TV Audio Input	AUDIO :

Trigger Output	
Trigger Mode	Power
Target Zone	All
User Interface	
Display Settings	
• Dimmer	-2
• Volume	dB
Short Message	On
 Position 	Bottom
Touch Sound	On
Remote Color Key	Default
Memory Guard	Off
ECO	
Auto Power Standby	20 minutes
• ECO Mode	Off
Tuner	FM50/AM9
(Asia, Taiwan, Brazil, General, and Central and South America models only)	
Initialization	-
Backup/Restore	-
Firmware Update	-
Network	
Information	-
Network Connection	Wired
IP Address	
• DHCP	On
DMC Control	Enable
Network Standby	Auto
Network Name	-
MusicCast Link Power Interlock	Off

Bluetooth

Bluetooth	On
Audio Receive	
Disconnect	-
Bluetooth Standby	On
Audio Send	
Transmitter	Off
Device Search	-
Language	
	English

Default settings of the Front Display menu

The default settings of the "Front Display" menu are as follows. Dimmer -2 Zone Power Off Settings • Function Lock • Volume Knob Lock Off · Input Selector Lock Off · Scene Key Lock Off • Touch Sound On · Remote Sensor On • Remote ID ID1 · Information Skip Off Initialization • Backup/Restore · Firmware Update • Retail Demo Mode Off

Yamaha Global Site https://www.yamaha.com/

Yamaha Downloads https://download.yamaha.com/

Manual Development Group © 2020 Yamaha Corporation

Published 10/2020 NV-A1

AV19-0055





EN Quick Start Guide

FR Guide de démarrage rapide

ES Guía de inicio rápida

AV Receiver/Ampli-Tuner Audio-Vidéo/Receptor AV

Manual Development Group © 2020 Yamaha Corporation Published 07/2020 KSEM-A0

VDN2480

RX-A2A

- Be sure to read the supplied "Safety Brochure" before using the unit.
- This document explains basic speaker system setup and unit configuration.
- For more information about this product, refer to the User Guide. Access the following website
 to view the User Guide.
- Assurez-vous de lire la « Brochure sur la Sécurité » avant d'utiliser l'appareil.
- Ce document décrit la configuration de base du système d'enceintes et la configuration de l'appareil.
- Pour de plus amples informations sur ce produit, reportez-vous au Mode d'emploi. Accédez au site Web suivant pour consulter le Mode d'emploi.
- Antes de usar la unidad, asegúrese de leer el "Folleto de seguridad" suministrado.
- En este documento se explica la configuración básica de un sistema de altavoces y de la unidad.
- Para obtener más información sobre este producto, consulte el Manual de usuario. Acceda al siguiente sitio web para ver el Manual de usuario.



https://manual.yamaha.com/av/20/rxa2a/



This icon indicates that additional information can be found in the User Guide.

Cette icône indique que des informations supplémentaires sont disponibles dans le Mode d'emploi.

Este icono indica que puede consultar información adicional en el Manual de usuario.



AV SETUP GUIDE

AV SETUP GUIDE is an app that guides you through the process of connecting a TV, playback device, and speakers to the AV receiver. Search "AV SETUP GUIDE" on the App Store or Google Play for details.

AV SETUP GUIDE est une application qui vous guide à travers le processus de connexion d'un téléviseur, d'un appareil de lecture et d'enceintes à l'ampli-tuner audio-vidéo. Recherchez « AV SETUP GUIDE » sur l'App Store ou Google Play pour en savoir plus.


AV SETUP GUIDE es una aplicación que le guía en el proceso de conectar un televisor, un dispositivo de reproducción y altavoces al receptor AV. Para más información, busque "AV SETUP GUIDE" en App Store o Google Play.



Confirming accessories and preparing cables (not supplied)

Confirmation des accessoires et préparation des câbles (non fournis)

Comprobación de los accesorios y preparación de los cables (no suministrados)

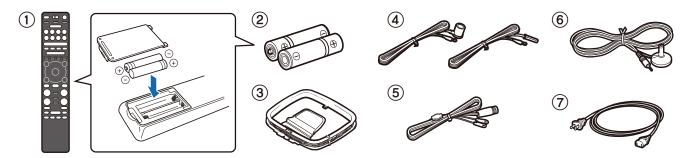

Accessories

- 1 Remote control (x1)
- 2 Batteries (AAA, R03, UM-4) (×2)
- 3 AM antenna (×1) 1)
- (4) FM antenna (x1) 1)
 One of the above is supplied depending on the region of purchase.
- (5) DAB/FM antenna ²⁾
- 6 YPAO microphone (×1)
- Power cable (x1)
 The supplied power cable varies depending on the region of purchase.
- Quick Start Guide (this booklet)
- Safety Brochure
- Except models for U.K., Europe, Russia, and Australia
- ²⁾ Models for U.K., Europe, Russia, and Australia only

Cables (not supplied)

- Speaker cables (depending on the number of speakers)
- Audio pin cable (x1)
- HDMI cables (x3)

Accessoires

- 1) Télécommande (×1)
- 2 Batteries (AAA, R03, UM-4) (x2)
- (3) Antenne AM (×1) 1)
- Antenne FM (×1) 1)

 L'élément fourni dépend de la région d'achat.
- (5) Antenne DAB/FM ²⁾
- 6 Microphone YPAO (×1)
- Câble d'alimentation (x1)
 Le câble d'alimentation fourni dépend de la région d'achat.
- Guide de démarrage rapide (ce livret)
- Brochure sur la Sécurité
- 1) Sauf les modèles pour le Royaume-Uni, l'Europe, la Russie et l'Australie
- 2) Modèles pour le Royaume-Uni, l'Europe, la Russie et l'Australie uniquement

Câbles (non fournis)

- Câbles d'enceinte (en fonction du nombre d'enceintes)
- Câble de broche audio (x1)
- Câbles HDMI (x3)

Accesorios

- 1) Mando a distancia (x1)
- 2) Pilas (AAA, R03, UM-4) (×2)
- (3) Antena de AM (×1) $^{1)}$
- (4) Antena de FM (x1) 1) Se suministra uno de los elementos indicados anteriormente, según la región en la que se realice la compra.
- (5) Antena de DAB/FM ²⁾
- 6 Micrófono YPAO (x1)
- (7) Cable de alimentación (x1) El cable de alimentación suministrado varía según la región en la que se realice la compra.
- Guía de inicio rápido (este folleto)
- · Folleto de seguridad
- 1) Excepto modelos del Reino Unido, Europa, Rusia y Australia
- Solo modelos del Reino Unido, Europa, Rusia y Australia

Cables (no suministrados)

- Cables de altavoz (según el número de altavoces)
- Cable de audio con clavija (x1)
- Cables HDMI (x3)

2

Connecting speakers/subwoofer Raccordement des enceintes/du caisson de graves Conexión de los altavoces y el subgraves

Positioning speakers for 5.1.2-channel system

Positionnement des enceintes pour un système à 5.1.2 voies

Posicionamiento de los altavoces para sistema de 5.1.2 canales



FI FRONT (L)

FR FRONT®

C CENTER
SL SURROUND ()

SR SURROUND®

FPL F. PRESENCE®

FPR F. PRESENCE ®

SW SUBWOOFER










- Do not prepare speaker cables in a place close to the unit. Accidentally dropping
 wire strands into the unit's interior could result in a short circuit or malfunction of the unit.
- Do not connect speaker cables improperly. Failure to observe this precaution could cause a short circuit resulting in damage to, or malfunctioning of, the unit or speakers.
- Ne préparez pas les câbles d'enceinte dans un lieu proche de l'appareil. Si vous lâchez par inadvertance les torons de câble à l'intérieur de l'appareil, cela pourrait provoquer un court-circuit ou un dysfonctionnement de l'appareil.
- Ne raccordez pas de manière incorrecte les câbles d'enceinte. Le non-respect de cette précaution pourrait provoquer un court-circuit, entraînant des dommages ou un dysfonctionnement de l'appareil ou des enceintes.
- No prepare los cables de los altavoces cerca de la unidad. Si caen accidentalmente hilos de cable dentro de la unidad, podría producirse un cortocircuito o una avería de la unidad.
- No conecte los cables de los altavoces de forma incorrecta. No tener en cuenta esta precaución podría provocar un cortocircuito que dañase o averiase la unidad o los altavoces.

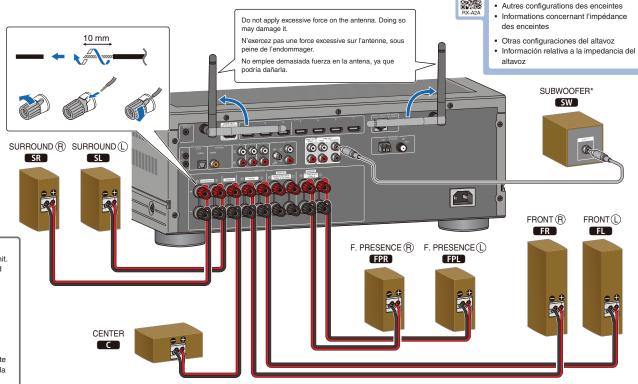

- * Use a subwoofer equipped with built-in amplifier. Up to two subwoofers can be connected.
- * Utilisez un caisson de graves équipé d'un amplificateur intégré. Jusqu'à deux caissons de graves peuvent être connectés.


Other speaker configurationsInformation regarding the speaker

impedance

* Utilice un altavoz de subgraves con un amplificador incorporado. Es posible conectar hasta dos altavoces de subgraves.



Connecting external devices Raccordement des appareils externes Conexión de los dispositivos externos

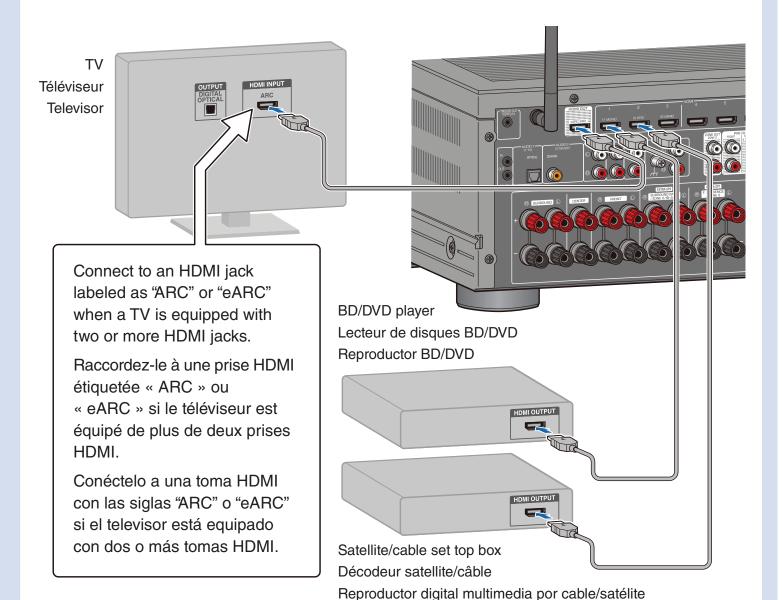



To play TV sound through this unit, configure settings on both the unit and TV.


Pour lire le son du téléviseur par le biais de cet appareil, configurez les réglages à la fois sur l'appareil et le téléviseur.

Para reproducir sonido del televisor con esta unidad, configure los ajustes de la unidad y el televisor.



Connecting the FM/AM antennas or DAB/FM antenna


Raccordement des antennes FM/AM ou de l'antenne DAB/FM Conexión de antenas de FM/AM o DAB/FM

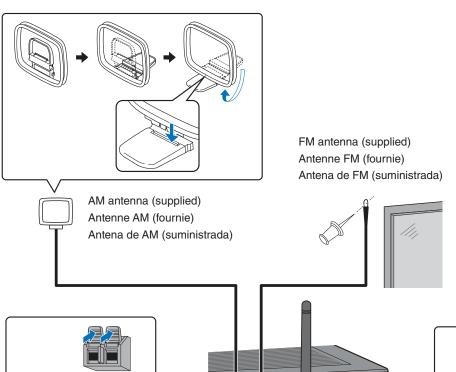




Connecting the power cable to an AC wall outlet

Raccordement du câble d'alimentation à une prise secteur Conexión del cable de alimentación a una toma de CA

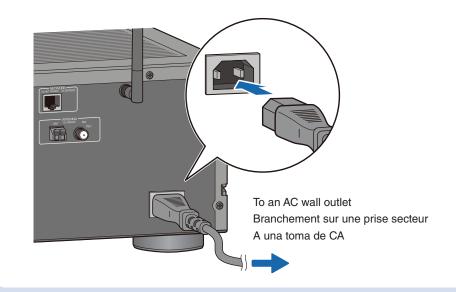

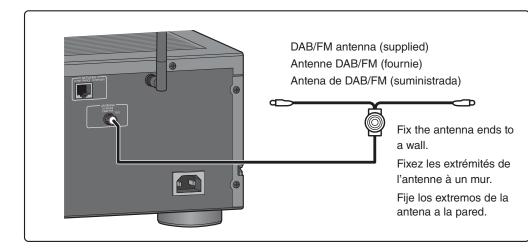



Turning on the unit Mise sous tension de l'appareil Encendido de la unidad



1 Press (b).

Appuyez sur 🖰.

Pulse 🖰.

2 Select this unit as the input source on the TV.

Sélectionnez cet appareil comme source d'entrée sur le téléviseur.

Seleccione esta unidad como fuente de entrada en el televisor.

If "Check SP Wires" is shown on the front display when the unit is turned on, turn off the unit and be sure that speaker cables have not caused a short circuit.

Si « Check SP Wires » apparaît sur l'afficheur de la face avant à la mise sous tension de l'appareil, éteignez-la, puis assurez-vous que les câbles d'enceinte n'ont pas provoqué un court-circuit.

Si se muestra "Check SP Wires" en el visor delantero al encender la unidad, apague la unidad y compruebe si se ha producido un cortocircuito en los cables de los altavoces.

The network setting screen is displayed on the TV. Press RETURN to cancel this screen and then go to step 7.

L'écran des réglages réseau s'affiche sur le téléviseur. Appuyez sur RETURN pour annuler cet écran, puis passez à l'étape 7.

En el televisor se muestra la pantalla de ajustes de red. Pulse RETURN para cancelar esta pantalla y, a continuación, vaya al paso 7.



Connecting to a network with the MusicCast CONTROLLER app Connexion à un réseau avec l'application MusicCast CONTROLLER Conexión a una red con la aplicación MusicCast CONTROLLER

1 Download the dedicated MusicCast CONTROLLER app to your mobile device on the App Store or Google Play.

Téléchargez l'application MusicCast CONTROLLER dédiée sur votre appareil mobile de l'App Store ou de Google Play.


Descargue la aplicación MusicCast CONTROLLER en su dispositivo móvil desde App Store o Google Play.



Follow the app's on-screen instructions to configure network settings.

Suivez les instructions à l'écran de l'application pour configurer les réglages réseau.

Siga las instrucciones en la pantalla de la aplicación para configurar los ajustes de red.

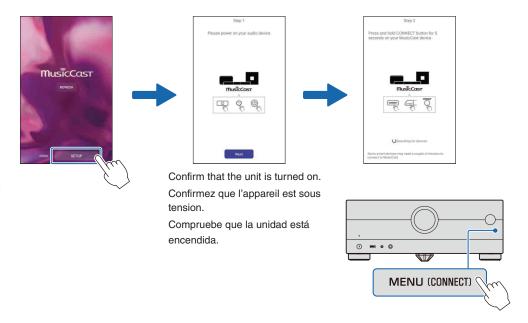

Important notice regarding information security

Visit the website shown at right for details.

Remarque importante concernant la sécurité de l'information Consultez le site Web indiqué à droite pour plus de détails.

Aviso importante sobre la seguridad de la información

Visite el sitio web que se muestra a la derecha para más detalles.



https://manual.yamaha.com/av/policy/mcc/




Optimizing the speaker settings automatically (YPAO) Optimisation automatique des réglages d'enceintes (YPAO) Optimización automática de los ajustes de los altavoces (YPAO)

The Yamaha Parametric room Acoustic Optimizer (YPAO) function detects speaker connections, measures the distances from them to your listening position(s), and then automatically optimizes the speaker settings, such as volume balance and acoustic parameters, to suit your room.

La fonction Yamaha Parametric room Acoustic Optimizer (YPAO) permet de détecter les raccordements des enceintes et de mesurer la distance entre ces dernières et la position d'écoute. Elle optimise ensuite automatiquement les réglages d'enceintes tels que les paramètres d'équilibre du volume et les paramètres acoustiques qui conviennent à la pièce.

La función Yamaha Parametric room Acoustic Optimizer (YPAO) detecta las conexiones de los altavoces, mide las distancias existentes entre los altavoces y las posiciones de escucha y, a continuación, optimiza automáticamente los ajustes de los altavoces, como el balance de volumen y los parámetros acústicos, para adecuarlos a la sala.

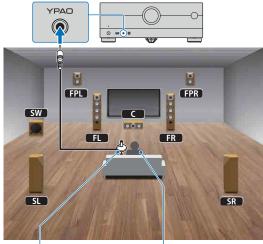

YPAO microphone (supplied)

We recommend the use of a tripod as a microphone stand.

Microphone YPAO (fourni)

Nous conseillons l'utilisation d'un trépied comme support de microphone.

Micrófono YPAO (suministrado)

Se recomienda utilizar un trípode como soporte para el micrófono.

Listening position
Position d'écoute

Listening position



Note the following regarding YPAO measurement

- Do not let children or pets into the room as test tones are output at high volume. (Test tone volume cannot be adjusted.)
- · Keep the room as quiet as possible.
- Avoid becoming an obstacle between speakers and the YPAO microphone.
- 1 Turn on the subwoofer and set the volume

If the crossover frequency can be adjusted, set it to maximum.

- 2 Connect the YPAO microphone to the unit.
 The start-up screen is displayed on the TV. [A]
- 3 Press ENTER on the remote control.

 The measurement will start in 10 seconds.
 It takes about 3 minutes to measure.

 The measurement results screen is displayed on the TV when the measurement finishes. [B]
- 4 Confirm the results displayed on the TV and press ENTER on the remote control.
- 5 Use the cursor keys (⟨√/▷) on the remote control to select "Save" and press ENTER on the remote control.
- 6 Disconnect the YPAO microphone from the unit.

Veuillez noter les points suivants concernant la mesure YPAO

- Ne laissez pas les enfants ou les animaux dans la pièce, car les signaux tests sont restitués à un volume élevé. (Le volume des signaux tests ne peut pas être réglé.)
- Faites en sorte que la pièce soit le plus calme possible.
- Évitez de faire obstacle entre les enceintes et le microphone
 YPAO
- Allumez le caisson de basses et réglez le volume à moitié.

Si la fréquence de coupure peut être réglée, réglez-la sur le maximum.

- 2 Raccordez le microphone YPAO à l'appareil.
 L'écran de démarrage s'affiche sur le téléviseur. A
- 3 Appuyez sur ENTER sur la télécommande.

 La mesure commencera dans 10 secondes.

 La mesure dure environ 3 minutes.

 Lorsque la mesure est terminée, l'écran des résultats de la mesure s'affiche sur le téléviseur. [B]
- 4 Confirmez les résultats affichés sur le téléviseur et appuyez sur ENTER sur la télécommande.
- 5 Utilisez les touches de curseur (
 √>) de la télécommande pour sélectionner
 - « Enregistrer » et appuyez sur ENTER sur la télécommande.
- 6 Débranchez le microphone YPAO de l'appareil.

Tenga en cuenta lo siguiente respecto a la medición

- No deje a niños ni mascotas en la sala, pues los tonos de prueba se emiten a un volumen elevado. (El volumen de los tonos de prueba no puede aiustarse).
- Mantenga la sala lo más silenciosa posible.
- No se coloque entre los altavoces y el micrófono YPAO.
- 1 Encienda el altavoz de subgraves y ajuste su volumen a la mitad.

Si se puede ajustar la frecuencia de cruce, establézcala en el máximo

- 2 Conecte el micrófono YPAO a la unidad. En el televisor se muestra la pantalla de inicio. A
- 3 Pulse ENTER en el mando a distancia.

 La medición comenzará al cabo de 10 segundos.

 La medición tarda unos 3 minutos en realizarse.

 La pantalla de resultados de la medición se muestra en el televisor cuando acaba la medición. [B]
- 4 Compruebe los resultados que se muestran en el televisor y pulse ENTER en el mando a distancia.
- 5 Use las teclas del cursor (
 /> del mando a distancia para seleccionar "Guardar" y pulse ENTER en el mando a distancia.
- 6 Desconecte el micrófono YPAO de la unidad.











If an error message (such as E-1) or warning message (such as W-2) is displayed, resolve the problem.

Si un message d'erreur (par exemple E-1) ou un message d'avertissement (par exemple W-1) est affiché, résolvez le problème.

Si aparece algún mensaje de error (como E-1) o advertencia (como W-2), resuelva el problema

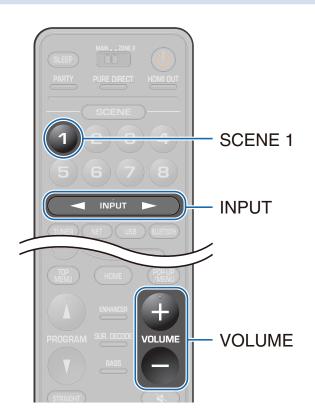

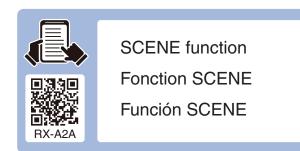

Playing a BD/DVD

- 1 Press SCENE 1.
 - HDMI1 is selected as the input source. HDMI1 can also be selected using INPUT.
- 2 Start playback on the BD/DVD player.
- **3** Adjust the volume using VOLUME.

Lecture d'un disque BD/DVD

- 1 Appuyez sur SCENE 1.
 - HDMI1 est sélectionné comme source d'entrée. HDMI1 peut également être sélectionné avec INPUT.
- **2** Commencez la lecture sur le lecteur BD/DVD.
- **3** Réglez le volume avec VOLUME.

Reproducción de BD/DVD

- 1 Pulse SCENE 1.
 - Se selecciona HDMI1 como fuente de entrada. HDMI1 también se puede seleccionar con INPUT.
- 2 Inicie la reproducción en el reproductor BD/DVD.
- 3 Ajuste el volumen con VOLUME.



Playing music files on a Bluetooth® device

- 1 Press BLUETOOTH.
- 2 Select the unit from the available device list on the Bluetooth device.
- 3 Select a music file and start playback on the Bluetooth device.

Lecture de fichiers de musique sur un dispositif Bluetooth®

- 1 Appuyez sur BLUETOOTH.
- 2 Sélectionnez l'appareil dans la liste des appareils disponibles sur le dispositif Bluetooth.
- 3 Sélectionnez un fichier de musique et démarrez la lecture sur le dispositif Bluetooth.

Reproducción de archivos de música almacenados en un dispositivo Bluetooth[®]

- **1** Pulse BLUETOOTH.
- 2 Seleccione la unidad en la lista de dispositivos disponibles en el dispositivo Bluetooth.
- 3 Seleccione un archivo de música e inicie la reproducción en el dispositivo Bluetooth.

AirPlay

Click or tap the AirPlay icon in iTunes or on the iPhone, and select the unit as the audio output destination to listen to music using the AirPlay function.

Cliquez ou appuyez sur l'icône AirPlay dans iTunes ou sur l'iPhone, et sélectionnez l'appareil comme destination de sortie audio pour écouter de la musique au moyen de la fonction AirPlay.

Haga clic en el icono de AirPlay o toque dicho icono en iTunes o en el iPhone y seleccione la unidad como destino de salida de audio para escuchar música con la función AirPlay.



AV Receiver Safety Brochure	EN
Ampli-tuner audio-vidéo Brochure sur la Sécurité	FR
Receptor AV Folleto de seguridad	ES

RX-A2A RX-V6A TSR-700 RX-V4A TSR-400



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO OUALIFIED SERVICE PERSONNEL.

Explanation of Graphical Symbols



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 


The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.

- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or groundingtype plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

(0502 UL60065 03)

FCC INFORMATION (U.S.A.)

1 IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

- IMPORTANT: When connecting this product to accessories and/ or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.
- 3. NOTE: This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures: Relocate either this product or the device that is being affected by the interference. Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s. In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable. If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, 6600 Orangethorpe Ave, Buena Park, CA90620 The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

(0529-M02 FCC class B)

COMPLIANCE INFORMATION STATEMENT (Supplier's declaration of conformity procedure)

Responsible Party: Yamaha Corporation of America

Address: 6600 Orangethorpe Avenue, Buena Park, CA 90620

Telephone : 714-522-9011

Type of Equipment : AV Receiver

Model Name: RX-A2A, RX-V6A, RX-V4A, TSR-700, TSR-400

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

(0529-M06 FCC sDoc)

 This applies only to products distributed by Yamaha Corporation of America

FCC NOTICE (U.S.A.)

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE).
- This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

IC NOTICE (Canada)

- This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 - 1. This device may not cause interference.
 - This device must accept any interference, including interference that may cause undesired operation of the device.
- This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

(for Canada)

For indoor use only (5150-5350 MHz).

The model number, serial number, power requirements, etc., may be found on or near the name plate, which is at the rear of the unit. You should note this serial number in the space provided below and retain this manual as a permanent record of your purchase to aid identification in the event of theft.

Model No.

Serial No.

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE USE. BE SURE TO FOLLOW THESE INSTRUCTIONS.

The precautions listed below are to prevent risk of harm to the user and others, as well as to prevent property damage, and to help the user use this unit properly and safely. Be sure to follow these instructions.

After reading this manual, be sure to keep it in a safe place where it can be referenced at any time.

- Be sure to request inspections or repairs from the dealer where you purchased the unit or from qualified Yamaha service personnel.
- Yamaha cannot be held responsible for injury to you or damage of the products caused by improper use or modifications to the unit, or data that is lost or destroyed.
- This product is for ordinary homes. Do not use for applications requiring high reliability, such as managing lives, health care or high-value assets.



WARNING

This content indicates "risk of serious injury or death."

If you notice any abnormality

- If any of the following abnormalities occur, immediately turn off the power and disconnect the power plug.
 - The power cord/plug is damaged.
 - An unusual smell, unusual sound or smoke is emitted from the unit.
 - Foreign material or water gets into the interior of the unit.
 - There is a loss of sound during use.
 - There is a crack or damage in the unit.

Continued use could cause electric shocks, a fire, or malfunctions. Immediately request an inspection or repair from the dealer where you purchased the unit or from qualified Yamaha service personnel.

Power supply

- Do not do anything that could damage the power cord.
 - Do not place it near a heater.
 - Do not bend it excessively or alter it.
 - Do not scratch it.
- Do not place it under a heavy object.
 Using the power cord with the core of the cord exposed could cause electric shocks or a fire.
- Do not touch the power plug or cord if there is a chance of lightning.
- Failure to observe this may cause electric shocks.
- Use this unit with the power supply voltage printed on it.
 - Failure to connect to an appropriate AC outlet may cause a fire, electric shocks, or malfunctions.
- [RX-A2A]
 Be sure to use the supplied power cord.

 Failure to observe the above may cause a fire, burns, or malfunctions.
- [RX-A2A]
 Do not use the supplied power cord for other units.

 Failure to observe the above may cause a fire, burns, or malfunctions.
- Check the electric plug periodically and remove any dirt or dust which may have accumulated on it.
 Failure to observe this may cause a fire or electric shocks.
- When setting up the unit, make sure that the AC outlet you are using is easily accessible.
 If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the AC outlet. Even when the power switch is turned off, as long as the power cord is not unplugged from the wall AC outlet, the unit will not be disconnected from the power source.
- If you hear thunder or suspect approaching lightning, quickly turn off the power switch and pull the power plug from the AC outlet.
- Failure to observe this may cause a fire or malfunctions.
- If not using the unit for long periods of time, be sure to pull the power plug from the AC outlet.
 Failure to observe this may cause a fire or malfunctions.

Do not disassemble

Do not disassemble or modify this unit.
 Failure to observe this may cause a fire, electric shocks, injury, or malfunctions.

Water warning

- Do not expose the unit to rain, use it near water or in damp or wet conditions, or place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings or places where water may drop. A liquid such as water getting into the unit may cause a fire, electric shocks, or malfunctions.
- Never insert or remove an electric plug with wet hands. Do not handle this unit with wet hands.
 Failure to observe this may cause electric shocks or malfunctions.

Fire warning

• Do not place any burning items or open flames near the unit, since they may cause a fire.

Maintenance and care

 Do not use aerosols or spray-type chemicals that contain combustible gas for cleaning or lubrication.
 The combustible gas will remain inside the unit, which may cause explosion or fire.

Handling caution

- Be careful not to drop or apply strong impact to this unit.
- Failure to observe this may cause electric shocks, a fire, or malfunctions.

Battery use

- Do not disassemble a battery.
 If the contents of the battery get on your hands or in your eyes, it can cause blindness or chemical burns.
- Do not dispose of a battery in fire.
 - Do not expose a battery to high temperatures, such as direct sunlight or a fire.
- Doing so may result in the battery bursting, causing a fire or injury.
- Do not attempt to recharge batteries that are not intended to be charged.
- Charging could cause the battery to burst or leak, which can cause blindness, chemical burns, or injury.
- If the batteries do leak, avoid contact with the leaked fluid.
 - If the battery fluid should come in contact with your eyes, mouth, or skin, wash immediately with water and consult a doctor. Battery fluid is corrosive and may possibly cause loss of sight or chemical burns.

Wireless unit

- Do not use this unit near medical devices or inside medical facilities.
 - Radio waves from this unit may affect electro-medical devices.
- Do not use this unit within 15 cm (6 in) of persons with a heart pacemaker implant or a defibrillator implant. Radio waves from this unit may affect electro-medical devices, such as a heart pacemaker implant or defibrillator implant.



CAUTION

This content indicates "risk of injury."

Power supply

- Do not use an AC outlet where the power plug fits loosely when inserted.
 - Failure to observe this may cause a fire, electric shocks, or burns.
- When disconnecting the power plug, always hold the plug itself and not the cord.
 - Pulling by the cord can damage it and cause electric shocks or a fire.
- Insert the power plug firmly all the way into the AC outlet.
 - Using the unit when it is not plugged in sufficiently can cause dust to accumulate on the plug, causing a fire or burns.

Installation

- Do not place the unit in an unstable position where it might accidentally drop or fall over and cause injuries.
- When installing this unit, do not obstruct heat dissipation.
 - Do not cover it with any cloth.
 - Do not install it on a carpet or rug.
 - Do not block this unit's ventilation holes (cooling slits).
 - Do not install the unit in other ways than indicated.
 - Do not use the device in a confined, poorlyventilated location.

Failure to observe the above may trap heat inside the unit, causing a fire or malfunctions. Ensure that there is adequate space around the unit: at least 30 cm (11-3/4 in) on top, 20 cm (7-7/8 in) on the sides, and 20 cm (7-7/8 in) on the rear.

 Do not install the unit in places where it may come into contact with corrosive gases or salt air or places that have excessive smoke or steam.
 Doing so may result in malfunction.

- Avoid being near the unit during a disaster, such as an earthquake.
 - Since the unit may turn over or fall and cause injury, quickly move away from the unit and go to a safe place.
- [RX-A2A, RX-V6A, TSR-700]
- When transporting or moving the unit always use two or more people.
- Attempting to lift the unit by yourself may damage your back, result in other injury, or cause damage to the unit itself.
- Before moving this unit, be sure to turn off the power switch and disconnect all connection cables.
 Failure to observe this may damage the cables or cause you or someone else to trip and fall.
- For proper installation of outdoor antenna, make sure to have it done by the dealer from where you purchased the unit or by qualified service personnel.
 Failure to observe this may cause the installation to fall and result in injury. Installation requires special skills and experience.

Hearing loss

- Do not use the unit for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
- Before connecting the unit to other devices, turn off the power for all devices.
 - Also, before turning the power of all devices on or off, make sure that all volume levels are set to the minimum.
 - Failing to do so may result in hearing loss, electric shock, or device damage.
- When turning on the AC power in your audio system, always turn on the unit LAST, to avoid hearing loss and speaker damage. When turning the power off, the unit should be turned off FIRST for the same reason.
 Failure to observe the above may cause hearing impairment or speaker damage.

Maintenance

- Remove the power plug from the AC outlet before cleaning the unit.
 - Failure to observe this may cause electric shocks.

Handling caution

- Do not touch the surface having this label.
 Doing so may cause burns. The label on the device indicates that the surface to which the label is attached may become hot during operation.
- Do not insert your hand or fingers into the openings of this unit.
 - Failure to observe this may cause injury.

- Do not insert foreign materials such as metal or paper into the openings of this unit.
 Failure to observe this may cause a fire, electric shocks, or malfunctions.
- Keep small parts out of the reach of infants.
 Your children may accidentally swallow them.
- · Do not do the following:
- stand on or sit on the equipment.
- put heavy items on top of the equipment.
- place the equipment in a stack.
- apply unreasonable force to buttons, switches, input/output terminals, etc.
- Failure to observe this may cause injuries or damage to the equipment.
- Avoid pulling the connected cables to prevent injuries or damage to the unit by causing it to fall.

Battery use

- Do not use batteries other than specified batteries.
 Doing so may cause fire or burns, or result in fluid leakage that may cause skin inflammation.
- Do not use new batteries together with old ones.
 Using new ones with old ones could cause a fire, burns. or inflammation due to fluid leaks.
- Do not mix battery types, such as alkaline batteries with manganese batteries, or batteries from different makers, or different types of batteries from the same maker, since this can cause a fire, burns, or inflammation due to fluid leaks.
- Keep batteries away from children.
 A child could accidentally swallow a battery. Failure to observe this may also cause inflammation due to battery fluid leaks.
- Do not put in a pocket or bag, carry, or store batteries together with pieces of metal.
 The battery could short, burst, or leak, causing a fire or injury.
- Always make sure all batteries are inserted in conformity with the +/- polarity markings.
 Failure to do so might result in a fire, burns, or inflammation due to fluid leaks.
- When the batteries run out, or if the unit is not to be used for a long time, remove the batteries from the remote control to prevent possible leakage of the battery fluid.
- When storing or discarding batteries, insulate the terminal area by applying tape, or some other protection.
 - Mixing them with other batteries or metal objects can cause a fire, burns, or inflammation due to fluid.

Notice

Indicates points that you must observe in order to prevent product failure, damage or malfunction and data loss.

Power supply

If not using the unit for a long period of time, be sure
to pull the power plug from the outlet. Even if this unit
is turned off by [♦](Standby/On), a minute current is
still flowing.

Installation

- Do not use this unit in a location that is exposed to direct sunlight that becomes extremely hot, such as near a heater, or extremely cold, or that is subject to excessive dust or vibration. Failure to observe this may cause the unit's panel to become deformed, the internal components to malfunction, or for operation to become unstable.
- If using a wireless function, avoid installing this unit near metal walls or desks, microwave ovens, or other wireless network devices.
 - Obstructions could shorten the transmission distance.

Connections

- Do not connect this product to public Wi-Fi and/or Internet directly. Only connect this product to the Internet through a router with strong passwordprotections. Consult your router manufacturer for information on security best practices.
- If connecting external units, be sure to thoroughly read the manual for each unit and connect them in accordance with the instructions.

 Failure to properly handles unit in accordance with
 - Failure to properly handle a unit in accordance with the instructions could cause malfunctions.
- Do not connect this unit to industrial units.
 This unit has been designed to connect to a consumer-use unit. Connection to an industrial unit could cause this unit to malfunction.

Handling

- Do not place vinyl, plastic, or rubber products on this unit. Failure to observe this may cause discoloration or deformation in the panel of this unit.
- If the ambient temperature changes drastically (such as during unit transportation or under rapid heating or cooling) and there is a chance condensation may have formed in the unit, leave the unit for several hours without turning on the power until it is completely dry before use. Using the unit while there is condensation can cause malfunctions.

Maintenance

 When cleaning the unit, use a dry, soft cloth. Using chemicals such as benzine or thinner, cleaning agents, or chemical scrubbing cloths can cause discoloration or deformation.

About disposal

 Be sure to discard used batteries in accordance with local regulations.

Information

About content in this manual

- The illustrations and screens in this manual are for instructional purposes only.
- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.
- Software may be revised and updated without prior notice.



Yamaha Global Site https://www.yamaha.com/

Yamaha Downloads

https://download.yamaha.com/

Manual Development Group ©2020 Yamaha Corporation Published 09/2020 AMEM-A0

YAMAHA CORPORATION

VEG7590



IMPORTANT NOTICE FOR AUDIO & VISUAL PRODUCTS: U.S. LIMITED WARRANTY Information for Customers in the United States

For detailed information about the Limited Warranty for this product, please see the warranty terms available at: yamaha.io/audiovisualwarranty.

Customer Service

Yamaha Corporation of America 6600 Orangethorpe Ave., Buena Park, CA 90620 Phone: 800-292-2982



Product Registration

Thank you for purchasing a Yamaha product. To help us provide better services to our customers via the Internet, we encourage you to complete product registration.

http://4wrd.it/MEMBER



Produktregistrierung

Vielen Dank, dass Sie sich für ein Yamaha Produkt entschieden haben.

Damit wir unseren Kunden den bestmöglichen Service auch über das Internet anbieten können, empfehlen wir Ihnen, eine Produktregistrierung abzuschließen.

http://4wrd.it/MEMBER



Enregistrement du Produit

Merci d'avoir acheté un produit Yamaha. Pour nous aider à fournir un meilleur service à nos clients via Internet, nous vous encourageons à compléter l'enregistrement du produit

http://4wrd.it/MEMBER



产品注册

谢您购买雅马哈产品。 您完成产品注册后, 能够得到我们提供的 更完备的在线服务。

http://4wrd.it/MEMBER



Registrazione Prodotto

Grazie per avere comprato un prodotto Yamaha. Al fine di migliorare i nostri servizi online, vi preghiamo completare la registrazione del Suo prodotto.

http://4wrd.it/MEMBER



제품 등록

야마하 제품을 구매해 주셔서 감사합니다. 인터넷을 통해 고객에게 더 나은 서비스를 제공할 수 있도록 제품 등록을 완료하시기 바랍니다.

http://4wrd.it/MEMBER



Регистрация продукта

Благодарим вас за покупку продукта Yamaha. Чтобы помочь нам предоставлять лучшие услуги нашим клиентам через Интернет, мы рекомендуем вам пройти регистрацию продукта.

http://4wrd.it/MEMBER







Worldwide Representative Offices

ZY73900

For details of products, please contact your nearest Yamaha representative or the authorized distributor listed below.

Pour plus de détails sur les produits, contactez votre représentant Yamaha le plus proche de chez vous ou le distributeur agréé indiqué ci-dessous.

NORTH AMERICA

CANADA

Yamaha Canada Music Ltd. 135 Milner Avenue, Tronto, Ontario M1S 3R1, Canada

U.S.A.

Yamaha Corporation of America 6600 Orangethorpe Avenue, Buena Park, CA 90620, USA

CENTRAL & SOUTH AMERICA

MEXICO

Yamaha de México S.A. de C.V. Av. Insurgentes Sur 1647 Piso 9, Col. San José Insurgentes, Delegación Benito Juárez, México, D.F., C.P. 03900. México

BRAZIL

Yamaha Musical do Brasil Ltda.
Praça Professor José Lannes, 40, Cjs 21 e 22,
Brooklin Paulista Novo CEP 04571-100

– São Paulo – SP. Brazil

ARGENTINA

Yamaha Music Latin America, S.A. Sucursal Argentina Olga Cossettini 1553, Piso 4 Norte Madero Este-C1107CEK Buenos Aires, Argentina

PANAMA AND OTHER LATIN AMERICAN COUNTRIES / CARIBBEAN COUNTRIES

Yamaha Music Latin America, S.A. Edificio Torre Davivienda, Piso: 20 Avenida Balboa, Marbella, Corregimiento de Bella Vista, Ciudad de Panamá, Rep. de Panamá

EUROPE

EUROPEAN COUNTRIES

Yamaha Music Europe GmbH Siemensstrasse 22-34, 25462 Rellingen, Germany

RUSSIA

Yamaha Music (Russia) LLC. Room37, entrance 7, bld. 7, Kievskaya street, Moscow, 121059, Russia

AFRICA

Yamaha Music Gulf FZE JAFZA-16, Office 512, P.O.Box 17328, Jabel Ali FZE, Dubai, U.A.E



MIDDLE EAST

TURKEY

Yamaha Music Europe GmbH Merkezi Almanya Türkiye Istanbul Subesi Mor Sumbul Sokak Varyap Meridian Business 1.Blok No:1 113-114-115 Bati Atasehir Istanbul, Turkey

OTHER REGIONS

Yamaha Music Gulf FZE JAFZA-16, Office 512, P.O.Box 17328, Jabel Ali FZE, Dubai, U.A.E

ASIA

THE PEOPLE'S REPUBLIC OF CHINA Yamaha Music & Electronics (China) Co., Ltd. 2F, Yunhedasha, 1818 Xinzha-lu, Jingan-qu, Shanghai, China

INDIA

Yamaha Music India Private Limited P-401, JMD Megapolis, Sector-48, Sohna Road, Gurgaon-122018, Haryana, India

INDONESIA

PT. Yamaha Musik Indonesia (Distributor) PT. Nusantik

Yamaha Music Center Bldg., Jalan Jend. Gatot Subroto Kav. 4. Jakarta 12930. Indonesia

REPUBLIC OF KOREA

Yamaha Music Korea Ltd. 11F, Prudential Tower, 298, Gangnam-daero, Gangnam-gu, Seoul, 06253, Korea

MALAYSIA

Yamaha Music (Malaysia) Sdn., Bhd. No.8, Jalan Perbandaran, 47301 Kelana Jaya, Petaling Jaya, Selangor, Malaysia

SINGAPORE

Yamaha Music (Asia) PRIVATE LIMITED Block 202 Hougang Street 21, #02-00, Singapore 530202, Singapore

TAIWAN

Yamaha Music & Electronics Taiwan Co., Ltd. 2F., No.1, Yuandong Rd. Banqiao Dist. New Taipei City 22063 Taiwan (R.O.C.)

THAILAND

Siam Music Yamaha Co., Ltd. 3, 4, 15, 16th Fl., Siam Motors Bldg., 891/1 Rama 1 Road, Wangmai, Pathumwan, Bangkok 10330, Thailand

VIETNAM

Yamaha Music Vietnam Company Limited 15th Floor, Nam A Bank Tower 201-203 Cach Mang Thang Tam St., Ward 4, Dist.3, Ho Chi Minh City, Vietnam

OTHER REGIONS

Yamaha Corporation Nakazawa-cho 10-1, Naka-ku, Hamamatsu, Japan 430-8650

OCEANIA

AUSTRALIA / NEW ZEALAND Yamaha Music Australia Pty. Ltd. Level 1, 80 Market Street, South Melbourne, VIC 3205 Australia

Say hello to Spotify Premium

Spotify Premium lets you listen to millions of songs ad-free – the artists you love, the latest hits and discoveries just for you. Simply hit play to hear any song you like, at the highest sound quality.

Check out our current Premium offers at spotify.com/premium

Your new device has Spotify Connect built in.

Spotify Connect lets you control the music playing on your device, using the Spotify app on your mobile, tablet or PC.

Listening is seamless. You can take calls, play games, even switch your phone off – all without interrupting the music.

Learn more at spotify.com/connect

How to use Connect

You'll need Spotify Premium to use Connect, see details above.

- Add your new device to the same wifi network as your phone, tablet or PC (see product user instructions for details).
- Open the Spotify app on your phone, tablet or PC, and play any song.
- If you're using the app on a phone tap the song image in the bottom left of the screen. For tablet and PC move to step 4.
- 4 Tap the Connect icon
- 5 Pick your device from the list. If you can't see it, just check it's connected to the same wifi network as your phone, tablet or PC.

All done! Happy listening.

