



NS-AP9500M/NS-AP9600E

HOME CINEMA SPEAKER PACKAGE

CONTENTS

CONSUMER PRECAUTIONS	2
UNPACKING	3
SETTING UP THE SPEAKERS	4
CONNECTIONS TO THE RECEIVER	7
SPEAKER PLACEMENT	8
REMOVING THE FRONT GRILL	8
SPECIFICATIONS	9

CONSUMER PRECAUTIONS

 
Read these precautions carefully before setting up your NS-AP9500M/9600E speakers.

- Since these speakers can be wall mounted, it is essential that they are firmly secured. Be sure to consult a reliable source about the best type of hanger for your particular wall's construction. Secure installation is the purchaser's responsibility.
- Do not attach them to thin plywood or soft wall surface materials as the screws may tear free, causing the speakers to fall and be damaged, or result in personal injury.
- Do not fasten the speakers to walls with nails, adhesives, or other unsafe hardware. Long-term use and vibrations may cause them to pull free.
- Do not place the speakers where they are liable to be knocked over or struck by falling objects. Stable placement will also ensure better sound performance.
- Placing the speakers on the same stand or shelf as a turntable can result in feedback.
- This speaker features a magnetically shielded design, but there is still a chance that placing it too close to a TV set might impair picture color. Should this happen, move the speaker away from the TV set.
- Never touch the woofer or tweeter units with your hands or expose them to excessive physical shock. If they are dented or bent, the sound will be distorted.
- Lower the power amplifier / receiver volume control before changing input sources. Never change input sources (for example, FM to CD) at high listening levels. Always turn the receiver / amplifier unit off when installing or removing input cables.
- Anytime you note distortion, reduce the volume control on your power amplifier / receiver to a lower setting. Never allow your power amplifier to be driven into "clipping".
- Do not attempt to clean the speakers with chemical solvents as this might damage the finish. To clean wipe with a dry, soft cloth.
- To prevent the enclosure from warping or discoloring, do not place the speakers where they will be exposed to direct sunlight or excessive humidity.
- To prevent the speakers from falling over, select a location which is flat and stable.
- To avoid accidents resulting from tripping over loose speaker cables and to prevent the speakers from falling, fix the speaker cables to the wall, etc.
- Secure placement or installation is the owner's responsibility.
YAMAHA shall not be liable for any accident caused by improper placement or installation of speakers.

UNPACKING


After unpacking, check that the following items are contained.

Front speakers x 2

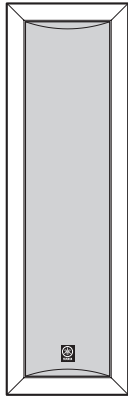


(NS-AP9500S)

 Center speaker x 1

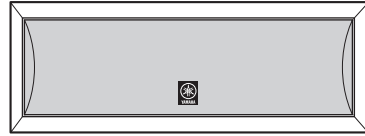


(NS-AP9600C)

 Surround speakers x 2

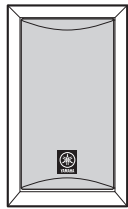


(NS-AP9600S)

 
Fasteners for the center speaker x 2



Non-skid pads for Surround speakers x 2

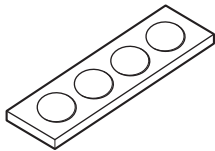 


Speaker cable x 1

 

SETTING UP THE SPEAKERS


• Stand mounting the front speakers

 You can use the supplied speaker stands SPS-9500T for table top installation. For assembly instructions, please refer to the SPS-9500T owner's manual which can be found in the SPS-9500T box.



• Wall mounting the front speakers

 The front speakers may also be hung on a wall, utilizing the key holes on the rear of the speakers.

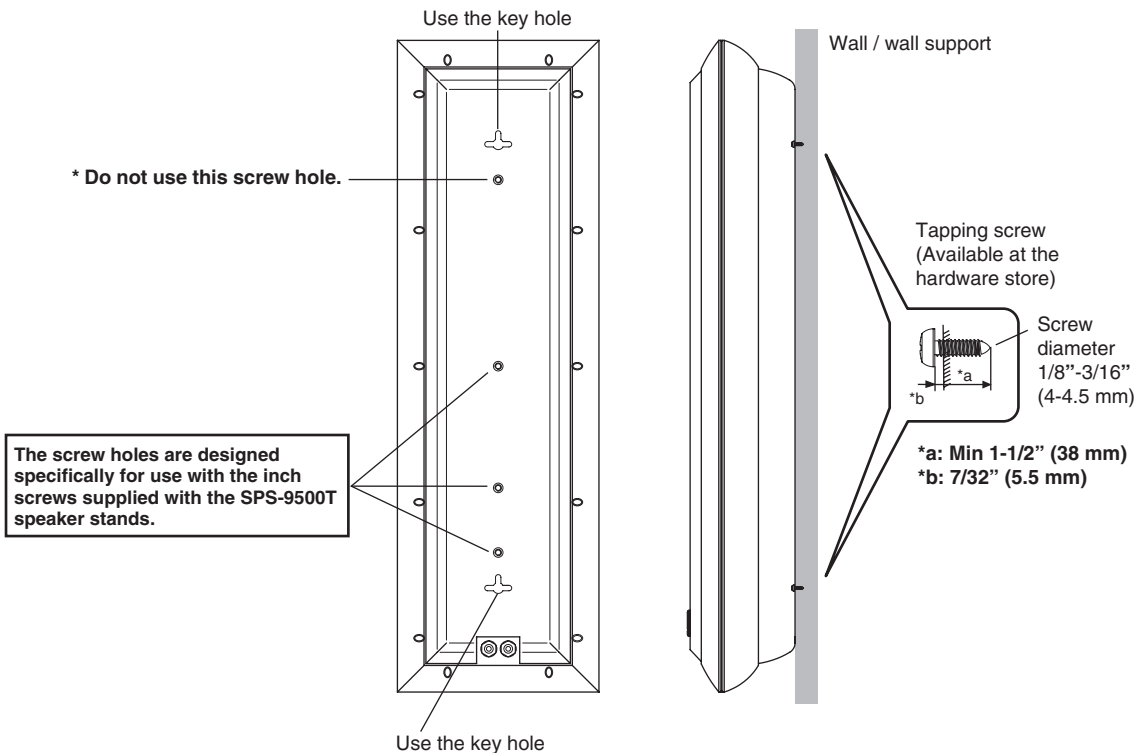

Fasten screws into a firm wall or wall support as shown in the figure, and hang the holes of the rear of the speaker on the protruding screws.

 
Make sure that the screws are securely caught by the narrow sections of the "key hole" opening.

WARNING


- The front speakers weigh 7.92 lbs (3.6 kg) each. Do not mount them on thin plywood or a wall with soft surface material. If mounted, the screws may come out of the flimsy surface and the speakers may fall. This will damage the speakers and can cause personal injury.
- Do not fasten the speaker to a wall with nails, adhesives, or any other unstable hardware. Long-term use and vibrations may cause them to fall.
- To avoid accidents resulting from tripping over loose speaker cords, they should be affixed to the wall or floor molding.
- Secure installation is the purchaser's responsibility.

• Attaching the non-skid pads to the surround speakers

Place the satellite speakers on a sturdy, vibration-free surface, such as a well-built stand. Attach the included non-skid pads to the bottom of the surround speakers to prevent the speakers from slipping.

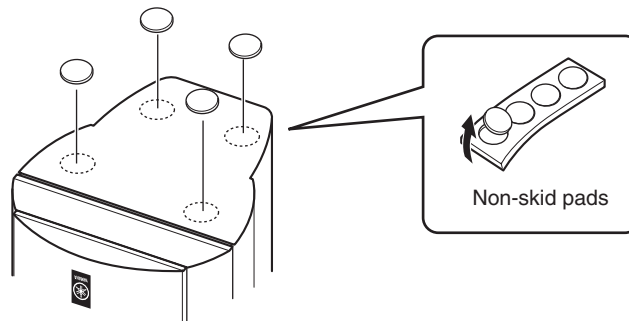

• Wall mounting the surround speakers

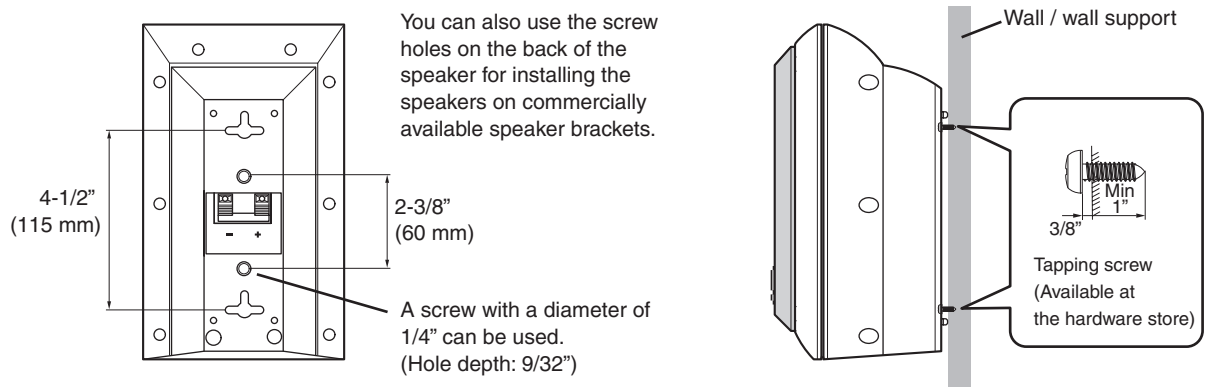 

When using speaker brackets to mount the speakers on a wall or ceiling, it is strongly recommended that safety wire, which may be included with the bracket, be used between the speaker and the bracket to prevent the speaker from falling.

Fasten screws into a firm wall or wall support as shown in the figure, and hang the holes of the mounting bracket on the protruding screws.

Make sure that the screws are securely caught by the narrow sections of the "key hole" opening.

 
WARNING

- The surround speakers weigh 1.8 lbs. (0.8 kg.) each. Do not mount the speakers on thin plywood or a wall with soft surface material, since the screws may pull away from the surface and fall. This will damage the speakers and can cause personal injury.
- Do not mount the speakers on a wall with nails, adhesives, or any other unstable hardware. Long-term use and vibrations may cause them to fall.
- To avoid accidents resulting from tripping over loose speaker cords, they should be affixed to the wall or floor molding.
- Secure installation is the purchaser's responsibility.

• Positioning the center speaker

Place the center speaker on top of the TV, on the floor in front of the TV, or inside the TV rack so that it is stable.


When placing the speaker on top of the TV, put the provided fasteners at four points on both the bottom of the speaker and on top of the TV to prevent the speaker from falling.

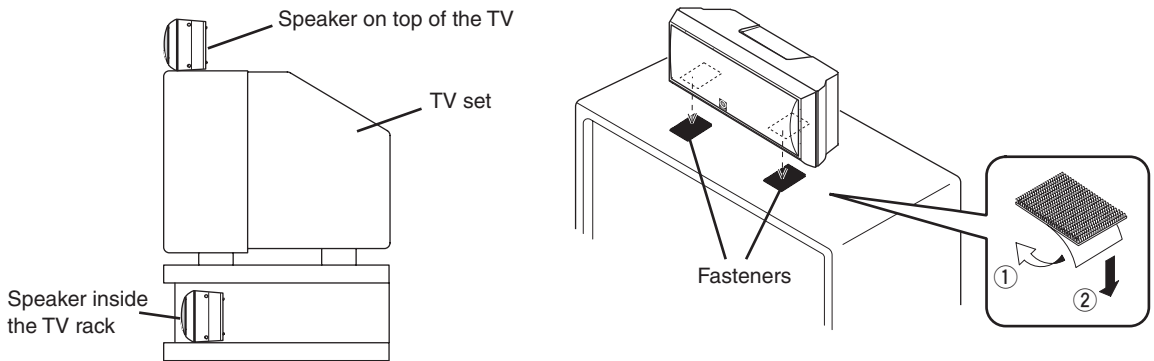

Notes


- Do not place the speaker on top of the TV if the area is smaller than the bottom area of the speaker. The speaker may fall and might cause personal injury.
- Though this speaker is magnetically shielded, there may be some influence on a TV picture depending on the type of TV or the placement of the speaker. In such a case, place the speaker apart from the TV so that there is no influence on the TV picture.

 • Wall mounting the center speaker

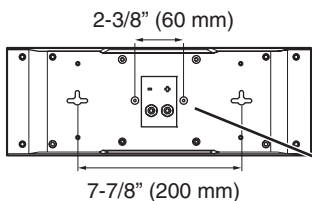

You can also use the screw holes on the back of the speaker for installing the speakers on commercially available speaker brackets.

 A screw with a diameter of 1/4" can be used (Hole depth: 9/32")

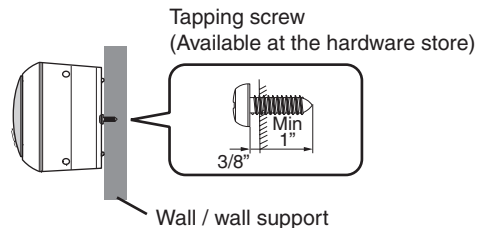

When using speaker brackets to mount the speakers on a wall or ceiling, it is strongly recommended that safety wire, which may be included with the bracket, be used between the speaker and the bracket to prevent the speaker from falling.

Fasten screws into a firm wall or wall support as shown in the figure, and hang the holes of the mounting bracket on the protruding screws.

Make sure that the screws are securely caught by the narrow sections of the "key hole" opening.

WARNING

- The center speaker weighs 3.5 lbs (1.6 kg). Do not mount the speaker on thin plywood or a wall with soft surface material, since the screws may pull away from the surface and fall. This will damage the speaker and can cause personal injury.
- Do not install the speaker to a wall with nails, adhesives, or any other unstable hardware. Long-term use and vibrations may cause them to fall.
- To avoid accidents resulting from tripping over loose speaker cords, they should be affixed to the wall or floor molding.
- Secure installation is the purchaser's responsibility.

CONNECTIONS TO THE RECEIVER

CONNECTIONS

- Check to make sure that the receiver has been turned off before making any speaker connections.
- Connect the (+) terminal of the receiver to the (+) terminal of the speaker.
Connect the (-) terminal of the receiver to the (-) terminal of the speaker.
- Reversing polarity (+/-) will result in unnatural sound reproduction.

 
PROCEDURE

For connections, keep the speaker cords as short as possible. Do not bundle or roll up the excess part of the cords. If the connections are faulty, no sound will be heard from the speakers. Make sure that the + and - polarity markings of the speaker cords are observed and set correctly. If these cords are reversed, the sound will be unnatural and lack bass.

How to Connect:


• Front and Center speakers

- ① Loosen the knob.
- ② Insert the bare wire. **Remove the insulation coating at the extremity of each speaker cable by twisting the coating off.**
- ③ Tighten the knob and secure the cable. Test the firmness of the connection by pulling lightly on the cable at the terminal.

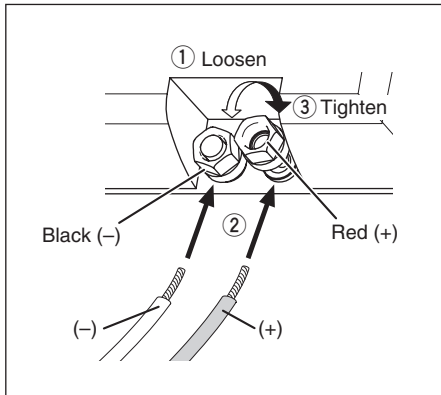


• When using a banana plug

 - ① Remove the cover by pulling it toward you.
- ② Tighten the terminal knob.
- ③ Insert the banana plug into the terminal.

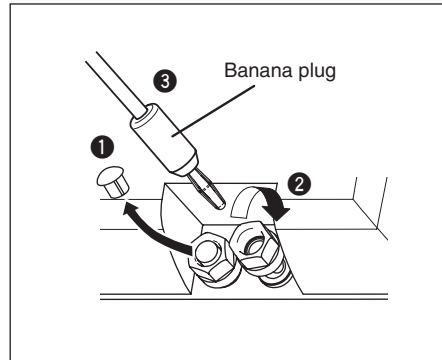

• Surround speakers

 - ① Press and hold the terminal's tab.
- ② Insert the bare wire into the terminal hole. **Remove the insulation coating at the extremity of each speaker cable by twisting the coating off.**
- ③ Release your finger from the tab to allow it to lock securely on the bare wire end.
- ④ Test the firmness of the connection by pulling lightly on the cord at the terminal.

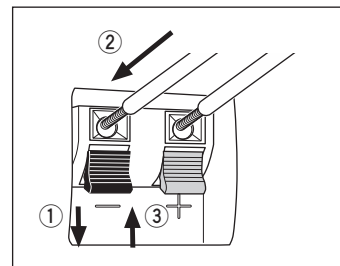


Note

- Do not let the bare speaker wires touch each other as this could damage the speaker, the amplifier, or both.


SPEAKER PLACEMENT

This speaker system consists of front, center and surround speakers.

 - **Front speaker** placement should be separated by a distance of 6–10ft. If they are placed too close together, there will be a reduction in the stereo effect. Conversely, if placed too far apart, the so called “middle-omission” effect will occur and the vocal center fill will be lost. Height of the speaker should be at least at ear level.
- **Center channel speaker** should be placed centered above or below the TV.
- **Surround speakers** should ideally be placed behind the listening area, at least as far apart as the front speakers and up to 2 additional feet apart per side. The height of the speaker should be at a minimum of ear level or preferably somewhat higher.

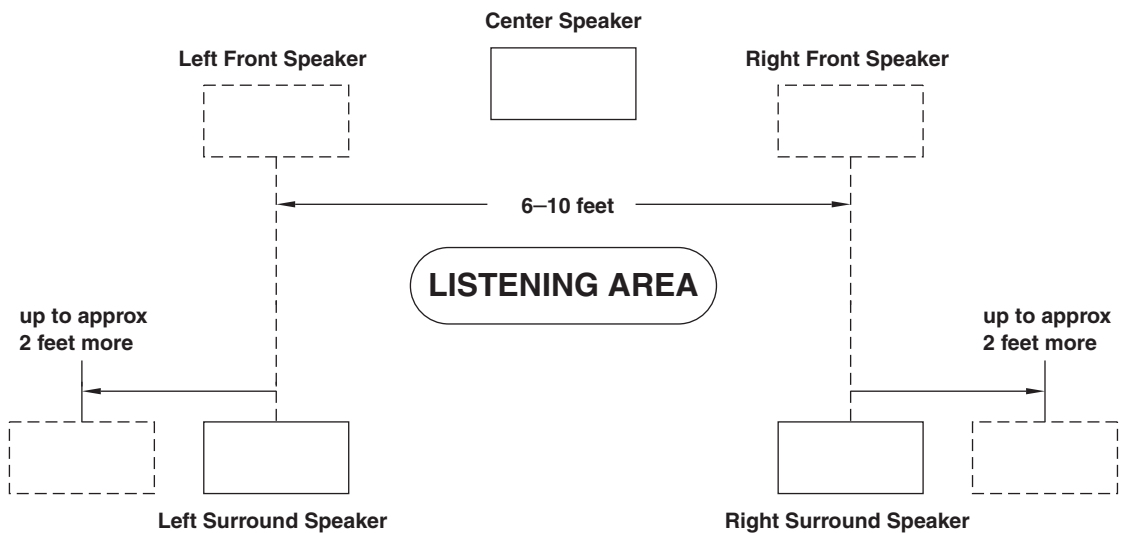


REMOVING THE FRONT GRILL

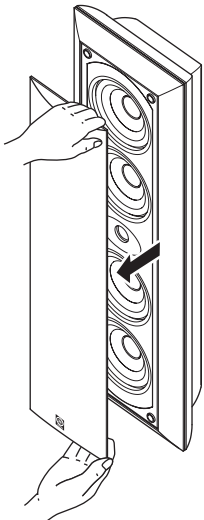 


NS-AP9500S

 The speakers have protective grills which can be removed if necessary. To remove the NS-AP9500S front speaker grill, hold on both sides of the grill and slowly pull straight away from the speaker. To remove the NS-AP9600C center and NS-AP9600S surround speaker grill, hold the speaker with one hand, and pull the grill gently with the other.

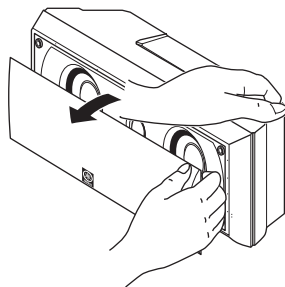

NS-AP9600C

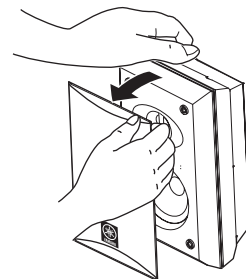 

NS-AP9600S

SPECIFICATIONS

Type	Acoustic suspension
Speaker	
Front	Quad 4" High Compliance Pulp cone and Rubber Surround + 3/4" soft dome tweeter
Center	3" woofer x 2 + 3/4" soft dome tweeter
Surround	3" woofer x 1+ 1/2" balanced dome tweeter
Frequency Range	
Front	100 Hz - 40,000 Hz
Center	110 Hz - 40,000 Hz
Surround	110 Hz - 40,000 Hz
Impedance	6 ohms
Nominal Input	
Front	35 W
Center	30 W
Surround	30 W
Maximum Input	
Front	120 W
Center	100 W
Surround	100 W
Sensitivity (dB/2.83v. 1m)	
Front	83 dB
Center	82 dB
Surround	82 dB
Crossover Frequency	
Front	600 Hz, 6,000 Hz
Center	5,000 Hz
Surround	5,000 Hz
Dimension (H x W x D)	
Front	7-3/8" x 23-27/32" x 3-15/16" (187 x 605 x 99 mm)
Center	4-3/8" x 14-5/8" x 4-3/8" (110 x 370 x 110 mm)
Surround	8-1/2" x 5-1/8" x 4-3/8" (215 x 130 x 110 mm)
Weight	
Front	7.9 lbs (3.6 kg)
Center	3.5 lbs (1.6 kg)
Surround	1.8 lbs (0.8 kg)
Magnetic Shielding	Yes



YAMAHA ELECTRONICS CORPORATION, USA
6660 ORANGETHORPE AVE.,
BUENA PARK, CA 90620
<http://www.yamaha.com/yec>
Phone: 1-800-492-6242